

Camouflage Shed

Ideal for all purpose outdoor storage

10' x 10' x 8' (3 x 3 x 2.4 m)

ASSEMBLY MANUAL

Model NO.: 037-0020-6



CAUTION!

Please read and understand this manual before any assembly or use of this product. Before beginning assembly of the product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the vendor's customer service department at:

1-866-567-4089

(Monday-Friday 7:00am-9:00pm EST)
(Saturday 9:00am - 5:00pm EST)

DO NOT RETURN TO STORE!

TABLE OF CONTENTS

Important safety instructions	2
Intended use	2
Parts list	3
Assembly preparation	4
Assembly	4 - 7
Maintenance and care	8
Limited warranty	8

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

- To reduce the risk of serious injury, read the following safety instructions before assembling and using the product.
- No responsibility is accepted for damages or injuries resulting from improper installation or noncompliance with these instructions.
- Please note that the Manufacturer has no control over the elements such as wind, heavy snow or rain. The Manufacturer cannot control the location or soil conditions into which the shed is placed. The Manufacturer, without control of the elements, location or soil conditions, cannot be held responsible for damages caused by the shed to other items or damages to the shed itself.
- This product is a temporary structure and is not recommended as a permanent structure.
- Choose your shed's location carefully. Install your shed on flat horizontal ground only.
- Ensure enough clearance around the product. Before assembling the product, find level ground not less than 6'(1.8 m) away from any structures or obstructions, such as fences, garages, houses, etc.
- Check for overhead utility lines, branches, laundry lines, etc. Do not install near roofs or other structures that may shed snow, ice or excessive run-off onto your shed. **Keep away from electrical wires!**
- Check municipal by-laws before setting up the product.
- Get an overview of all parts before attempting installation. Make sure all components are present.
- Do not use this product in environments for which it is not intended (i.e. extreme cold, high winds, extreme heat, heavy rainfall, etc.).
- Always wear safety glasses when assembling this product. Wear gloves when working with tubing to prevent cuts or abrasions.
- Any assembly or maintenance on the product must be carried out by adults only.
- Make sure you have the necessary manpower when assembling or moving the product.
- Keep children and pets away while setting up the product.
- **CAUTION!** Always keep children under close supervision while they are using this product or are in its vicinity. Never leave children unattended.
- **CAUTION!** Anchors must be used with all sheds. Covers should not be installed on any product until it has been properly anchored to the ground.
- Proper anchoring, keeping the cover tight and free of snow and debris is the responsibility of the consumer. Damages caused by improper anchoring are not included in the warranty.
- **WARNING!** Keep all flames and heat sources away from this fabric shed. The fabric will burn if left in continuous contact with a flame source.
- Do not use product with open flames and heated elements inside or near the product, including all types of stoves, gas heaters, gas lanterns, citronella torches, mosquito coils, etc.
- **WARNING!** In order to reduce risk of burning and avoid damage, DO NOT
 - cook, smoke, refuel or use any open flame devices in or around the shed.
 - store flammable liquids (gasoline, kerosene, propane, etc.) in the shed.
 - operate gas-powered vehicles/equipment in or around the shed.
- Keep open flames a safe distance away from the shed.
- Do not use hard-edged tools or instruments, such as rakes or shovels, to remove snow. These may puncture the cover.
- NEVER start the engine of any vehicle or machine inside a closed shed. Ensure good ventilation when starting engines and when doing any work with paints, cleaning agents, etc.
- This shed is NOT meant to hold heavy snow or ice loads. Snow or ice accumulation may cause your shed to collapse. To avoid overload, brush snow and ice from the roof with a broom or mop.
- NEVER clear the roof of snow or debris from inside the shed to avoid collapse, damage to property, personal injury and/or death.
- Remove accumulated water from the roof immediately or disassemble the shed in order to avoid any damage.
- Do not use alkaline detergents for cleaning. It will damage the polycarbonate material. Soap and warm water are recommended.



WARNING!

- To reduce the risk of serious injury, read the following safety instructions before assembling and using the product.
- No responsibility is accepted for damages or injuries resulting from improper installation or noncompliance with these instructions.
- Please note that the Manufacturer has no control over the elements such as wind, heavy snow or rain. The Manufacturer cannot control the location or soil conditions into which the shed is placed. The Manufacturer, without control of the elements, location or soil conditions, cannot be held responsible for damages caused by the shed to other items or damages to the shed itself.

- This product is a temporary structure and is not recommended as a permanent structure.

- Choose your shed's location carefully. Install your shed on flat horizontal ground only.

- Ensure enough clearance around the product. Before assembling the product, find level ground not less than 6'(1.8 m) away from any structures or obstructions, such as fences, garages, houses, etc.

- Check for overhead utility lines, branches, laundry lines, etc. Do not install near roofs or other structures that may shed snow, ice or excessive run-off onto your shed. **Keep away from electrical wires!**

- Check municipal by-laws before setting up the product.

- Get an overview of all parts before attempting installation. Make sure all components are present.

- Do not use this product in environments for which it is not intended (i.e. extreme cold, high winds, extreme heat, heavy rainfall, etc.).

- Always wear safety glasses when assembling this product. Wear gloves when working with tubing to prevent cuts or abrasions.

- Any assembly or maintenance on the product must be carried out by adults only.

- Make sure you have the necessary manpower when assembling or moving the product.

- Keep children and pets away while setting up the product.

- **CAUTION!** Always keep children under close supervision while they are using this product or are in its vicinity. Never leave children unattended.

- **CAUTION!** Anchors must be used with all sheds. Covers should not be installed on any product until it has been properly anchored to the ground.

- Proper anchoring, keeping the cover tight and free of snow and debris is the responsibility of the consumer. Damages caused by improper anchoring are not included in the warranty.

- **WARNING!** Keep all flames and heat sources away from this fabric shed. The fabric will burn if left in continuous contact with a flame source.

- Do not use product with open flames and heated elements inside or near the product, including all types of stoves, gas heaters, gas lanterns, citronella torches, mosquito coils, etc.

- **WARNING!** In order to reduce risk of burning and avoid damage, DO NOT
 - cook, smoke, refuel or use any open flame devices in or around the shed.
 - store flammable liquids (gasoline, kerosene, propane, etc.) in the shed.
 - operate gas-powered vehicles/equipment in or around the shed.

- Keep open flames a safe distance away from the shed.

- Do not use hard-edged tools or instruments, such as rakes or shovels, to remove snow. These may puncture the cover.

- NEVER start the engine of any vehicle or machine inside a closed shed. Ensure good ventilation when starting engines and when doing any work with paints, cleaning agents, etc.

- This shed is NOT meant to hold heavy snow or ice loads. Snow or ice accumulation may cause your shed to collapse. To avoid overload, brush snow and ice from the roof with a broom or mop.

- NEVER clear the roof of snow or debris from inside the shed to avoid collapse, damage to property, personal injury and/or death.

- Remove accumulated water from the roof immediately or disassemble the shed in order to avoid any damage.

- Do not use alkaline detergents for cleaning. It will damage the polycarbonate material. Soap and warm water are recommended.



IMPORTANT! READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

INTENDED USE

This temporary shed is intended to offer protection from damages caused by the sun, light rain, light snow, tree sap, bird and animal excrements. Do not use it to shield goods from high winds, heavy snow or ice storms. Only use it for its intended use.

PARTS LIST

No	Description	Illustration	Qty
1	Top Roof Tube		3
2	Rafter Roof Tube		6
3	Corner Bent Leg		4
4	Center Leg Tube (top part)		2
5	Corner Leg Tube		4
6	Center Leg Tube (bottom part)		2
7	Bottom Cross Rail Tube (with male end)		4
8	Bottom Cross Rail Tube		4
9	Top Cross Rail Tube One (with male end)		6
10	Top Cross Rail Tube Two (with male end)		3
11	Top Cross Rail Tube		3
12	Tube Connector		9
13	4-Way Cross Rail Clamp		4
14	3-Way Cross Rail Clamp		8
15	M6x40 Bolt		14
16	M6x80 Bolt		9
17	M6 Nut		23
18	M6 Washer		23
19	Anchor		4
20	Camo Roof		1
21	Front Door Panel (with zipper)		1
22	Back Panel		1
23	Clamp Hook		4
24	Cable (1' / 30 cm)		4
25	Cable Clamp		4
26	Ratchet Tie Down		4

ASSEMBLY PREPARATION


- Place all parts from the packaging box in a cleared area and arrange them on the ground in front of you.
- Place all packaging materials back in the box and remove the box. Do not dispose of the packaging materials until assembly is complete.
- Check for completeness and transport damages. If any damages or incomplete delivery occur, please call our toll-free number 1-866-567-4089 for assistance.

WARNING!

- Do not place the product under trees from which hard fruit such as apples, walnuts or heavy pine cones, etc., may fall. The shed's cover only protects against normal leaves and light debris, whereas large branches or other falling items may puncture or tear the cover material.
- Keep children away during assembly. This product contains small parts which can be swallowed by children.
- Do not attempt to assemble the product if any parts are missing.
- At least 2 people are needed to complete the assembly as some of the steps require heavy lifting.



Tools required for assembly (not included)

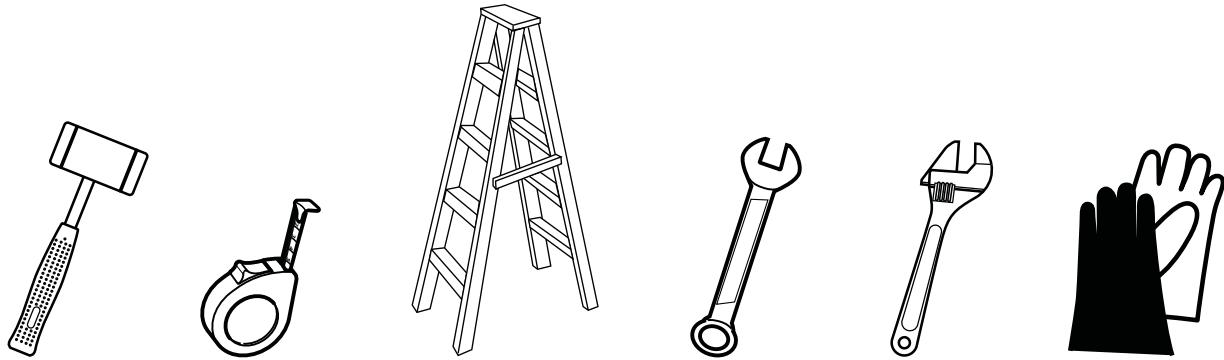


ASSEMBLY



WARNING!

- Do not leave the shed unattended during assembly. Otherwise, personal injury or damage to the shed may occur!


Frame assembly overview

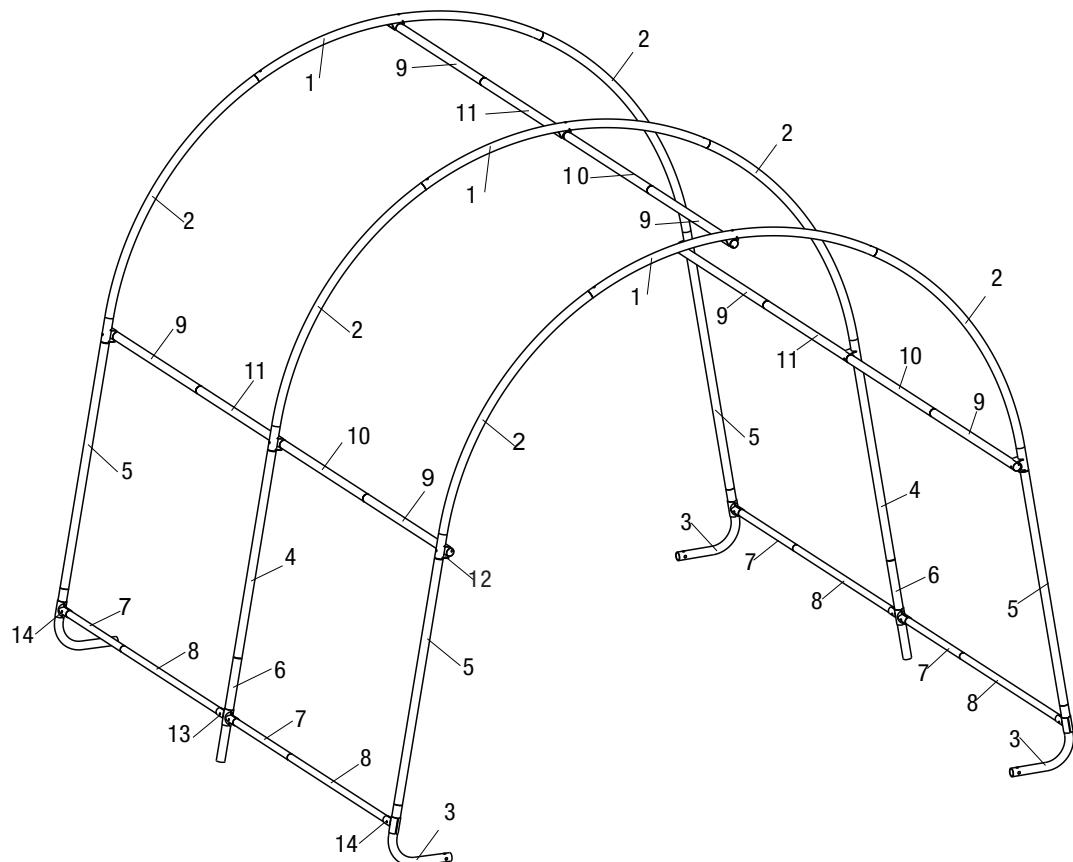


ASSEMBLY

Step 1: Assembly the two end ribs

- Connect the 7 tubes together (1pc tube #1, 2pcs tube #2, 2pcs tube #5 and 2pcs bent legs #3) to form 1 End Rib (fig.1).
Repeat to get the other End Rib.

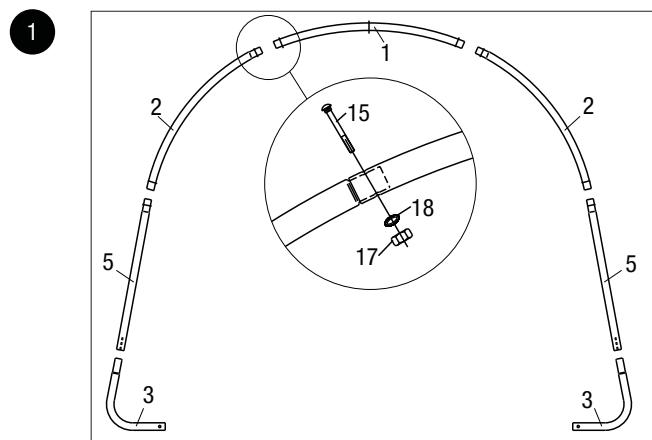


- Assemble the center rib.
Connect the 7 tubes together (1pc tube #1, 2pcs tube #2, 2pcs tube #5 and 2pcs tube #6) to form 1 center rib (fig.2).

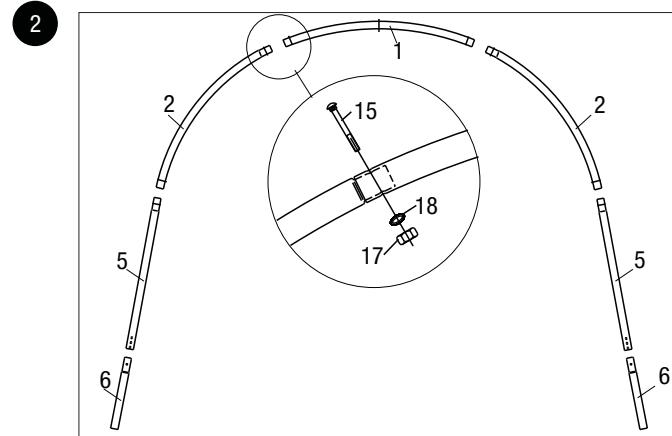


- Connect tube #1 and #2 by fittings #15, #17, #18.

Step 2: Attach the cross rails


- First insert the male end of tube #9 into tube #10, the male end of tube #11 into the other end of tube #10 (fig.3).

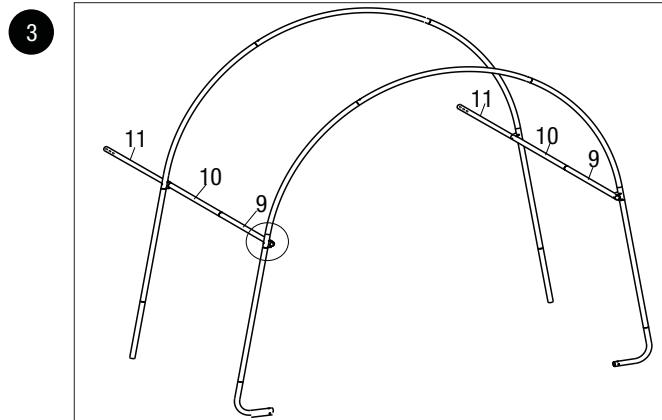


- Connect the other end of tube #9 to one end rib with tube connector #12 by fittings #16, #17 & #18. Connect tube #10 & #11 to center rib as before (fig.4).

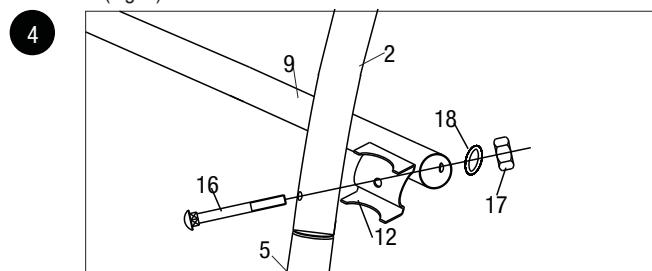

- Repeat to assemble the other side cross rail.
- Insert the male end of tube #9 into tube #11. Connect the other end of tube #9 to the other end rib with tube connector #12 by fittings #16, #17 & #18. Repeat to assemble the other side cross rail (fig.5).

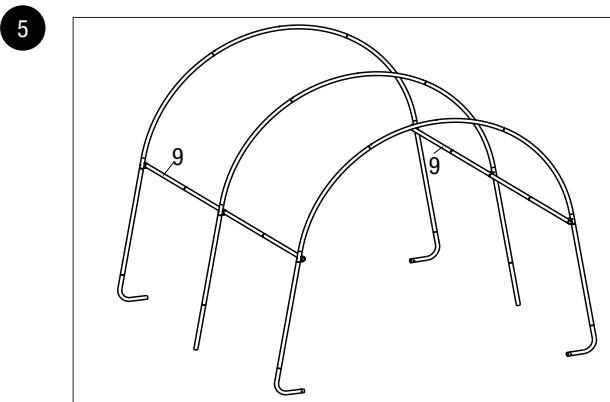

- Repeat the same procedure to assemble the top cross rail (fig.6).

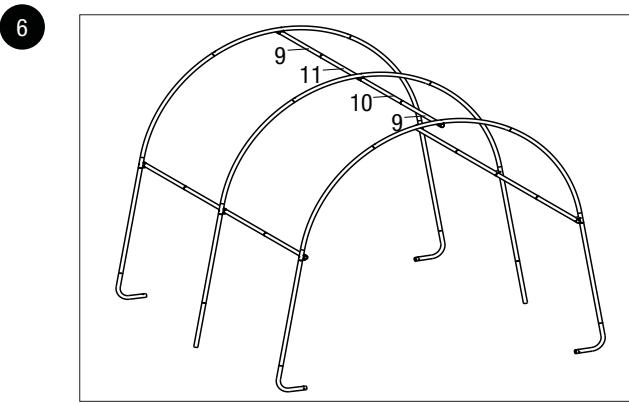


NOTE:

- Do not let the roof rest on the legs until all three legs on one side are completely installed and in place.

Step 3: Attaching bottom cross rails

- Connect tube #7 and tube #8 together.
- Attach the bottom cross rails #7, #8 to the legs and cover the joints with the cross rail clamps #13, #14. Align all holes and insert the fittings #15, #18, #17 (fig. 7). Do not tighten fully at this stage.

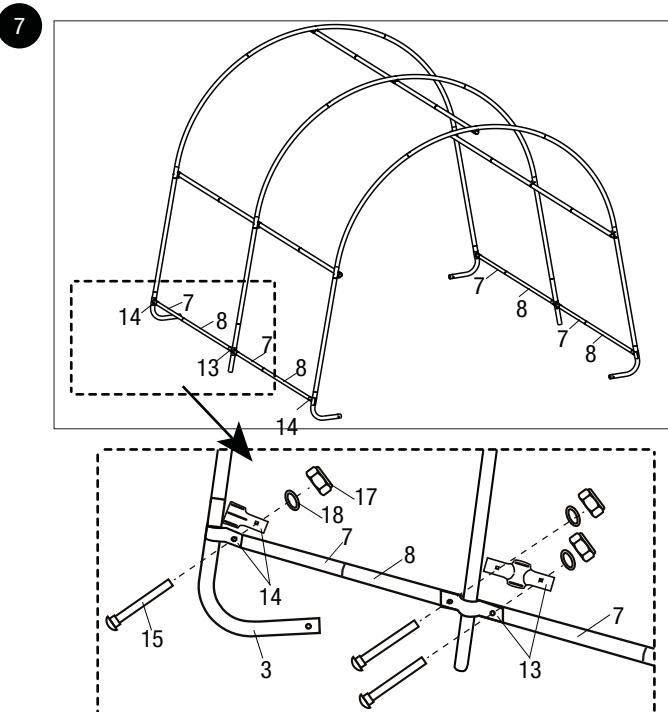


- Repeat the same procedure on the opposite side.
- Adjust the bottom cross rails #7, #8 so that they are of same height from the ground. Do not tighten fully now.

Step 4: Square up frame

- Be sure the frame is standing at the desired location.
- Level the frame both end-to-end and side-to-side.
- Check and make sure the frame measures 10'(305 cm) in width (fig. 8).
- Check and make sure the sections A to B and C to D be of equal distance (fig.8). If they are not of equal length, tap the corner leg of the longer section (using a rubber mallet) inward until both diagonals are equal.


8

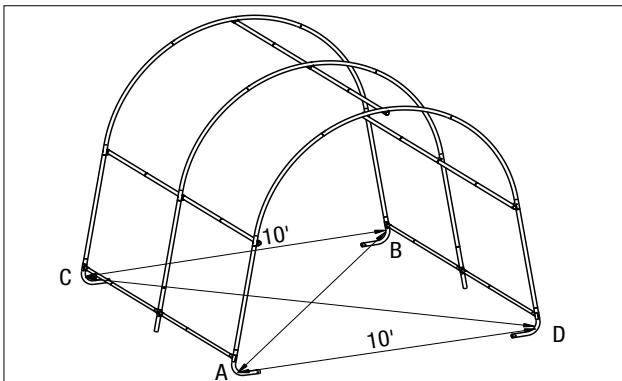**Step 5: Anchor the frame****CAUTION!**

- The shed must be well-anchored.
- Do not attempt to install any of the fabric before the frame is properly anchored.
- If the ground is hard or rocky, pre-drill holes before inserting the anchors.


- Four anchors #19 are provided to secure the shed. They are to be installed around the 4 bent corner legs #3.
- Screw the anchor head into the ground.
- Attach the anchor #19 and the bent corner leg #3 with the cable #24 through the eyelets of them. Secure the cable by the cable clamp #25 (fig.9).
- Repeat the same procedure for the other three anchors #19.

9

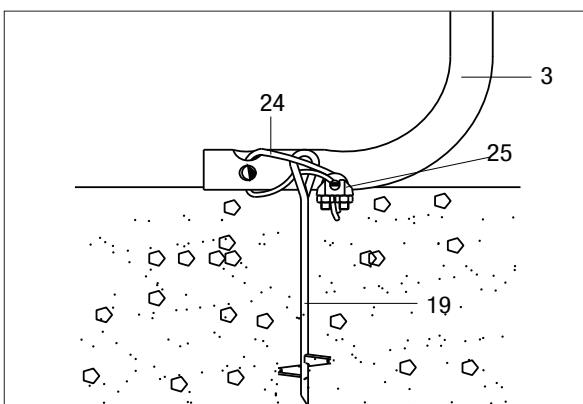**Step 6: Install front door and back panels**


- Install the front door panel #21 first. During installation, ensure the zipper of the front door panel #21 is closed (fig. 10).

10

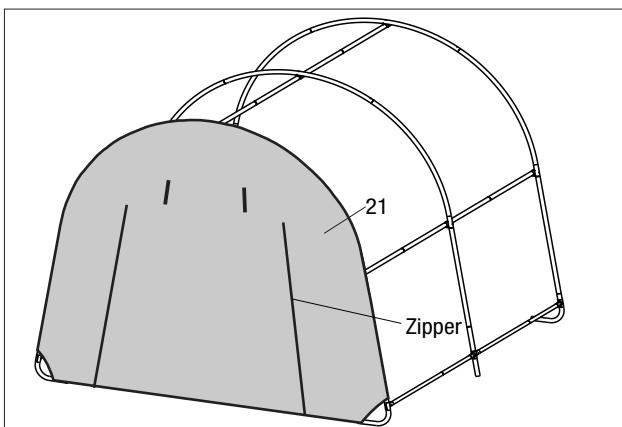


- To make sure the strap will stay in the sleeve when assembly, thread the strap through the spindle of the clamp hook #23. Caution! Thread the straps following the direction of arrow as shown in the diagram. (fig.11).

11

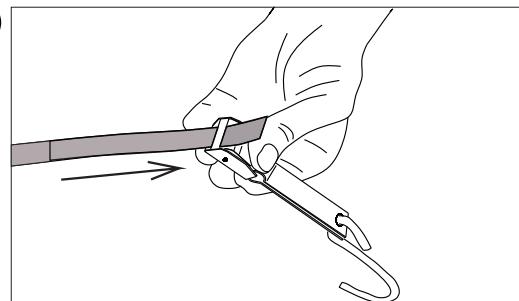


- Locate the top corner of front door panel near the cross rail tube #9. Wrap the outer sleeves around the end rib (fig.12).

12

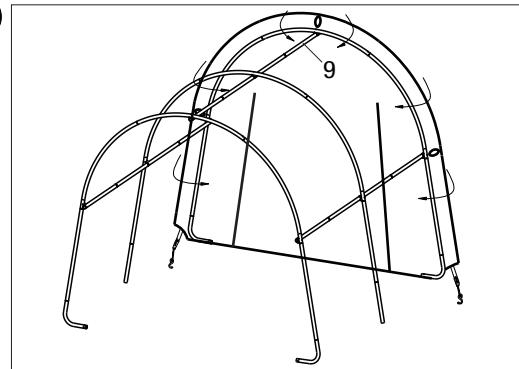


- Unlock the buckle on the strap, slip the webbed belt around the cross rail and relock the buckle again (fig.13).

13

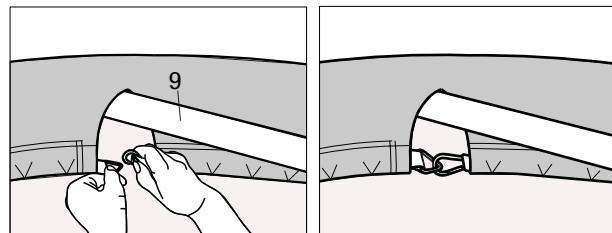


- Repeat this step for the side cross rails (fig.14).

14

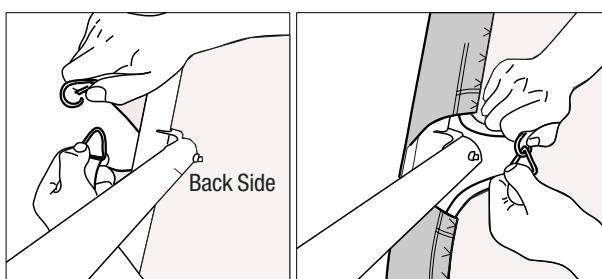

- Insert the S-hook of the clamp hook into the hole of the bent corner leg #3. Pull the strap to tighten the ratchet (fig.15)

15

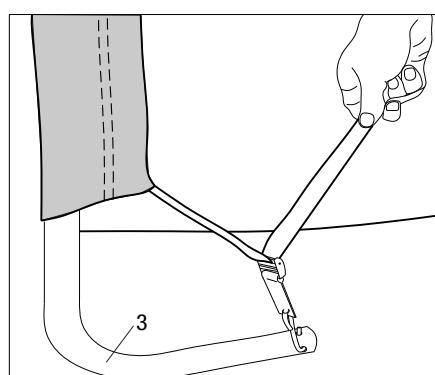


ASSEMBLY

- Repeat the same procedure to install the back panel #22 to its proper position.

Step 7: Install roof cover


- Thread the strap through the spindle of the ratchet, raise and lower the handle two or three times to wind the strap onto the spindle (fig. 16).

16

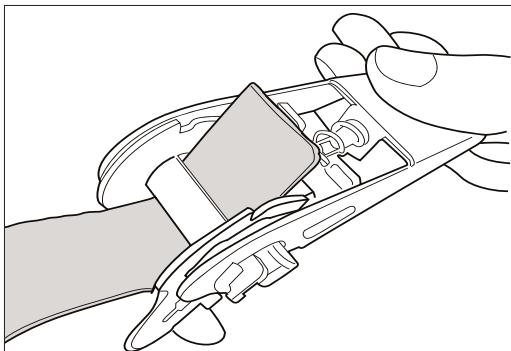


- There are pipe sleeves along the lower part of each side inside the camo roof #20.
- Lay the camo roof #20 on the ground next to the shed frame. Make sure that the ends with the black straps are alongside the front door/back panels #21,#22 and the tube sleeves are facing upward (fig. 17).

17

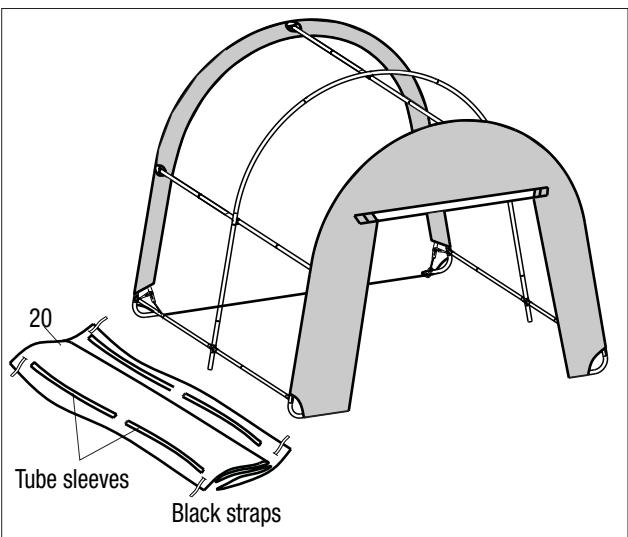

- Stretch the camo roof #20 over the shed frame and make sure it is centered on the frame (fig. 18). Use a ladder if necessary.

18

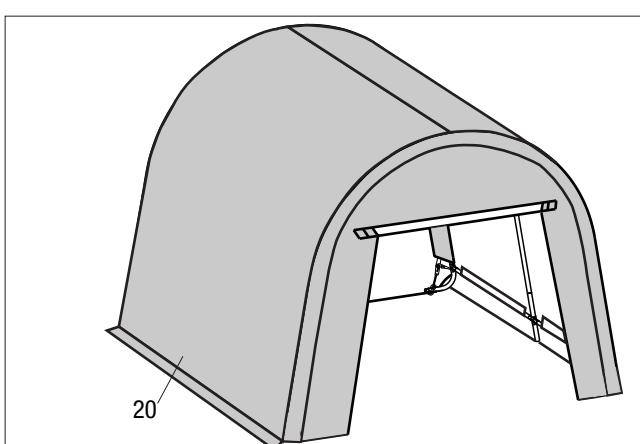


Caution!

- If small adjustments are needed, two people should pull the camo roof #20 from the same side so that it does not twist.


- Loosen the bottom cross rails #7,#8 from the frame. Slide the cross bottom rails #7,#8 through the tube sleeves on one side of the camo roof #20. Re-assemble the clamps #13,#14 and fitting #15,#18,#17 and tighten slightly (fig. 19).

19

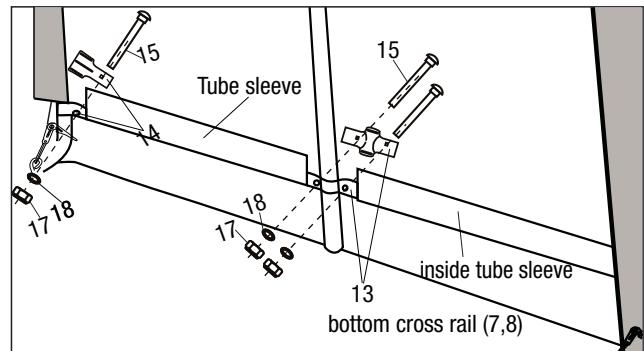

- Repeat the same procedure for the other side of the camo roof #20.
- Check and make sure all the bottom cross rails #7,#8 are horizontal and of the same height from the ground.
- Tighten all the nuts and bolts at this stage.
- Insert the S-hook of the ratchet #26 on the four corners into the hole of the bent corner leg #3.
- Raise and lower the ratchet handle repeatedly to tighten the strap (fig.20).

20

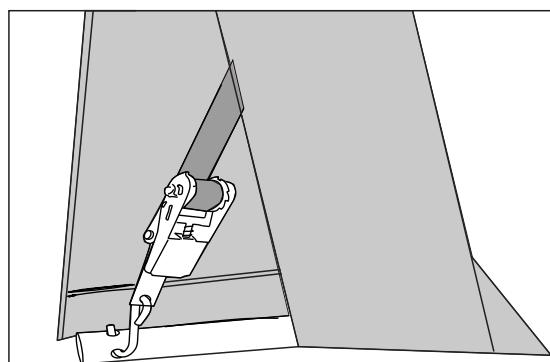


- Now the shed is ready for use.

Caution!

- Check and tighten the bottom cross rails #7,#8 and ratchets #26 monthly to ensure that the camo roof #20 is tight and safe.
- When disassembling the shed, press the spring-loaded bar and open the ratchet handle completely to pull out the strap (fig. 21).

21

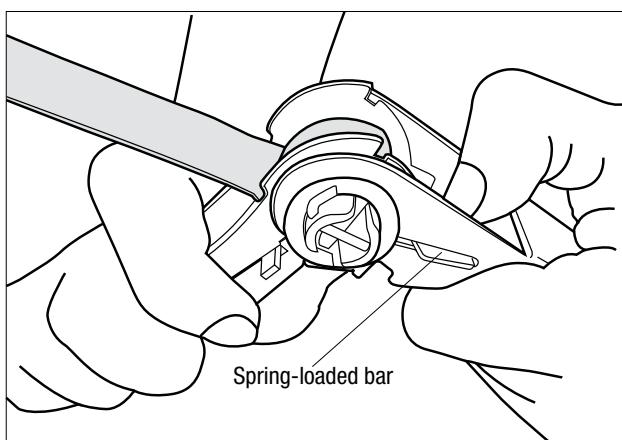

CLEANING AND MAINTENANCE

- DO NOT apply any polishing or protective products to the roof tarp and panels, or use harsh abrasives, bleach or cleansers. The roof tarp and panels can be easily cleaned with mild soap and water. Handle mildew and mould stains with mild soap.
- Periodically check the anchors, the tension of ratchets and all hardware to ensure the stability of the shed during use. It may be necessary to tighten the cover and the back/door panel. Be sure that all covers and panels are kept tight.

Dismantling and storage

- Dismantle the shed in reverse order of the setup.
- Always dismantle the shed completely! A partially dismantled shed is not stable enough to withstand wind and weather and can be damaged or cause damage.
- Before storing, please make sure that the shed is completely dry and clean. Fold the material carefully along the seams.
- Do not wrap the poles and anchors in the fabric, as they may damage it.
- Select a storage place that is dry and well ventilated to reduce the risk of mildew and mould stains. If pockets of water (large amounts of water on the roof), snow or ice should form, remove immediately or dismantle the shed to prevent any damage.
- Store your shed in a cool, dry location between seasons to prolong the service life of all components. Components are not equally durable and may require replacement over time at different intervals.
- Always keep these instructions together with the shed!

LIMITED WARRANTY

This product is guaranteed for 1 year from the date of original retail purchase against defects in materials and workmanship.

Subject to the conditions and limitations described below, this product must be returned with proof of purchase within the stated warranty period, and, if covered under this warranty, will be replaced (fully or partially with the same model or one of equal value or specification) at the Manufacturer's option. Liability is restricted to repair or replacement only and does not include any related labour costs of installation, or any costs related to dismantling, repair or transportation.

These warranties are subject to the following conditions and limitations:

a) A bill of sale verifying the purchase and purchase date must be provided.

b) This warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect or lack of proper installation, operation or maintenance (as outlined in the applicable owner's manual or operating instructions), or which is being used for industrial, professional, commercial or rental purposes.

c) This warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product which are expected to become inoperative or unusable after a reasonable period of use.

d) This warranty will not apply to routine maintenance and consumable items such as the cover, ratchets, webbed belts, nuts, bolts, etc.

e) This warranty will not apply where damage is caused by repairs made or attempted by others (i.e. persons not authorized by the manufacturer).

f) This warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing).

g) This warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons.

h) This warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discolouring by heat, cold, abrasive and chemical cleaners.

i) This warranty will not apply to component parts sold by and identified as the product of another company, which shall be covered under the other product manufacturer's warranty, if any.

Additional Limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential or exemplary damages arising in connection with the sale, use or inability to use this product.

Notice to Consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.