 




DETACHABLE TRIPOD WORK LIGHT

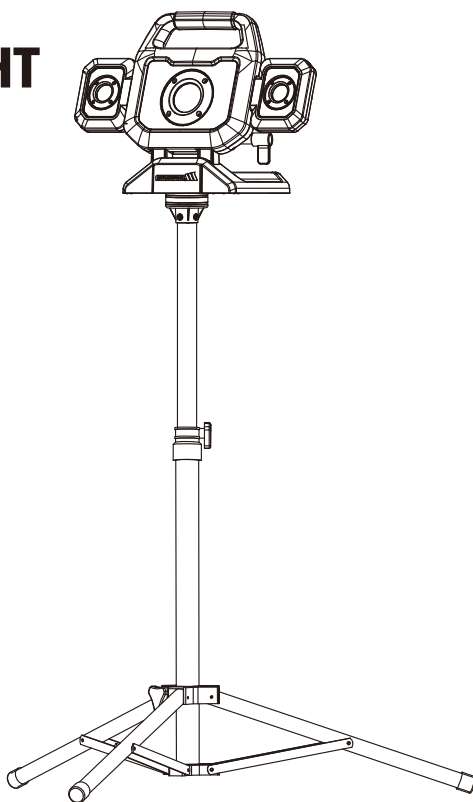

model no. 037-3184-8

IMPORTANT:

Please read this manual carefully before using this light and save it for reference.

**INSTRUCTION
MANUAL**

BEFORE YOU USE THIS DEVICE FOR THE FIRST TIME, PLEASE READ THE FOLLOWING NOTES IN THIS MANUAL AND HEED ALL WARNINGS, EVEN IF YOU ARE FAMILIAR WITH HANDLING ELECTRONIC DEVICES. KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

WARNING!




- Do not use if broken, bent, cracked or damaged parts are present. Any light that appears damaged in any way or operates abnormally must be removed from service immediately. Inspect before each use.
- This light is not to be used by children. Keep out of reach of children.
- Do not leave the light energized and unattended.
- Do not dispose of batteries in fire. Batteries may explode or leak.
- Do not charge or use near open flames or glowing embers.
- Do not shine directly into eyes.
- Never block lens and reflector during operation.
- Unplug unit and allow it to cool before attempting any cleaning or maintenance.





CAUTION!

- Do not store the light for an extended period of time. Charge every three months during storage.
- Do not charge the light for an extended period of time. Overcharging may shorten battery life.
- You must give the light battery a top-up charge at the time of purchase.
- Avoid charging at temperatures below 39°F (4°C).

Your new detachable tripod work light provides a safe and powerful light when you need it. The folding and adjustable tripod extends up to 3' 11¼" (1.2 m) and can be quickly and easily adjusted. The light can be used separately or installed on the tripod depending on your needs.

No.	Description	No.	Description
1	LED main light	11	Swivel hook
2	Detachable side LED light	12	Push button to release the detachable side LED light
3	Carrying handle	13	Rubber cover for USB socket
4	Adjustable-head locking knob	14	USB outlet to charge your mobile devices
5	Light base	15	Type-C charging socket
6	Folding and adjustable tripod	16	LED battery power indicator
7	Tripod locking knob	17	Metal hook
8	On/off switch for whole light	18	Thread hole to install to the tripod
9	Magnet	19	USB charging cable
10	On/off switch for the detachable side LED light	20	5 V 2 A USB AC adaptor

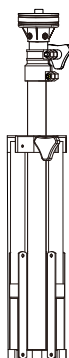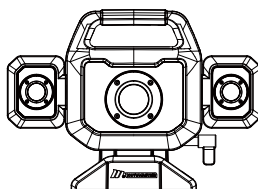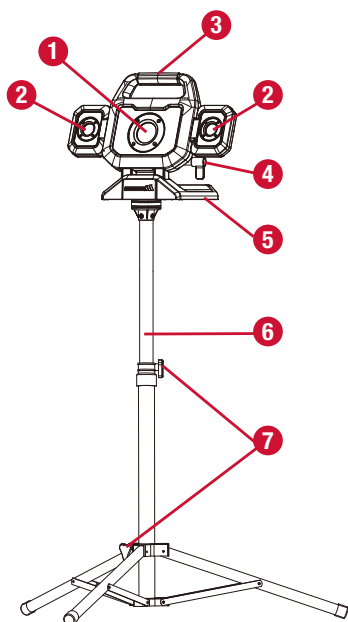

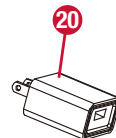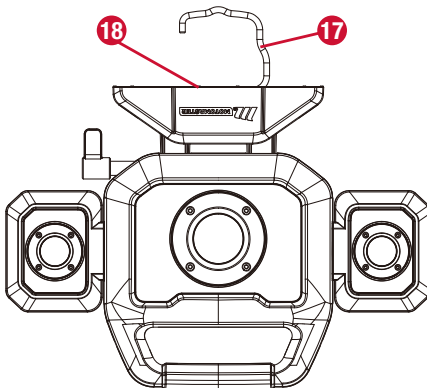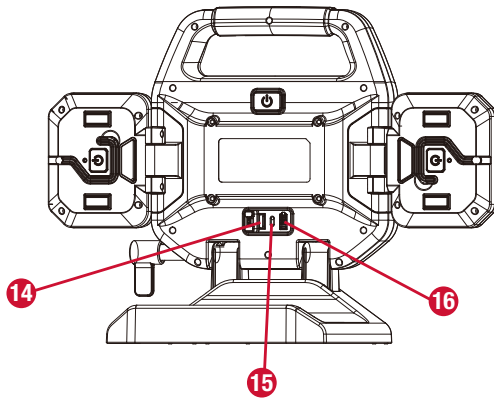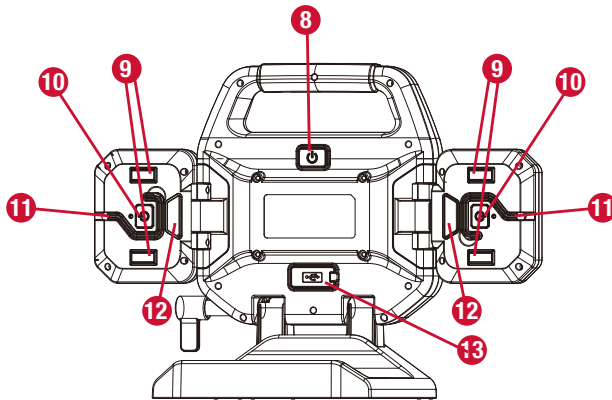

Power requirements:	5 V 2 A
Battery type:	Internal, rechargeable, lithium
Battery pack:	4 x 3.7 V 1800 mAh (2 x 3.7 V 1800 mAh Li-ion in middle main light, each side LED light built-in 1 pc 3.7 V 1800 mAh Li-ion)
Bulb type:	LED
Charging time:	Around 6 – 8 hours

PACKAGE CONTENTS


Detachable Tripod Work Light

USB AC adaptor

USB charging cable

TRIPOD ASSEMBLY

Align the thread hole (part 18) and tighten to attach the light to the tripod.

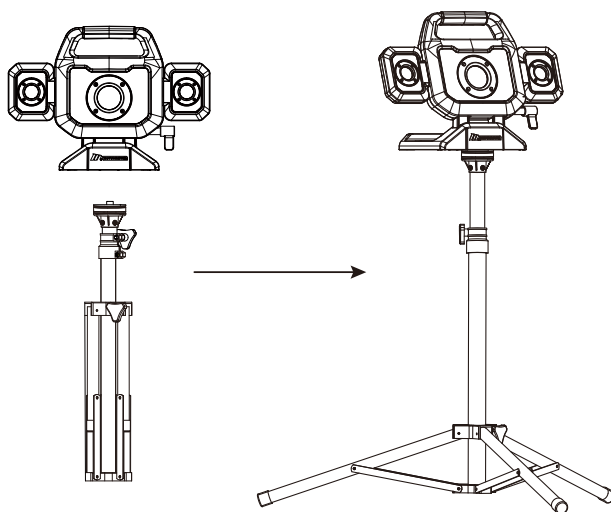

RUNNING TIME

The approximate running times for this light when the battery is fully charged and in maximum performance state are as follows:

High light mode: around 3 hours

Low light mode: around 6 hours


In order to ensure maximum battery performance, the light should be fully charged before being used for the first time. This 3000 lumen LED work light features 3 different light functions.

Press the on/off switch for the whole light (part 8) to turn the light on or off. The switching order is: 3 LEDs in high mode, 3 LEDs in low mode, two detachable side LEDs on (default is high mode; see the instructions below to change the side LED lights to high or low brightness) off. Select the suitable light operation mode for each application. The brightness of this light reaches 3000 lumen.


The two detachable side LED lights also have individual control switches: press the on/off switch on the detachable side LED light (part 10) to adjust the brightness or turn the side light on or off. The switching order is: high light, low light, off. Recharge the battery immediately after each use.

ADJUST THE LIGHT HEAD

Turn the adjustable-head locking knob (part 4) counter-clockwise to unlock. Adjust the LED main light head to the desired angle. Turn the adjustable-head locking knob clockwise to lock.

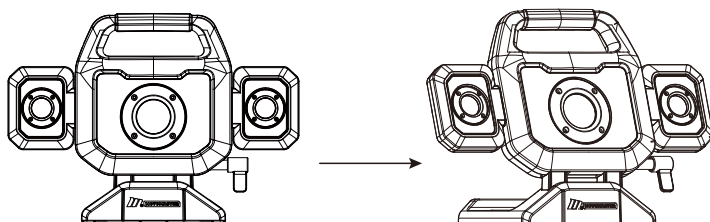


Two side LED lights can rotate 360° and be swivelled forward and backward 180°. You can adjust the LED direction to fit your desired position.

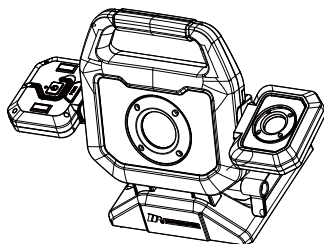

REMOVING THE SIDE LED LIGHT FROM THE BASE

Press the push button (part 12) to pull out the side LED light.

The side LED light is built with a magnet and hook for hands-free use.

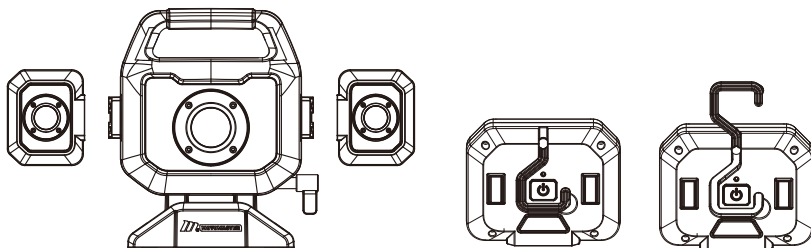

NOTE:

Both detachable LED lights are equipped with internal rechargeable lithium batteries and must be charged after being removed from the base and operating independently. Make certain the power terminals do not get damaged while the side LED light is detached from the base.

USB OUTLET


The USB outlet (part 14) will function as an outlet with 5 V, 2 A max. Use a USB cable to charge devices such as mobile phones, media players, tablets, etc. The LED battery power indicator will light up while charging.

LED BATTERY POWER INDICATOR

Push the on/off switch for the whole light and the LED battery power indicator will light up and show the battery power remaining. There are 4 LEDs; each LED represents 25% power. The LEDs will automatically turn off after five seconds.


ADJUSTING THE TRIPOD

To extend the tripod legs, loosen the lower tripod locking knob (at the bottom of the tripod), pull the centre tripod pipe until the legs lock in place at the bottom of tripod, then tighten the tripod locking knob.

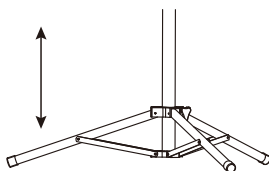

model no. 037-3184-8 | contact us 1-888-942-6686

To adjust the tripod height: loosen the upper tripod locking knob (at the top of the tripod), adjust to the desired height, then tighten the tripod locking knob.

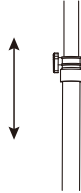

WARNING!

Be careful of pinch points when extending the tripod legs. Place the tripod on a stable, flat surface.

To prepare for storage, loosen both tripod locking knobs and return the legs to the folded position.

CHARGING INSTRUCTIONS

Charge the detachable tripod work light via the supply USB cable into supplied USB AC adaptor.

- 1 Open the rubber cover over the USB socket.
- 2 Insert the USB cable into the Type-C charging socket and plug the other end of cable into USB AC adaptor to charge the light.
- 3 The LED battery power indicator will blink while charging is in progress.
- 4 The battery will be fully charged in approximately 6 – 8 hours. When the battery is fully charged, the LED indicator will remain on and stop blinking.
- 5 Disconnect the USB cable from the light, and remove the adaptor from the wall socket.

RECHARGE THE BATTERY EVERY THREE MONTHS.

This will help extend battery life.

IMPORTANT:

Both side lights will not turn on during the charging period. Only the middle LED main light will turn on if the on/off switch for the whole light is pressed. The two side lights must be installed onto the base for charging.

MAINTENANCE

Clean the cooled lens with household window cleaner, then wipe with a soft, clean, dry cloth. Clean the housing with a clean, dry cloth. Do not expose the light to direct sunlight. Dry thoroughly before use. Store the light in a dry, clean area. Avoid high humidity.

Only qualified service personnel must perform repairs. Do not open the exterior casing of the light, as there are no user-serviceable parts inside. Opening or tampering with the casing may void any guarantee and/or cause damage to the product or personal injury. LED bulbs will never wear out under normal conditions and do not need to be replaced. For safety precautions, do not change the battery. Seek a professional for assistance if a new battery is needed.

STORAGE

Store the light in a clean and dry area. Store the supplied cable and charger with this product to ensure you always have the charging device when needed. To prevent fire or burning, allow the light to cool down completely before you store it. Do not store a discharged battery as this will shorten its service life.

ENVIRONMENTAL CONCERNS



CAN ICES-5(B)
/NMB-5(B)



ENERGY
PERFORMANCE
VERIFIED
RENDMENT
ÉNERGÉTIQUE
VÉRIFIÉ

This product contains an internal Li-ion battery made from environmentally-sensitive materials. Please return this product to your local dealer or to your local recycling station, where batteries will be recycled or Li-ion disposed of properly.

This MotoMaster product carries a three (3) year LIMITED warranty. The product carries a three (3) year warranty against defects in workmanship and materials. The battery carries a one (1) year warranty. MotoMaster Canada agrees to have any defective lights replaced free of charge, within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by MotoMaster Canada Toronto, Canada M4S 2B8.