

Digital Indoor/Outdoor Thermometer Model 1700/1700AST/5257017

BATTERY INFORMATION

The digital indoor/outdoor thermometer is powered by 1 LR44 battery (included). There is a strip under the battery cover to prevent battery drain during shipping. Please remove the strip before continuing with these instructions. You may need to remove the battery compartment cover to avoid breaking the strip. Also, some models have a static cling label on the lens to prevent scratching. Please remove before use.

Replace the battery readings become dim or irregular. To replace the battery:

1. Use one (1) LR44 battery.
2. Remove the battery compartment cover on the bottom of the thermometer.
3. Remove the old battery from the compartment.
4. Place the new battery with the "+" sign up into the battery compartment.
5. Replace the battery compartment cover.

NOTE: Please recycle or dispose of batteries per local regulations.


WARNING: Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.

PRECAUTION: Do not dispose of batteries in fire. Batteries may explode or leak. Remove the battery if the unit will not be used for a long period of time.

DISPLAYING THE DIGITAL INDOOR/OUTDOOR THERMOMETER

Use the suction cup to display the thermometer in a well-ventilated location away from direct sunlight. For best results, wet the suction cup with warm water and apply to a clean surface. The suction cup is assembled for indoor use. To attach the thermometer to the inside of the window follow these steps:

- Pull the bottom cap away from the thermometer housing.
- Remove the suction cup from the housing.
- Replace the bottom housing cap so that the suction cup is held in place between the thermometer and bottom cap.
- Reverse the suction cup in a similar manner for outdoor use again.

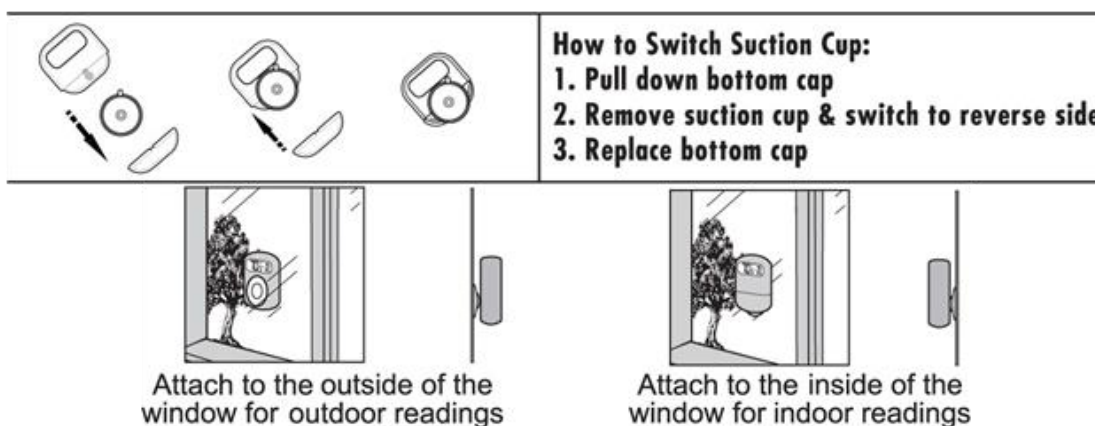

TEMPERATURE READINGS

The digital thermometer displays current temperature at its location, as well as the maximum and minimum temperatures recorded over the last 24 hours. The 24 hour period starts when the unit is powered up.

- Current temperature readings display in the left side of the LCD screen
- Maximum temperature records display in the top right of the LCD screen next to the “MAX” icon.
- Minimum temperature records display in the bottom right of the LCD screen next to the “MIN” icon.
- The max/min records will reset every 24 hours, starting from the time the unit is powered up. To manually clear the max/min records, remove the battery from the unit for at least 1 minute. Reinstall the battery. The max/min temperature records will reset to the current temperatures.
- The thermometer will update temperature readings approximately every 30 seconds.
- To switch between Fahrenheit and Celsius temperature displays, pull off the bottom housing of the thermometer. Move the switch on the inside housing to either °F or °C. replace the bottom housing.
- If the temperature is higher than the range of the unit, the display will show “HH.H”. If the temperature is lower, the display will show “LL.L”.

PRECAUTIONS

1. Though the unit is weather resistant, it should be placed away from direct sunlight, rain, snow and should never be submerged in water. If you spill liquid on it, dry immediately with a soft, lint-free cloth. Do not leave it outdoors in extreme weather conditions. If these conditions become likely to occur, temporarily move the unit to an indoor area otherwise permanent damage to the unit’s internal circuits may occur.
2. Do not clean the unit with abrasive or corrosive materials. This may scratch plastic parts and corrode electronic circuits.
3. Do not subject the unit to excessive force, shock, dust, temperature or humidity. This may result in malfunction, shorter electronic life span, damaged batteries or distorted parts.
4. Do not tamper with the unit’s internal components. Doing so will invalidate the warranty on this product and may cause damage. Other than replacing the battery, the unit contains no user-serviceable parts.
5. This product is for measuring weather temperatures only. DO NOT PLACE UNIT INTO OVENS, GRILLS, FREEZERS or MICROWAVE OVENS.
6. Always read the instruction manual before operating this product.

SPECIFICATIONS

Temperature range: -4°F to 140°F (-20°C to 60°C)

Over/Under temperature range messages: “HH.H” for over the range, “LL.L” for under the range

Resolution: 0.1 degree for temperature

Temperature readings update approximately every 30 seconds

Maximum/Minimum temperature records

Power: 1 LR44 battery (included)

NOTE: This Class B digital apparatus complies with Canadian ICES-003. Operations are subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

ONE (1) YEAR LIMITED WARRANTY

This product is warranted against defects in materials or workmanship (excluding batteries and adapters) for one (1) year from date of original purchase for the original purchaser. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair. Should this product require service (or replacement at our option) while under warranty, do not return to retailer. Please return the item to:

**Lifetime Brands Canada
5151 Thimens Boul.,
Montreal, Quebec,
H4R 2C8**

Questions about your thermometer?

1-800-661-6721

Service@accenthome.com

Manufactured For:

LIFETIME BRANDS CANADA

5151 Thimens Boul., Montreal, Quebec H4R 2C8

The trademarks ®/™ and logos appearing herein are the property of Lifetime Brands, Inc., and/or their respective owners. © 2019 Taylor, a Division of Lifetime Brands Inc. All rights reserved.

Due to continuous product improvements, the picture on the carton may differ slightly from the actual product.

Made to our exact specifications in China. Not legal for trade.

MADE IN CHINA

1700/1700AST/5257017 CM 12.19