

MASTER
Chef™

EXTRA-TALL CAN OPENER

Model no. 043-0193-8



INSTRUCTION MANUAL

Read this manual thoroughly before using this product and save it for future reference.

Model no. 043-0193-8 | Contact us: 1-855-803-9313

Table of Contents

Important Safeguards	2
Know Your Can Opener	4
Before First Use	5
Using Your Can Opener	5
Helpful Hints	6
Using the Knife Sharpener	7
Using the Bottle Opener	7
Cleaning Your Can Opener	8
Warranty	8

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- 1. READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.**
- To protect against risk of electric shock, do not put base, cord or plug in water or other liquids.
- This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- Turn the appliance OFF, then unplug from the outlet when not in use, before putting on or taking off parts and before cleaning. To disconnect, grasp plug and pull from electrical outlet. Never pull from the power cord.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Contact the MASTER Chef Customer Service team if you experience the mentioned issues and need assistance with your appliance.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.

Important Safeguards

8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Do not open pressurized (aerosol) type cans.
11. Do not open cans of flammable liquids such as lighter fluid.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or higher than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.



POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug in any way.

Model no. 043-0193-8 | Contact us: 1-855-803-9313

Know Your Can Opener



RATING: 120v. 60 Hz, 60 W, 1.2 A, AC ONLY

1		Control Lever
2	*	Blade Assembly
3		Locating Post
4		Geared Wheel
5		Magnet

6		Can Opener Body
7		Bottle Opener
8		Knife Sharpener
9		Cord Storage

* This part is available for replacement. Call 1-855-803-9313 for ordering details.

Carefully unpack your new can opener and remove all packaging materials. To remove any dust that may have accumulated during packaging, you may wipe the can opener with a clean damp cloth. Do not use harsh or abrasive cleansers.



CAUTION: The blade assembly contains the cutting blade for opening cans. Caution should always be used when cleaning this part.

Before First Use

1. The can opener should always be unplugged when adding or removing parts.
2. Fit the control lever completely in the keyhole of the appliance. See fig. 1.
3. Plug the cord into a standard, 120 V, 60 Hz AC electrical outlet.
4. Lift up control lever. See fig. 2.
5. Place rim of can firmly under magnetic lid holder and against geared wheel making sure the blade is inside the rim of the can. See fig. 3.

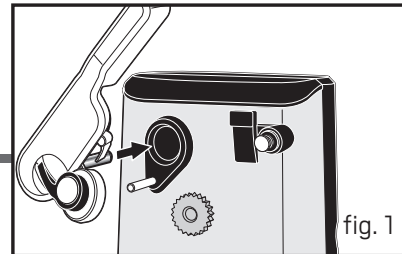 


fig. 1

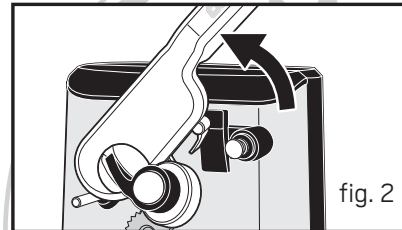 


fig. 2

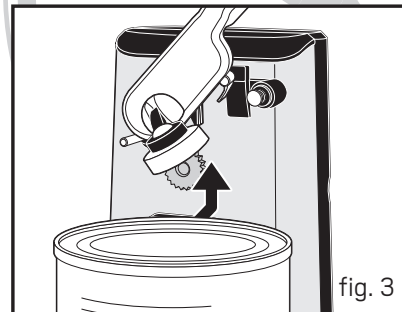


fig. 3

Using Your Can Opener

6. Press the piercing lever all the way down. The motor will begin turning can and cutting lid (it is not necessary to hold the piercing lever down during the cutting action). It may be necessary to hold the bottom of some large, heavy cans during the cutting action. See fig. 4.



NOTE: Although this can opener is equipped with a hands-free feature while the can is being opened, you may have to hold the can opener body when cutting very heavy or tall cans.

7. When the can is opened, the can opener will stop automatically. To remove the can, hold it with one hand and raise the lever with the other. See fig. 5.



CAUTION: Avoid contact with the cut edges of the can or lids – they are sharp. Carefully remove the lid from the magnet and discard.

8. This can opener is equipped with a cord storage compartment. The excess cord may be fed back through the unit housing for convenient storage.



NOTE: Do not use continuously – if opening more than 4 cans at one time, please allow the unit to rest for 30 minutes before using again.

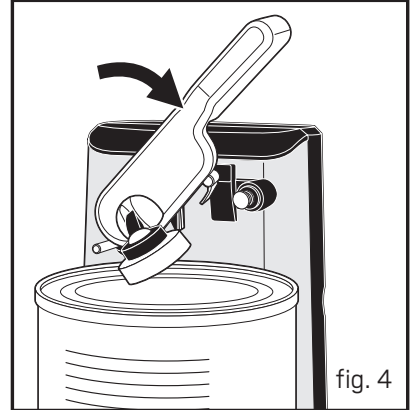


fig. 4

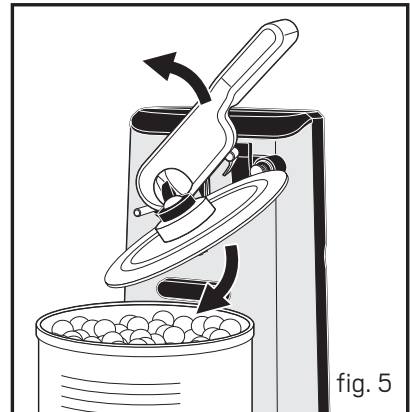


fig. 5

1. **This can opener was not designed to open cans that are to be opened in any other method. For example, pull tab, peel-off foil, rolling key, or frozen juice cans made of cardboard.**
2. **If your can has a dent on the rim, start cutting just beyond the dent. Cans with heavy rims or seams may cause this can opener to stall. If this happens turn the can by hand to aid the cutting motor.**




NOTE: Aluminum lids will **not** stick to the magnet.

MASTER Chef™

Using the Knife Sharpener


1. Always ensure the can opener is unplugged when sharpening your knives.
2. Clean and dry knives before sharpening.
3. Do not attempt to sharpen serrated blades, as this will smooth their edges. Do not attempt to sharpen scissors.
4. For best results, sharpen the entire blade length in one continuous stroke carefully pulling the blade through the slot and slightly towards you. Repeat until you achieve the desired sharpness. Wash and dry knives after sharpening. Use caution with the blade after sharpening.

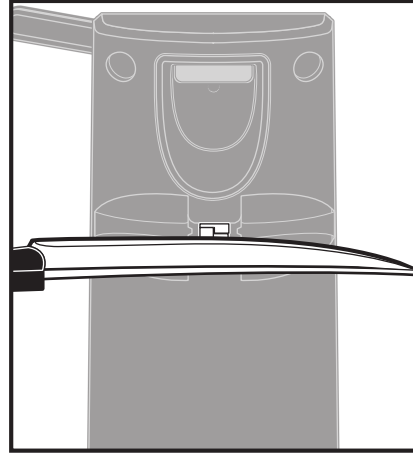

1. Always ensure the can opener is unplugged when using the bottle opener.
2. With one hand holding the top of the can opener steady, insert cap of bottle into the bottle opener. Angle the bottle to ensure the cap aligns with the top edge of the opener, and press down lightly on the bottle until the cap is removed.



WARNING: Do not touch any part of the blade assembly when using the bottle opener.

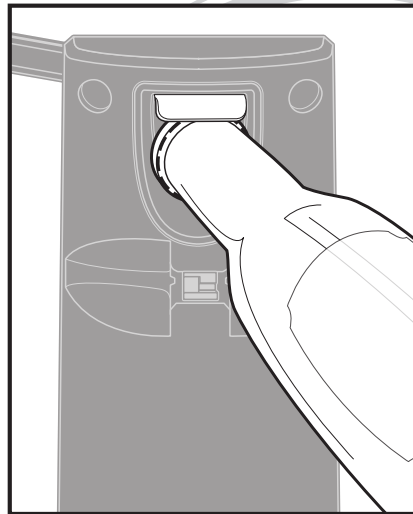

Using the Bottle Opener

Model no. 043-0193-8 | Contact us: 1-855-803-9313

Cleaning Your Can Opener



IMPORTANT: Before cleaning any part of the can opener, unplug the cord. To ensure proper performance of your can opener and to avoid food contamination, be sure to keep the cutting blade clean.

Before you clean your can opener, unplug the can opener from the electrical outlet. The operating lever may be removed by lifting the lever to the upright position and then pulling the lever outward. The control lever can be washed in a dishwasher or in warm soapy water and rinsed thoroughly.



CAUTION: Avoid injury from the cutting blade.

The outside surface of the can opener may be cleaned with a damp cloth. Replace the control lever by lining up the pivot on the lever with the hole in the can opener body. The post on the lever will then fit in the keyhole in the can opener body. Finally, push the control lever into the body as far as it will go.

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by

Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

For assistance regarding this appliance, please call 1-855-803-9313.

Warranty