

Model  
HH1001201  
SKU  
043-0766-6

# **12-Cup Programmable Coffee Maker**

## **User Manual**

**vida**  
by PADERNO

## Table of Contents

3

Important Safeguards	04
Notes on the Power Cord	05
Technical Information	06
Control Panel	06
Before First Use	06
Using Your Coffee Maker	07
Operating Notice	08
Setting a Start Time	08
Charcoal Water Filter	09
Cleaning and Maintenance	09
Hints for Great Tasting Coffee	10
Running The Cleaning Cycle	11
Our Guarantee	12

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER-SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**

1. Do not place cloth or otherwise restrict airflow beneath coffee maker.
2. Do not use a cracked carafe or a carafe with a loose or weakened handle.
3. Read all instructions.
4. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
5. To protect against fire, electric shock and injury to persons, do not place cord, plug or immerse appliance in water or other liquid.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Unplug from the outlet when not in use and before cleaning.
8. Allow appliance to cool before putting on or taking off parts and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been

- damaged in any manner. The appliance should not be repaired or opened by an unlicensed person. Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.
10. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
11. Do not use outdoors.
12. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Do not use appliance for other than its intended use.
15. Do not clean the carafe with cleansers, steel wool pads, or other abrasive materials.
16. To disconnect, turn the appliance off and remove the plug from the wall outlet. Always hold the plug when removing from the power outlet. Never pull the cord.
17. Scalding may occur if the cover is removed during the brewing cycle. Be careful not to get burned by the steam.
18. Some parts of the appliance

are hot when operating and should not be touched with bare hands. Use handles or knobs only.

19. Never leave the empty carafe on the warming plate while it is still hot or the glass may crack.
20. Never use the appliance if the carafe shows any signs of

cracking, or has a loose or weakened handle. Only use the carafe included with this appliance. Use carefully as the carafe is fragile.

21. Do not set a hot carafe on a hot or cold surface.
22. Do not let the coffee maker operate without water.

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



CAN ICES-003(B)/NMB-003(B)

**WARNING:** Any change or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.


**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## NOTES ON THE POWER CORD

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## TECHNICAL INFORMATION

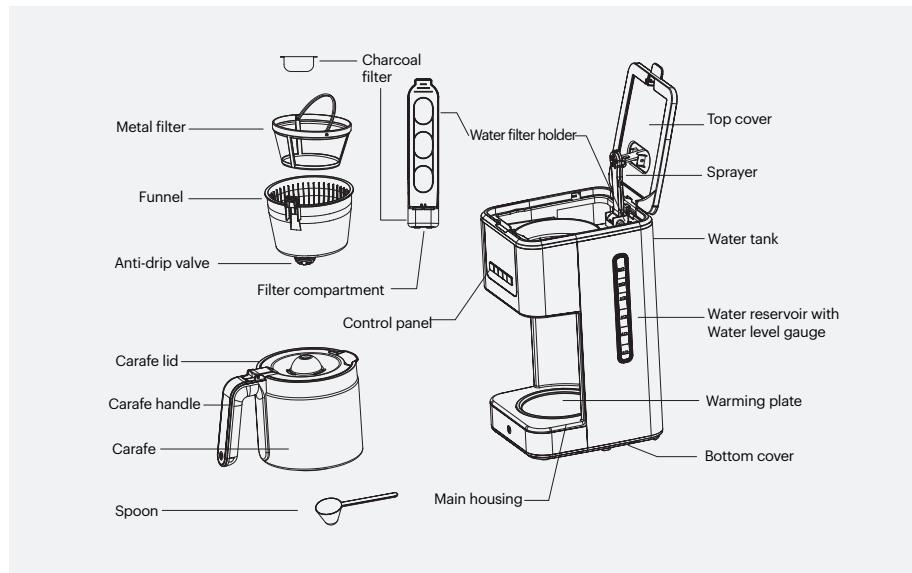

## CONTROL PANEL



## BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the 12-cup mark on the water gauge. Brew water several times without coffee grinds, and discard water. Clean all detachable parts thoroughly with warm water.

## USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with cold drinking water. The water level should not exceed the 12-cup mark indicated on the water gauge.
2. Place the funnel into the funnel support and ensure the funnel is positioned correctly; otherwise, the top cover cannot close. Place a metal filter in the funnel.
3. Fill the metal filter with coffee grounds. Usually a cup of coffee needs a level spoon of coffee grounds, but you may adjust according to your personal taste. Close the top cover completely.
4. Insert carafe on the warming plate horizontally.
5. Plug the power cord plug into the outlet. The screen will automatically display "12:00AM". The time will flicker until it is adjusted, or the cycle is started.
6. Set current time using the **HR** and **MIN** buttons.
7. For a stronger and bolder coffee, simply press the **bold** button. Two bean **bold** icons will appear on the screen indicating **BOLD BREW** is activated. The BOLD BREW cycle will be longer than the regular cycle. It blooms the coffee at a slower pace, giving the water more time to extract the coffee flavour and oils to deliver a bolder, full body brew. To turn off **BOLD BREW**, simply press the **bold** button again. The bean **bold** icons will disappear.
8. Press the **▷II** button. The button will light up and the brew cycle will begin.
9. The brewing process can be interrupted by pressing the **▷II** button at any time, and the brewing will stop.
10. The appliance will continue brewing once **▷II** is pressed again.
11. Remove the carafe about one minute after brewing completes and serve.

**Note:** The volume of coffee will be less than the volume of water used, as some water is absorbed by the coffee grinds. If you do not want to serve coffee immediately after the brewing cycle has finished, keep the coffee maker on and the carafe on the warming plate to keep the coffee hot. The warming plate will automatically shut off after 2 hours if the appliance has not been manually disconnected at the end of the brewing cycle. For an optimum coffee taste, serve just after brewing.

12. Always turn the coffee maker off.

**Note:** Pay attention when pouring the coffee to avoid spilling. Coffee will be hot and may cause injury.

## OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: the use of too finely ground coffee; using two or more paper filters; using a filter basket in conjunction with a paper filter; not properly cleaning coffee grounds from the filter basket; or allowing coffee grounds to spill over the filter.

**Caution:** Never open the filter basket during the brewing cycle, even if no water is draining from the filter basket, since extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket.

## SETTING A START TIME

If you do not want the brew cycle to start immediately (i.e., you want to schedule a brew cycle for the next morning), first follow steps 1 to 7 in the "Using Your Coffee Maker" section. You can then set a delayed brew time by following the steps below:

1. Press  button once. The screen will show the automatic starting time.
2. Press the **HR** and **MIN** button to set your desired automatic starting time.
- Note:** Start time can be set for up to 12 hours in advance.
3. If no additional input is made for 5 seconds, the screen will display the current time. The  icon will appear on the screen indicating a delayed start time is activated.
- Note:** To see the automatic start time setting you can press  button once.
4. You can cancel the automatic start function by pressing and holding the  button for 3 seconds until the clock  icon disappears. If you want to change the automatic start time, repeat steps 1 – 3.
5. When the set start time is reached, the clock  icon will disappear and the coffee maker will start brewing. At the end of the brew cycle, three beeps will sound.

## CHARCOAL WATER FILTER

Your coffeemaker comes with a charcoal filter that eliminates chlorine, bad tastes, and odours from tap water for better brewed coffee and taste.

1. Remove the filter from the plastic bag and soak it fully submerged in cold water for 15 minutes.
2. Lift the water filter holder out of the water reservoir.
3. Press down on the filter compartment and pull towards you to open.
4. Place the filter into the holder and snap it closed. Be careful—improper placement can damage the filter.
5. Flush the filter by running cold drinking water through the drain. The water should filter through the holes in the bottom of the compartment for 10 seconds.
6. Allow the filter to drain completely.
7. Slide the water filter holder back into the channel in the water reservoir, pushing it down into the coffee maker.

**Note:** The water filter should be changed every 60 days or 60 cycles, or more often if hard water is used. Replace with Vida™ by PADERNO Charcoal Water Filter or similar compatible universal charcoal water filter measuring 4.6 x 2.0 x 2.6 cm.

## CLEANING AND MAINTENANCE

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electric shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in warm, soapy water. Pay attention to ensure all coffee grounds are washed away from the funnel, anti-drip valve and carafe. Leftover coffee grounds could contribute to dripping, slow draining cycles or bitter coffee.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may build up in the area above the funnel and drip onto the product base during brewing. Wipe off the wet areas with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

## HINTS FOR GREAT TASTING COFFEE

1. A clean coffee maker is essential for making great tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold drinking water in the coffee maker.
2. Store unused coffee grinds in a cool, dry place. After opening a package of coffee grinds, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For optimal coffee taste, buy whole coffee beans and grind them to a medium coarseness (sea salt flake size) just before brewing. One of the included 5 g scoops is recommended for each cup of coffee, up to a maximum of 12 scoops (60 g). For best results, use metal filter included with the
4. appliance. Exceeding the 18 scoops (90 g) or grounds finer than medium coarseness, or using paper filter with over 60 g coffee ground can lead to overflow of the filter and coffee grounds in the brewed coffee.
5. Do not reuse coffee grinds since this will greatly reduce the coffee's flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
6. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grinds.
7. Oiliness may occur more frequently if heavily roasted coffee beans are used.

## RUNNING THE CLEANING CYCLE

Once the coffee maker has run 90 cycles, the  light will flash as a reminder to run a cleaning cycle. If you want to remove the mineral deposits left by the water before 90 cycles, follow below steps and run the cleaning cycle. To keep your coffee maker operating efficiently, it is suggested to clean away the mineral deposits regularly according to the water quality in your area and the frequency you use the appliance.

1. Before starting the cleaning cycle, add 1350 mL of water and 450 mL of vinegar to the water reservoir.
2. The cleaning cycle can be activated by pressing and holding the  button. The coffee maker will beep, the  button will flash and the 
3. icon will appear on the display. The cleaning cycle will begin and run for approximately 50 minutes.
4. Once the coffee maker beeps again and the  icon disappears, the cleaning cycle is complete and the internal cycle counter is reset.

4. Rinse the coffee maker by running 3 brew cycles with just water.

**Note:** During the cleaning process you can press the  button to cancel the cleaning

program. You may continue to use the coffee maker as normal, but the  icon will remain flashing on screen until the cleaning cycle is fully completed.

## OUR GUARANTEE

### **2-Year Limited Warranty:**

Starting from the date of purchase, Vida™ by PADERNO warrants that your product is free from any manufacturing defects in materials or workmanship for a period of 2 years. This warranty is only offered on Vida™ by PADERNO products sold and used in Canada. The Vida™ by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at the discretion of Vida™ by PADERNO.

The Vida™ by PADERNO warranty does not apply to products that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida™ by PADERNO, are used.

**There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

### **CONTACT:**

**For warranty inquiries or if you have any questions, please contact us at: 1-800-263-9768**

**TRILEAF DISTRIBUTION TRIFEUIL, Toronto, ON, Canada, M4S 2B8**

**A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.**

