

6-Slice Digital Air Fryer Toaster Oven User Manual

Model
HH1001206
SKU
043-0770-4

vida
by PADERNO™

Table of Contents

3

Important Safeguards 04
Power Cord Instructions 05
Know Your Toaster Oven 06
Before the First Use 09
Using Your Toaster Oven 10
Useful Tips 11
Cleaning And Maintenance 11
Caution 11
Technical Parameters 12
Our Guarantee 13

Important Safeguards

When using electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions and product labels and warnings before using the toaster oven.
2. Do not touch hot surfaces. The temperature of the door or the outer surface may be high when the toaster oven is operating.
3. Always use oven mitts when handling hot materials, and allow metal parts to cool down before cleaning.
4. Allow the appliance to cool thoroughly before putting in or taking off parts. Always use the handle when moving it.
5. When the appliance is not being used and before cleaning, unplug the toaster oven from the wall outlet.
6. To protect against the risk of electric shock, do not immerse the toaster oven in water or any other liquid.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is broken in any manner. If the power cord is damaged it must be replaced by the manufacturer or similarly qualified person in order to avoid hazards.
8. The use of accessories that are not recommended by the manufacturer may cause injury to persons or damage to the appliance.
9. Do not store or use anything that are not recommended by the manufacturer in the toaster oven when not in use.
10. Do not use outdoors.
11. Do not use for commercial purposes. Do not use this toaster oven for other functions except the intended purposes.
12. Store the toaster oven properly.
13. Do not place the appliance near any stove top, hot gas, electronic burner, near other toaster ovens or hot equipment because this may cause damage to the unit or cause a fire.
14. A fire may occur if the toaster oven gets near flammable liquid or materials. Do not place it near curtains, draperies, walls and the like when in use or when hot.
15. Do not put any items on top of the appliance during operation.
16. Do not place any flammable materials such as paper, cardboard, plastic or other things near or inside the unit as these may catch fire.
17. Do not cover the crumb tray or any part of the toaster oven with metal foil, for it will cause overheating.
18. Do not put oversized food into the cooking compartment, for it will cause fire or electric shock.
19. Extreme caution is necessary when disposing of hot grease or oil after cooking. Let the toaster oven cool down first.

20. Do not clean with a metal scouring pad. Pieces will break off the pad and touch electrical parts creating a risk of electric shock.
21. To turn this appliance off return all controls to the Off position.
22. To avoid being burned, do not touch the crumb tray tab before cooling it down completely.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Keep the appliance and its cord out of reach of children.
25. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
26. Do not use a scouring pad to clean the glass. Only use a damp cloth after the unit has fully cooled.
27. Always place a baking pan below the air fry basket when cooking to catch the grease.
28. Leave a clear space of at least 4" (10 cm) around the appliance when in use.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

Power Cord Instructions

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be equal to or greater than the rating of this appliance. The label with the electrical rating is located on the underside of the appliance.
4. Avoid pulling or straining the power cord at outlet or appliance connections.

WARNING: Improper use of the power cord may result in the risk of electric shock. Consult a qualified electrician if necessary.



WARNING: Any change or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Know Your Toaster Oven



Control Panel

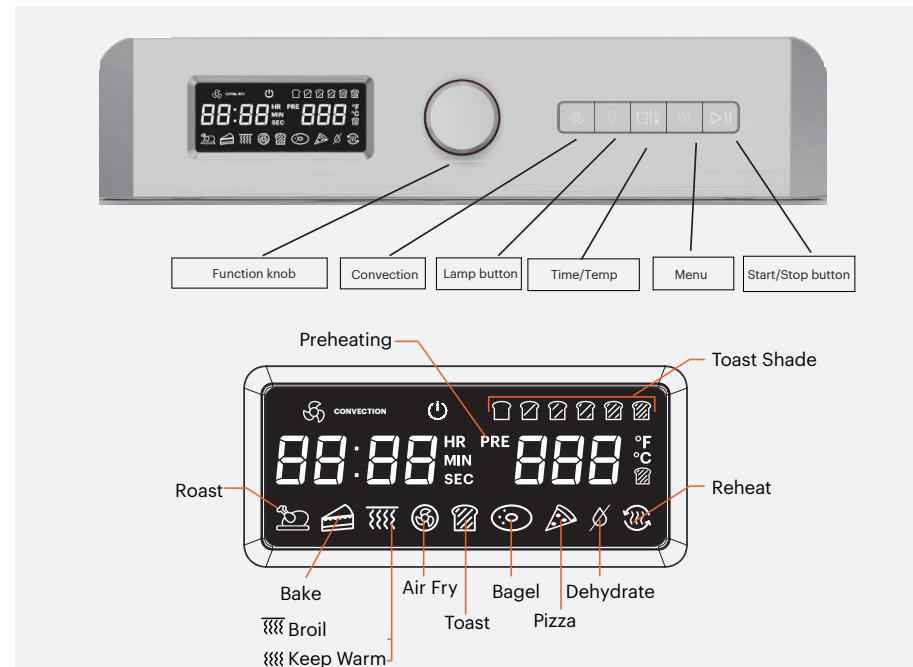

Function knob: This knob is used to set the operation of the oven and to adjust the time and the temperature. The function knob is only possible before the cooking process starts.

There are 12 preset functions to choose from and additional convection settings:

1. Roast/Convection

Roast: Best for cooking full chickens, chicken breasts, roast beef or other thick cuts of meat. Both the upper 2 and lower heat elements will be activated during the operation. You can turn on the convection fan by pressing the convection button. Default time and temperature is 1 hour /350°F (175°C). Adjustable time range is 1 minute to 2 hours. Adjustable temperature range is 120–450°F (50–230°C).

2. Bake/Convection

Bake: Best for baking cakes, muffins, cookies or other baked goods. Both the upper 2 and lower heat elements will be activated during the operation. You can turn on the convection fan by pressing the convection button. Default time and temperature is 30 minutes/350°F(175°C). Adjustable time range is 1 minute to 2 hours. Adjustable temperature range is 120–450°F (50–230°C).

3. Broil: Best for browning cheeses and other toppings. Both the upper 4 heat elements and fan will be activated during the operation. Default time and temperature is 10 minutes/400°F (205°C). Adjustable time range is 1 minute to 20 minutes. There are 2 adjustable temperature settings: the low setting is at 300°F (150°C);

the high setting is at 400°F(205°C).

4. Keep Warm: Both the upper 2 and lower heat elements will be activated during the operation. Default time and temperature is 1 hour/160°F (70°C). Adjustable time range is 1 minute to 2 hours, and the adjustable temperature range is 140–200°F (60-93°C).

5. Air Fry: Both the upper 2 heat elements and the fan will be activated during the operation. Default time and temperature is 15 minutes/400°F(205°C).

Adjustable time range is 1 minute to 45 minutes. Adjustable temperature range is 120–400°F (50–205°C).

6. Toast: Both the upper 2 and lower heat elements will be activated. Adjustable bagel pieces: 1–6, adjustable bagel shade: 1–6.

7. Bagel: The upper 2 heat elements will be activated. Adjustable bagel pieces: 1–6, adjustable bagel shade: 1–6.

8. Pizza: Both the upper 2, the lower heat elements and the fan will be activated during operation. You can turn off the convection fan by pressing the convection button.

Default time and temperature is 20 minutes/375°F (190°C). Adjustable time range is 1 minute to 60 minutes. Adjustable temperature range is 120–400°F (50–205°C).

9. Dehydrate: Both the upper 2 heat elements and fan will be activated during operation.

Default time and temperature is 6 hours/120°F (49°C). Adjustable time range is 30 minutes to 72 hours. Adjustable

temperature range is 100–175°F (38–80°C).

10. Reheat: The upper 2 and the lower heat elements and the fan will be activated during operation. You can turn off the convection fan by pressing the convection button.

Default time and temperature is 15 minutes/320°F (160°C). Adjustable time range is 1 minute to 2 hours. Adjustable temperature range is 120–450°F (50–230°C).

Convection button: You can press the convection button to turn the convection fan on or off.

NOTE: You can't change the fan status when you are using the following modes: Airfry, Bagel, Toast, Broil and Dehydrate.

Lamp button: You can press the lamp button at any time to turn on or turn off the lamp light.

TIME/TEMP button: You can press the Time/Temp button, and then turn the function knob clockwise to add time/ temperature (+), and turn the function knob counter-clockwise to decrease time/ temperature (-). If you choose Bagel and Toast mode, you can press Time/Temp button, and then turn the function knob clockwise to add pieces/ toast colour (+), and turn function knob counter clockwise to decrease pieces/toast colour (-).

NOTE: Press and hold the Menu button for 3 seconds to change from °F to °C. You can't change the time/ temperature when you are using the following modes: Bagel and Toast mode.

Menu button: When the LCD is illuminated and at Pause mode, if you need to choose or change the cooking preset mode, you can press the menu button.

Start/Stop button:

When in Toast or Bagel cooking process, you may stop it by long pressing the Start/Stop button for 3 seconds. For other functions, you may stop the cooking process by short pressing the Start/Stop button at any time, and you can adjust the time and temperature when the unit is at pause/standby status. During

the cooking process, you can long press the Start/Stop button for 3 seconds to go back to the main menu. You can long press the Start/Stop button for 3 seconds again to turn off the toaster oven.

Preheat: Roast, Bake, Broil, Air fry, Pizza are with preheat function. Preheat will be timed separately, not calculated in the cooking time. When in the process of preheating, PRE icon will keep flashing. When finish preheating, the PRE icon will disappear.

Before the First Use

Remove packing materials and any stickers. Remove the detachable accessories from the toaster oven. Wash accessories in soapy water, rinse and dry with a cloth or paper towel. Return all the detachable accessories back to the toaster oven.

Select a location for the unit. Do not place the unit under cabinets or too close to a wall or other equipment to allow the heat to flow. Plug the unit into a dedicated electrical outlet.

NOTE:

1. To cook using the air fry function we suggest using the air fry basket with the baking pan below to catch any grease. To roast meat we recommend using the baking pan but not the air fry basket.
2. There should be at least 1 1/4" (3 cm) space between the food and the upper heating element. Observe proper spacing.
3. Do not overfill the unit with the food.
4. The baking pan can be placed on the grill rack/slot.
5. Always monitor the food when cooking at a temperature setting to ensure that you are not over-cooking or burning the food. Check or turn over halfway through the cooking process.
6. The inner compartment is equipped with different slot heights for variations of cooking in order to get a perfect result.
7. Make sure that the crumb tray is in place before using.
8. Leave a clear space of at least 4" (10 cm) around the appliance when in use.

Using Your Toaster Oven

1. Plug the power cord into the outlet. Once plugged in, you will hear a beep sound. The appliance will be in standby mode and the ON/OFF icon will appear in the LCD display. The Start/Stop button on the right will be illuminated. You can press the Start/Stop button to see all the menus showing on the LCD display. If the appliance is not used for 30 minutes, the appliance will return to standby mode.
2. The default mode is the Roast function. You can choose the function you need by turning the function knob.
3. There are 12 preset functions to choose from and additional convection settings: roast, convection roast, bake, convection bake, broil, keep warm, air fry, toast, bagel, pizza, dehydrate, reheat. Turning the knob once changes the functions.
4. When the programmed function has finished, and there is no operation for 30 minutes, the appliance will return to standby mode.
5. When the appliance is being used and the Start/Stop button is pressed, the appliance will go back to standby mode if it is not used for 5 minutes.

Note:

1. To cook French fries we suggest using the Airfry function with the airfry basket with the baking pan below to catch any grease. To roast meat we recommend using the baking pan, but not the air fry basket.
2. The Dehydrate function is used for drying vegetables, fruit and some meats. We recommend using the air fry basket to dehydrate with the baking pan below to catch any drippings.
3. After choosing the function you need, you can press the Start/Stop button to start. The unit will work at its default time and temperature.
4. To adjust time or temperature during the cooking process press the Start/ Stop button. Press Time/Temp button then turn the function knob to choose the time you need. Then press Time/Temp button again to confirm the time and then the display will show the temperature adjusting mode. Turn the Function knob to increase or decrease the temperature. Once set, press Start/Stop button again to start cooking.
5. Unplug the unit from the outlet after use.

Useful Tips

1. Condensation or moisture may appear on the toaster oven door while cooking some foods. This is normal.
2. Cook food immediately after defrosting.
3. Frozen foods and thick meat will take longer to cook. Add cooking time if necessary.
4. Avoid opening the toaster oven door too frequently to prevent heat loss.
5. When baking, smoke will likely appear. Removing excess fat prior to baking can reduce this.

Cleaning and Maintenance

Caution: Before cleaning the toaster oven unplug it and allow it to cool completely.

1. Wash all the attachments with mild soap and water.
2. Use a damp soft cloth to clean the inner surfaces of the oven; remember to clean it regularly.
3. Do not clean with abrasive cleaners or abrasive cleaning pads.
4. Do not immerse the unit in water to clean the appliance.
5. To clean the crumb tray, wait for the unit to cool then open the toaster oven's door and pull out the crumb tray. After cleaning put the crumb tray back into position.
6. Do not use the dishwasher to clean any of the accessories that are included with this product.
7. Do not use any abrasive cleaning products.
8. Clean accessories with a soft cloth in warm water with liquid detergent or soap.
9. Do not wipe the heating elements.
10. Do not install the wire rack or baking pan directly on the lower heating element.
11. Do not use any metal pad to clean the surfaces of the oven to avoid damaging the finish and the surface.

Caution

To prevent the countertop from sustaining any damage, the toaster oven must be operated with the crumb tray properly in place, securely closed and free of any excess food or grease.

Never operate your toaster oven with the oven door open.

Never put the baking pan (or any other accessory) directly on any of the heating components. Use the tracks or the slots and observe proper spacing of the attachments and the food inside.

Disposal of the Appliance

DO NOT dispose of this product in household waste. Many parts of this product are recyclable. Dispose of as per the requirements of your local municipality.

WARNING: Danger of suffocation from plastic packaging. Do not leave the packaging or any part of it unattended. Do not let children play with the plastic bags.

Technical Parameters

WARNING: Electrical Shock Hazard

- Do not use an adaptor.
- Failure to follow these instructions could result in death, fire or electric shock.

Troubleshooting

If toaster fails to operate, check the following:

1. Check that the toaster oven is plugged into a grounded 3-prong electrical outlet. If it is, unplug the toaster oven.
2. Plug the toaster oven in socket with two poles.
3. If the toaster oven still does not work, check the household fuse or circuit breaker.

SKU: 043-0770-4

Model: HH1001206

Power source: 120V~60Hz

Rated Power: 1700 W

Unit size (D x W x H): 15 3/16 x 15 3/4 x 13 3/8"
38.6 x 40 x 34 cm

Our Guarantee

2-Year Limited Warranty:

Starting from the date of purchase, Vida by PADERNO™ warrants that your product is free from any manufacturing defects in materials or workmanship for a period of 2 years. This warranty is only offered on Vida by PADERNO products sold and used in Canada. The Vida by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at Vida by PADERNO's discretion.

The Vida by PADERNO warranty does not apply to products that have been used commercially or in non-household applications.

The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida by PADERNO, are used.

There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.

CONTACT:

For warranty inquiries or if you have any questions, please contact us at:

1-800-263-9768
TRILEAF DISTRIBUTION TRIFEUIL,
2180 Yonge Street,
Toronto, ON,
Canada,
M4S 2B8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.

