

# 1.7 L Variable Temperature Steeping Kettle User Manual

SKU  
043-0989-6  
043-0994-2  
043-1530-0

**vida**<sup>TM/MC</sup>  
by/par **PADERNO**



# Table of Contents

Safety Instructions	Important Safeguards .....	04
	Additional Important Safeguards .....	05
	Notes on the Plug .....	06
	Notes on the Cord .....	06
	Plasticizer Warning .....	06
	Electric Power .....	06
User Instructions	Getting to Know Your Kettle.....	07
	Safety Warnings.....	07
	Before Using Your Kettle.....	07
	Using Your Kettle .....	08
	Boil-Dry Protection .....	08
	Cleaning and Maintenance .....	08
	Warranty.....	09

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

## 1. READ ALL INSTRUCTIONS.

2. Do not touch hot surfaces. Use handles or knobs only.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. Children should be supervised to ensure that they do not play with the appliance.
6. The appliance is only to be used with the base provided.
7. To minimize the risk of property damage, never place the kettle under cabinets. Make sure the area several feet above the kettle is clear from all furniture or cabinetry.
8. Do not open lid while water is boiling. Scalding may occur if the lid is removed during boiling.
9. Do not use outdoors.
10. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts and before cleaning the appliance.
11. To protect against fire, electrical shock and injury to persons, do not immerse cord, plugs, or appliance in water or other liquids.
12. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
13. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
14. Never move the appliance by pulling the cord. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
15. Stand the appliance on a table or flat surface.
16. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
17. While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout. To disconnect, turn any control to "OFF" then remove the plug from the wall outlet.
18. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
19. Do not place appliance on or near a hot gas or electric burner or in a heated oven.
20. To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance.
21. To reduce the risk of electric shock, do not mount over a sink.

Return appliance to the nearest authorized service facility for examination, repair or adjustment.

**NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.**

22. To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.

23. Do not use this appliance for other than its intended use.

## ADDITIONAL IMPORTANT SAFEGUARDS

**WARNING:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Filling past the "MAX" line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the "MIN" line will result in the tea maker switching off before the water has boiled or reached the selected temperature.
4. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 10 cm (4") away from walls or other objects during operation.
6. Place the appliance on a surface that is resistant to heat.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water. Contact Consumer Service for examination and repair.
8. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

## FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTION

## NOTES ON THE PLUG

This appliance has a grounded 3-prong plug. To reduce the risk of electric shock, this plug will fit in a 3-prong plug outlet only one way. If it still does not fit, contact a qualified electrician.

Do not modify the plug in any way.

## NOTES ON THE CORD

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
  - 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
  - 3. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## PLASTICIZER WARNING


**CAUTION:** We recommend placing HEAT RESISTANT non-plastic coasters or silicone place mats between the appliance and countertop or tabletop surface on which it is operated. This prevents additives such as plasticizers from migrating to the surface which in turn may cause permanent blemishes, staining, or darkening, of the surface.

## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

# Getting to Know Your Kettle

Product may vary slightly from illustration

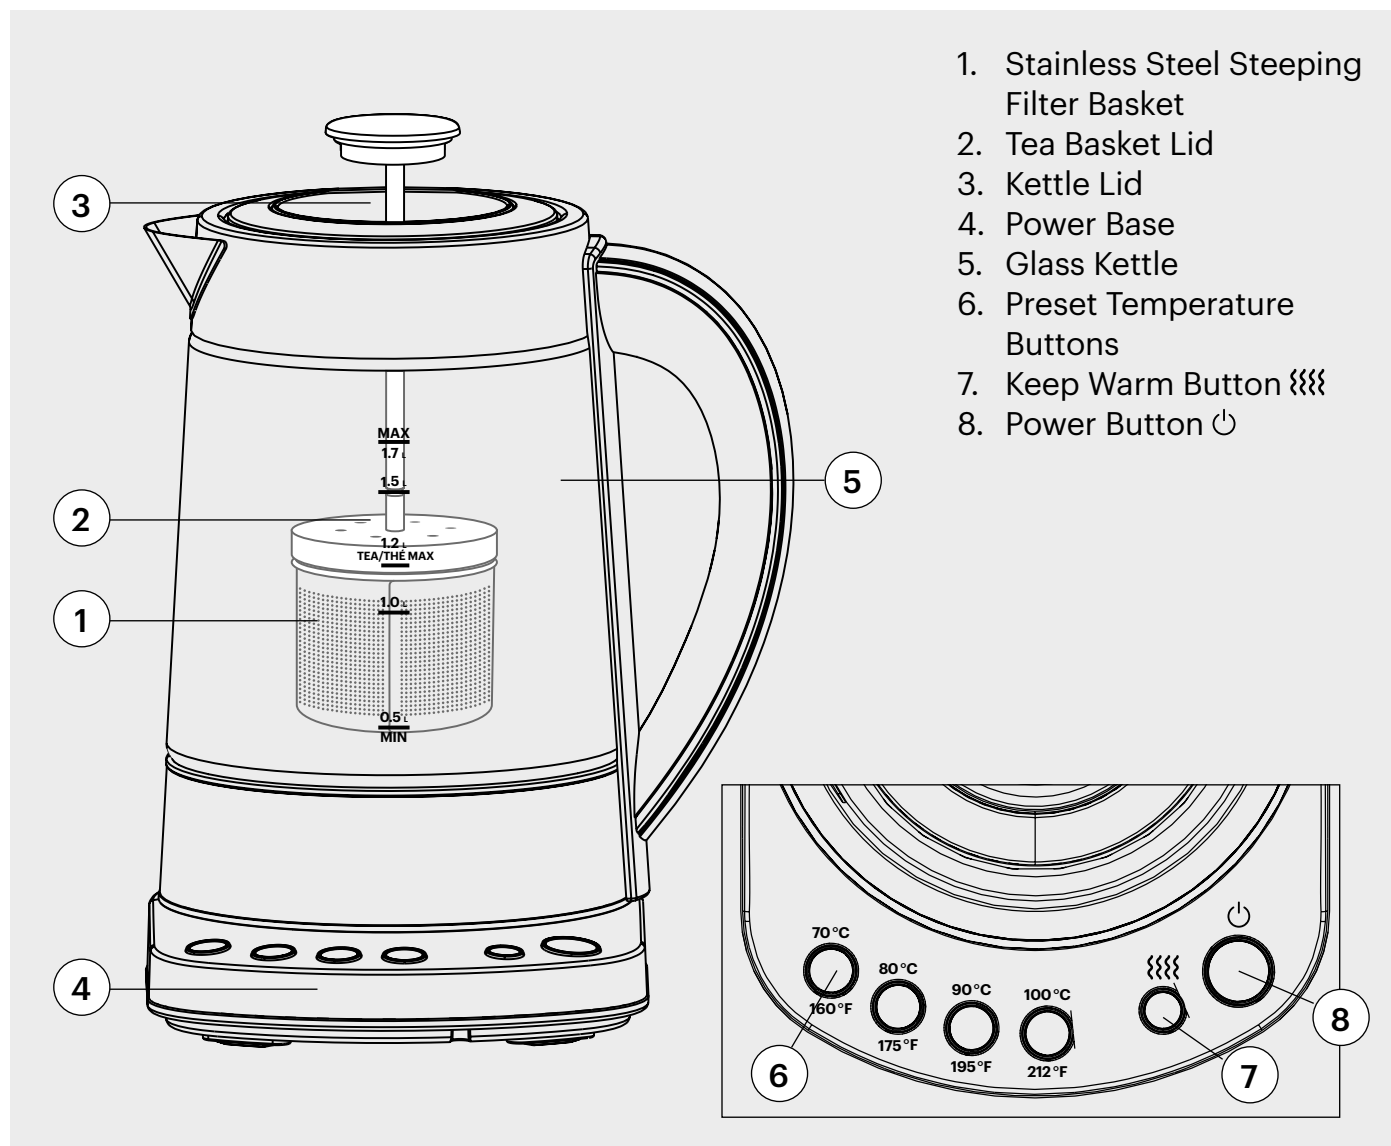

## Safety Warnings

- Proper precautions must be made to avoid burns from sprays of hot water or steam.
- Avoid touching any hot surfaces on the machine while the kettle is in use.

## Before Using Your Kettle

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

**NOTE:** The maximum capacity of the kettle is about 1.7 L/7 cups.

## Using Your Kettle

1. To start the unit: remove the glass kettle from the power base and remove kettle lid. If brewing tea, fill with desired amount of water. Ensure you do not fill past the maximum mark. Remove basket lid and fill the basket with tea leaves. As a general guide, use 1 scoop of tea leaves per 8 oz / 250 mL / 1 cup of water, however this will depend on the instructions on tea packaging and your personal preference. Press the power button; the unit will beep once and switch to standby mode. The indicator lights on the power button and the four temperature settings will turn on (160°F/70°C, 175°F/80°C, 195°F/90°C, 212°F/100°C).
2. To select temperature setting: press any preset temperature and the temperature indicator light will flash and the LED light ring will turn on indicating the water is heating to the selected temperature.
3. To select the keep warm function: press the keep warm button {{{ and the indicator light will remain ON. The unit will begin the keep warm function after the selected temperature is reached. During keep warm function, the indicator light will remain on. The keep warm function period is 30 minutes. To turn off the cycle, press keep warm {{{ again. After the completion of the keep warm cycle, the unit will beep 3 times to alert the user the cycle has ended. The cycle is complete, and the unit will shut off.
4. To turn off the unit:  
  
During operation, press the power button ⏻ to stop the current mode. Then the unit and all indicators lights will turn off.  
  
After the completion of heating and keep warm {{{, the unit will shut off automatically and all indicator lights will shut off.  
  
If no operation is begun within two minutes of turning the unit on, the unit and all indicator lights will automatically turn off.  
  
Note: During keep warm mode, if the kettle is removed from base and if the kettle is not placed back within one minute, the kettle will stop working and all indicator lights will turn off. If the kettle is placed back within one minute, the unit will remain in the previous working state.

## Boil-Dry Protection

If you accidentally operate the kettle without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

## Cleaning and Maintenance

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water or allow moisture to come in contact with these parts.
2. Wipe the body of the kettle with a mild, damp cloth or cleaner. Never use an abrasive cleaner.

**CAUTION:** Do not use chemicals, steel wool, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage to the finish.



**2-Year Limited Warranty:**

Starting from the date of purchase, Vida™ by PADERNO warrants that your product is free from any manufacturing defects in materials or workmanship for a period of two (2) years. This warranty is only offered on Vida™ by PADERNO products sold and used in Canada. The Vida™ by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at the discretion of Vida™ by PADERNO.

The Vida™ by PADERNO warranty does not apply to products that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida™ by PADERNO, are used. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

**CONTACT:**

For warranty inquiries or if you have any questions, please contact us at: 1 800 263 9768

TRILEAF DISTRIBUTION TRIFEUIL, 2180 Yonge Street, Toronto, ON, Canada, M4S 2B8

**A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.**