

2-Slice Toaster User Manual

SKU
043-0990-0
043-0995-0
043-1531-8

vida^{TM/MC}
by/par **PADERNO**



Table of Contents

Safety Instructions

Important Safety Instructions	04
Additional Important Safeguards	05
Notes on the Plug	06
Notes on the Cord	06
Plasticizer Warning	06
Electric Power	06

User Instructions

Getting to Know Your 2-Slice Toaster	07
Before Using for the First Time	07
How to Use the Toaster	07
Browning Control	08
Bagel Function.....	08
Defrost Function	08
High Lift Function	08
Cancel Function	08
Cleaning and Maintenance	08
Storing Instructions.....	08
Warranty.....	09

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.

2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest store for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. To disconnect, press the CANCEL button then remove plug from wall outlet.
13. Do not use appliance for other than its intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like when in operation.
16. Countertop use only

WARNING: ELECTRIC SHOCK HAZARD.

Never attempt to dislodge food inside the toaster while the toaster is plugged in. Doing so could cause an electric shock hazard or a risk of fire.

DO NOT try to put out a fire or flames with water: turn off the appliance, remove the plug from the socket and smother the flames with a fire blanket or any other appropriate means.

Use toaster in the upright position only.

DO NOT use toaster on its side—this may result in a fire. If toaster is knocked over while in use, unplug immediately.

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION, HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.

1. A person who has not read and understood all operating, toasting, and safety Instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels, or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately press the CANCEL button and unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged directly into a 120 V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. Use the toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the toaster could cause it to malfunction.
9. Do not operate unattended
10. When heating toaster pastries, always use the lightest toast colour setting.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the toaster while it is operating or while it is hot.

CAUTION:

DO NOT toast pastries with runny fillings or frosting.

DO NOT toast torn slices of bread.

DO NOT place buttered bread or wrapped food into the toaster.

DO NOT toast small-size breads, mini-baguettes, breadsticks, etc.

Use toaster in the upright position only.

DO NOT use toaster on its side—this may result in a fire. If toaster is knocked over while in use, unplug immediately.

DO NOT use with rice cakes, fried foods, frozen prepared foods, non-bread items or pastries.

DO NOT use with food that has any fatty substances (e.g., butter, jelly, frosting, cheese, etc.).

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

The provided short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Always plug directly into a wall outlet/receptacle.

- A. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 - 1. The marked electrical rating of the cord set, or extension cord should be at least as great as the electrical rating of the appliance;
 - 2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
 - 3. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

PLASTICIZER WARNING


CAUTION: We recommend placing HEAT RESISTANT non-plastic coasters or silicone place mats between the appliance and countertop or tabletop surface on which it is operated. This prevents additives such as plasticizers from migrating to the surface which in turn may cause permanent blemishes, staining, or darkening, of the surface.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Getting to Know Your 2-Slice Toaster

Product may vary slightly from illustration

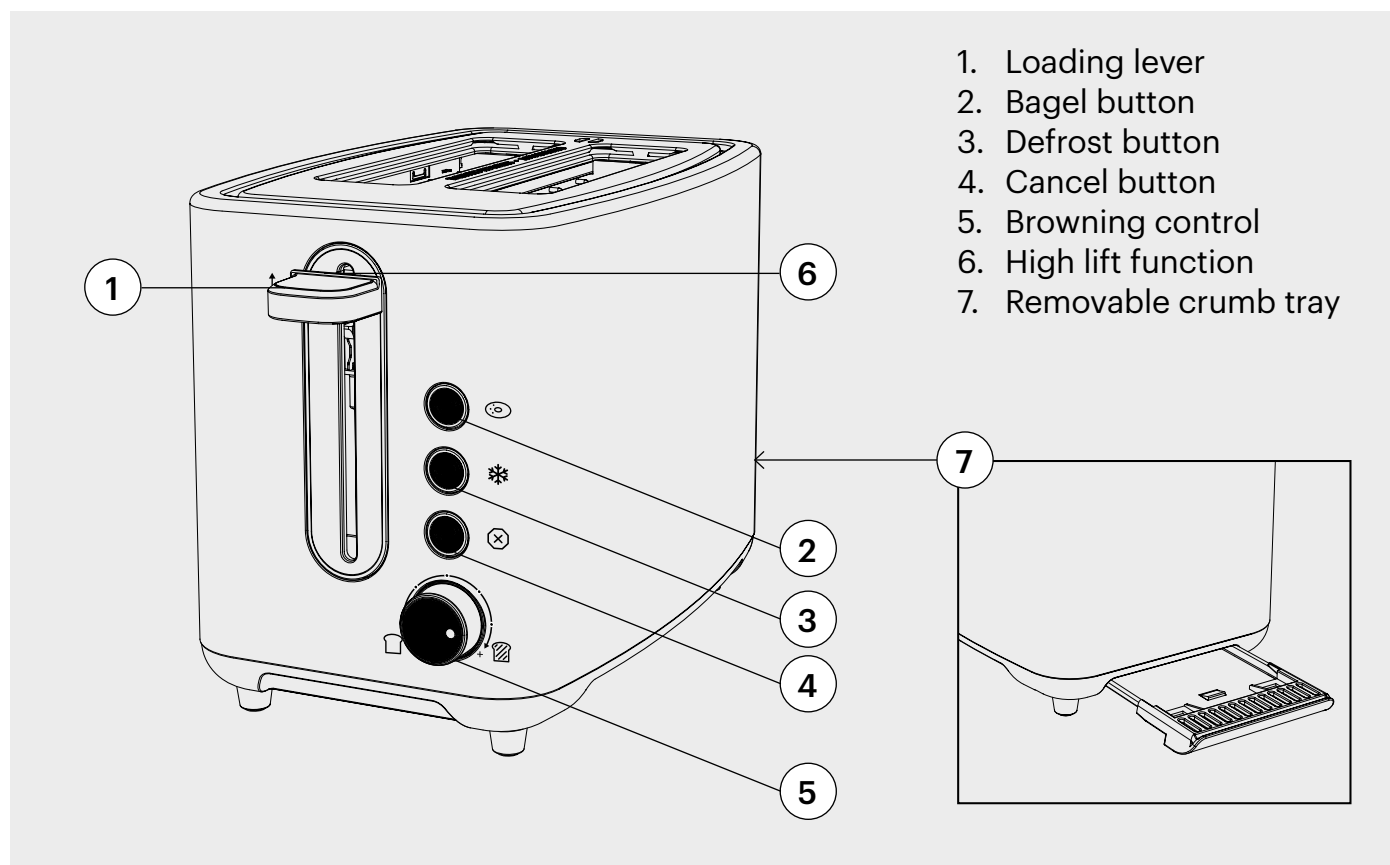

Before Using for the First Time

There may be manufacturing residue or oil remaining in the toaster or heating element, which might emit an odour at the time of the first use. This is normal and will not occur after several uses. It is suggested to operate the 2-slice toaster without bread for first use according to the below steps. Then let the toaster cool down before you start toasting the first slice.

How to Use the Toaster

1. Ensure the 2-slice toaster is connected to the mains power supply.
2. Place one to two slices of bread into the toasting slots and press the loading lever down until it latches. The 2-slice toaster will heat up automatically and start toasting.
NOTE: the 2-slice toaster must be connected to the mains power supply in order for the bread carriage to engage and for the toasting cycle to begin.
3. Adjust the browning control to brown the toast to your desired taste.
4. To stop toasting, press the CANCEL button at any time.
5. The loading lever will rise automatically when toasting is finished. This 2-slice toaster is equipped with a high lift lever to help with the removal of smaller items.
6. If the toast is not dark enough, you can toast the bread again. Adjust the browning control to your desired setting and replace the toast. Ensure the toast does not burn while re-toasting.


Browning Control

The browning control enables adjustment of toasting time and has the following settings:

To reheat bread you can keep the browning control at the light position and press down the lever.

The more the button is turned to the right, the darker the toast will be.

- For light toast, keep the browning position on the left side.
- For medium toast, position the browning control at the middle.
- For dark toast, position the browning control to the right side.

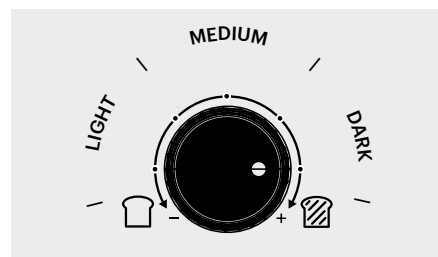

Bagel Function

The bagel setting works great for English muffins, too!

1. Place one half in each toasting slot with the cut sides facing the centre.
2. Set the browning control to desired setting.
3. Press the loading lever down.
4. Press the BAGEL button. The bagel indicator will light up. Ensure bagel doesn't burn.
5. The loading lever will rise automatically when the toasting cycle is complete.

Defrost Function

Your toaster can defrost bread and toast it in a single cycle.

1. Place the frozen bread in the toaster.
2. Set the browning control to desired shade setting.
3. Press the loading lever down.
4. Press the DEFROST button. The defrost indicator will light up.
5. The loading lever will rise automatically when the toasting cycle is complete.

High Lift Function

Allows the loading lever to be raised further for easier access to smaller breads. This ensures smaller pieces of bread and bagels can be removed easily.

Cancel Function

The CANCEL button can be pressed at any time during toasting to interrupt the toasting cycle.

CAUTION:

1. Remove all protective wrapping before using the 2-slice toaster.
2. If the 2-slice toaster starts to smoke, press CANCEL to stop toasting immediately.
3. Do not toast food with runny ingredients.
4. Never attempt to remove bread jammed in the slots without first unplugging the 2-slice toaster from the electrical outlet. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is to be used for toasting regular bread slices only. Do not use the 2-slice toaster to toast irregularly shaped bread as it may become lodged in the toaster.

Cleaning and Maintenance

1. Disconnect the 2-slice toaster from the outlet before cleaning.
2. Wipe the outside with a soft dry cloth after 2-slice toaster cools down. Never use metal polish.
3. Pull out crumb tray on bottom of the 2-slice toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is inserted correctly to the toaster and completely closed before using the toaster again.
4. The power cord may be wound under the bottom of the 2-slice toaster when not in use or for storage.
5. This appliance requires little maintenance. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

Storing Instructions

1. Unplug unit, allow to cool. Clean before storing.
2. Store toaster in its box in a clean, dry place.
3. Never store toaster while it is hot or still plugged in.
4. Never wrap cord tightly around the appliance. Use the cord storage area on the bottom of the toaster.
5. Be sure the crumb tray is pushed all the way into the back of the toaster.
6. Do not put any stress on the cord where it enters the unit as it could cause the cord to fray and break.

2-Year Limited Warranty:

Starting from the date of purchase, Vida™ by PADERNO warrants that your product is free from any manufacturing defects in materials or workmanship for a period of two (2) years. This warranty is only offered on Vida™ by PADERNO products sold and used in Canada. The Vida™ by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at the discretion of Vida™ by PADERNO.

The Vida™ by PADERNO warranty does not apply to products that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida™ by PADERNO, are used. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

CONTACT:

For warranty inquiries or if you have any questions, please contact us at: 1 800 263 9768

TRILEAF DISTRIBUTION TRIFEUIL, 2180 Yonge Street, Toronto, ON, Canada, M4S 2B8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.