

SKU
043-0992-6
043-0997-6
043-1532-6

14-Cup Programmable Coffee Maker User Manual

vida^{TM/MC}
by/par PADERNO



Table of Contents

Safety Instructions

Important Safeguards	04
Additional Important Safeguards	05
Notes On the Plug	05
Notes On the Cord	05

User Instructions

Getting to Know Your Coffee Maker	06
Before Using for the First Time	06
Operating Instructions	07
Cleaning and Maintenance	08
Descaling	08
Storing Instructions.....	08
Hints for Great Tasting Coffee.....	08
Warranty.....	09

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.

- To protect against fire, electric shock and injury to persons, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use appliance for other than intended use.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- To disconnect, turn any control to "Off" remove plug from wall outlet.
- Scalding may occur if the lid is removed during the brewing cycles. Be careful not to get burned by the steam.
- Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
- Do not set a hot carafe on a wet or cold surface.
- Do not let the coffee maker operate without water.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Make sure the carafe is placed on the warming plate correctly during the brewing.
- To reduce the risk of fire or electrical shock, do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

ADDITIONAL IMPORTANT SAFEGUARDS

NOTES ON THE PLUG

This appliance has a polarized plug. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

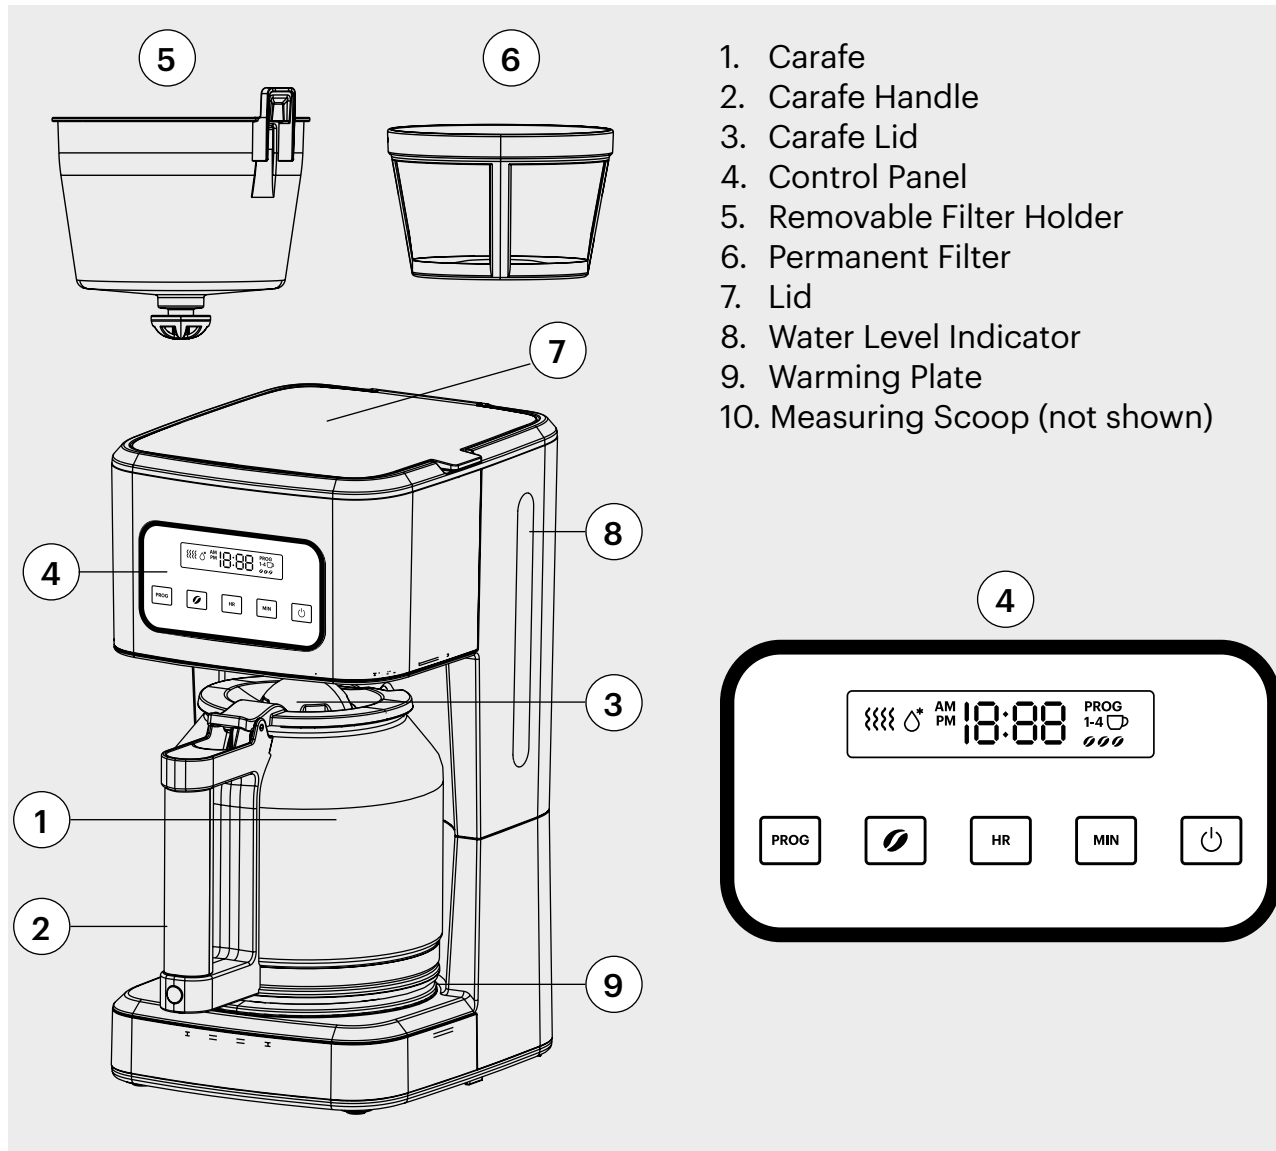
NOTES ON THE CORD

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 2. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 3. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

Getting to Know Your Coffee Maker

Product may vary slightly from illustration



1. Carafe
2. Carafe Handle
3. Carafe Lid
4. Control Panel
5. Removable Filter Holder
6. Permanent Filter
7. Lid
8. Water Level Indicator
9. Warming Plate
10. Measuring Scoop (not shown)



Before Using for the First Time

Check that all accessories are included and the unit is not damaged. Add water into the water tank to the max level and brew several times without any coffee, then discard the water. Clean all detachable parts such as filter, removable filter holder and the carafe with warm, soapy water.


Set the Clock

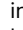 

1. Press and hold the HR or MIN button for about 2 seconds to enter the clock setting mode. The display will show the time currently set, and keep flashing.
 2. Press the HR button once, the display will show "AM 12:00". Increase the time in one hour increments by pressing the HR button. Press and hold the HR button for about 2 seconds to increase the hour faster.
 3. To set the minutes, press the MIN button to increase the time in one minute increments. Press and hold the MIN button for about 2 seconds to increase the minutes faster.
- NOTE:** Increase the hour setting past 12 to change from AM to PM.
4. The clock time will be confirmed 5 seconds after setting the clock.
 5. To reset the clock, press and hold the HR or MIN button for about 2 seconds and then follow the above instructions to set the clock again.

Operating Instructions

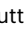 
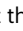 
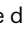 


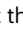 
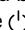 
1. Open the top lid and fill the water tank with the desired amount of water. The water should not exceed the maximum mark indicated on the water level indicator.
NOTE: The coffee output will be less than the water added as some water will be absorbed by the ground coffee.
WARNING: Never pour hot water, ground coffee, tea, etc., into the water tank.
2. Put the permanent filter into the removable filter holder and then place it into the coffee maker.
3. Add medium ground coffee into the filter. For each cup of coffee desired, add one levelled scoop of coffee. You may adjust with more or less coffee according to personal taste, and then close the lid.
4. Place the glass carafe onto the warming plate and ensure the centre line of the glass carafe aligns with the pause and serve valve.
5. Follow the instructions **Set The Brew Strength** to select the desired brew strength.
6. Press  button once. The  indicator light illuminates in white and one beep will be heard. The coffee maker starts to brew coffee until the water in the water tank is gone.

NOTE: The coffee maker is designed with a pause-and-serve feature. You can temporarily remove the glass carafe to pour and serve a cup of hot coffee at any time during the brewing cycle. The brewing cycle will not be interrupted and no coffee will drip from the coffee maker. Simply replace the glass carafe onto warming plate for the rest of the brewing cycle. Do not remove the glass carafe for more than 30 seconds. If removed for more than 30 seconds, coffee will begin to overflow. Never replace an empty glass carafe onto the warming plate when it is still warm.

NOTE: Press the  button at any time during the brewing cycle to stop brewing and go back to the standby mode.

7. Once brewing is completed, the coffee maker will enter into the keep-warm mode. The display shows  and the keep-warm time starts to count up from "0:00", the default keep-warm time is 2 hours. Follow the instructions **Set The Keep-Warm Time** to adjust the desired keep-warm time.
8. Once the keep warm cycle  is complete, two audible beeps will sound and the coffee maker will return to the standby mode.
9. Remove the glass carafe to serve when brewing is complete. For an optimal coffee taste, serve right after brewing.
10. Clean the appliance by following the instructions **Cleaning and Maintenance**.
11. Always turn the coffee maker off and unplug the unit when not in use.
12. If you do not want the coffee maker to start brewing coffee immediately, follow the instructions **Set The Auto-Start Program** to activate the auto-start function.

Set the Brew Strength

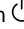 
Press the strength  button to select the desired brew strength. There are four settings: , ,  and 1-4 . The default brew strength is . To confirm the strength, press the  button once. The coffee maker will start to brew coffee.

Set the Auto-Start

The coffee maker can be programmed to begin brewing up to 24 hours in advance. **WARNING: Make sure the coffee maker is set up to brew coffee. Fill the water reservoir, add fresh ground coffee to the permanent filter basket, close the lid and place the empty carafe with lid in the centre of the warming plate.**




1. Press and hold the PROG button for about 2 seconds. The PROG, HR and MIN white indicator lights illuminate and the display shows PROGRAM. The coffee maker will enter into the auto-start program mode.
2. Follow the instruction in **Set The Clock** to set the auto-start time.
NOTE: Increase the hour setting past 12 to change from AM to PM.
3. Once the time is set, setting the time, wait 5 seconds or press PROG button again to confirm the auto-start time.

NOTE: To brew coffee at the same time the next day, press the PROG button. The PROG button will illuminate, the LCD will display "PROG", the programmed start time and strength. The coffee maker is now programmed to auto start. Press the PROG button again to cancel the auto start function and return to the standby mode.

4. When the pre-programmed time is reached, the PROG icon on the display will disappear, the indicator light on the PROG button will also turn off, the power button  indicator light will illuminate, and the coffee maker will begin to brew.





Set the Keep-Warm Time



KEEP WARM  time defaults to 2:00 hours but can be adjusted from 00:00 minutes up to 4:00 hours. To adjust the keep-warm time :

1. Press and hold the  button for about 2 seconds to enter the keep-warm function. The default keep-warm time "2:00" will begin to flash on the display.
2. Press the HR button to set the hour. Time can be adjusted in 1 hour increments.
3. Press the MIN button to set the minute: time can be adjusted in 15 minute increments.
4. After setting the keep-warm  time, if no further selection is made, the keep warm  time will be confirmed in 5 seconds.

Cleaning and Maintenance

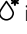 
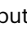 
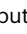 
CAUTION: Be sure to unplug the coffee maker before cleaning and let the coffee maker cool down completely. To protect against electric shock, do not immerse cord, plug or unit in water or liquid.

1. Clean all detachable parts such as the removable filter holder, permanent filter and carafe with warm, soapy water after each use.
2. Push the pause and serve valve upwards 3-4 times to empty any residual water.
3. Wipe down the external surface with a soft, damp cloth to remove any stains.
4. Water droplets may build up in the area above the permanent filter and the removable filter holder and drip onto the coffee maker base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
5. The coffee maker has a cleaning reminder indicator, and the display will show  to remind you to clean the coffee maker after the unit has been operated for 60 cycles. To perform the cleaning, press and hold the "HR" and "MIN" buttons for about 2 seconds to enter the cleaning mode. The display will show . Press the  button and the indicator light will illuminate, one audible beep will sound, and the coffee maker will start the cleaning cycle. After the cleaning cycle is complete, one audible beep will sound and the  shown on the display disappears.

NOTE: Press and hold the (HR and MIN) buttons for 2 seconds to enter the cleaning function. The  symbol will be displayed on the main screen. If the  button is not pressed within 5 seconds, the clean symbol will disappear and return to standby mode.
6. Replace all parts and keep for next use.

Descaling

Deep cleaning of your coffee maker is recommended at least once a month, depending on frequency of use and quality of water used in the unit. If water in your area is especially hard or well water, the following cleaning procedure should be performed every 2 weeks since minerals in water can detract from the flavour of the coffee and possibly lengthen brew time.

1. Fill carafe with 1 part white vinegar to 3 parts cold water. Pour water and vinegar solution into the water reservoir.
2. Make sure the carafe lid is in place, and place the empty carafe on the warming plate.
3. Press and hold both the HR and MIN buttons until the  icon appears on the LCD screen.
4. Press the  button to start the cleaning cycle. The  button will turn on with a beep.
5. Once the cleaning cycle is complete, the unit will return to the standby mode.
6. Discard the water and vinegar solution from the carafe and water tank.
7. Repeat the brew cycle 2-3 times with cold water before brewing coffee again.

Storing Instructions

1. Unplug unit and allow to cool.
2. Store coffee maker in its box or in a cool, dry place.
3. Never store unit while it is still plugged in.

Hints For Great Tasting Coffee

- A clean coffee maker is essential for making great tasting coffee. Regular cleaning, as described in the Care and Cleaning Instructions and Descaling sections of this Instruction Manual is highly recommended.
- Always use fresh, cold water in your coffee maker.
- Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee flavour, buy whole beans and grind them to a medium grind just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavour.
- Reheating coffee is not recommended. Coffee is at its peak flavour immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Overextraction may also cause oiliness, indicating a need to clean your coffee maker.

2-Year Limited Warranty:

Starting from the date of purchase, Vida™ by PADERNO warrants that your product is free from any manufacturing defects in materials or workmanship for a period of two (2) years. This warranty is only offered on Vida™ by PADERNO products sold and used in Canada. The Vida™ by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at the discretion of Vida™ by PADERNO.

The Vida™ by PADERNO warranty does not apply to products that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida™ by PADERNO, are used. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

CONTACT:

For warranty inquiries or if you have any questions, please contact us at: 1 800 263 9768

TRILEAF DISTRIBUTION TRIFEUIL, 2180 Yonge Street, Toronto, ON, Canada, M4S 2B8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.