 


MASTER
Chef™

HAND MIXER

Model no. 043-1000-2

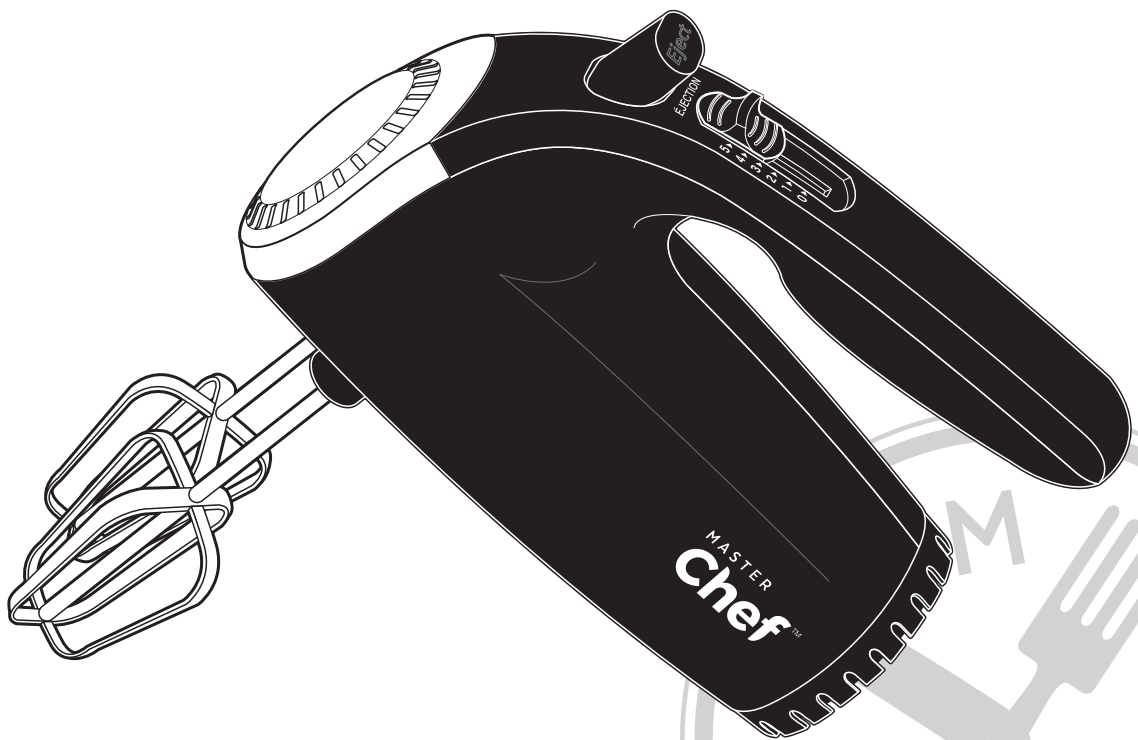

INSTRUCTION MANUAL

Read this manual thoroughly before using and save it for future reference.

Model no. 043-1000-2 | Contact us: 1-855-803-9313

Important Safeguards	2
Know your Hand Mixer	4
Before First Use	5
Using your Hand Mixer	5
Mixing Guide	7
Cleaning your Hand Mixer	7
Limited Warranty	8

Trileaf Distribution Trifeuil, Toronto, Canada M4S 2B8

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- 1. READ ALL INSTRUCTIONS CAREFULLY.**
- To protect against risk of electric shock, do not put mixer, cord or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to person and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
- Do not place on or near a hot gas or electric burner or in a heated oven.

11. To disconnect, turn the control to off, grasp plug and remove it from wall outlet. Never yank the cord to remove the plug.
12. Remove beaters from mixer before washing.
13. Do not use this appliance for other than intended use.
14. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
15. **Never leave appliance unattended while it is plugged into an outlet.**

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be equal to or greater than the rating of this appliance. The label with the electrical rating is located on the underside of the appliance.
4. Avoid pulling or straining the power cord at outlet or appliance connections.




POLARIZED PLUG

1. This appliance has a polarized plug (one blade is wider than the other).
2. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, please contact a qualified electrician. Do not attempt to modify the plug in any way.

WARNING: Improper use of the power cord may result in the risk of electric shock. Consult a qualified electrician if necessary.

Model no. 043-1000-2 | Contact us: 1-855-803-9313

 Know your Hand Mixer

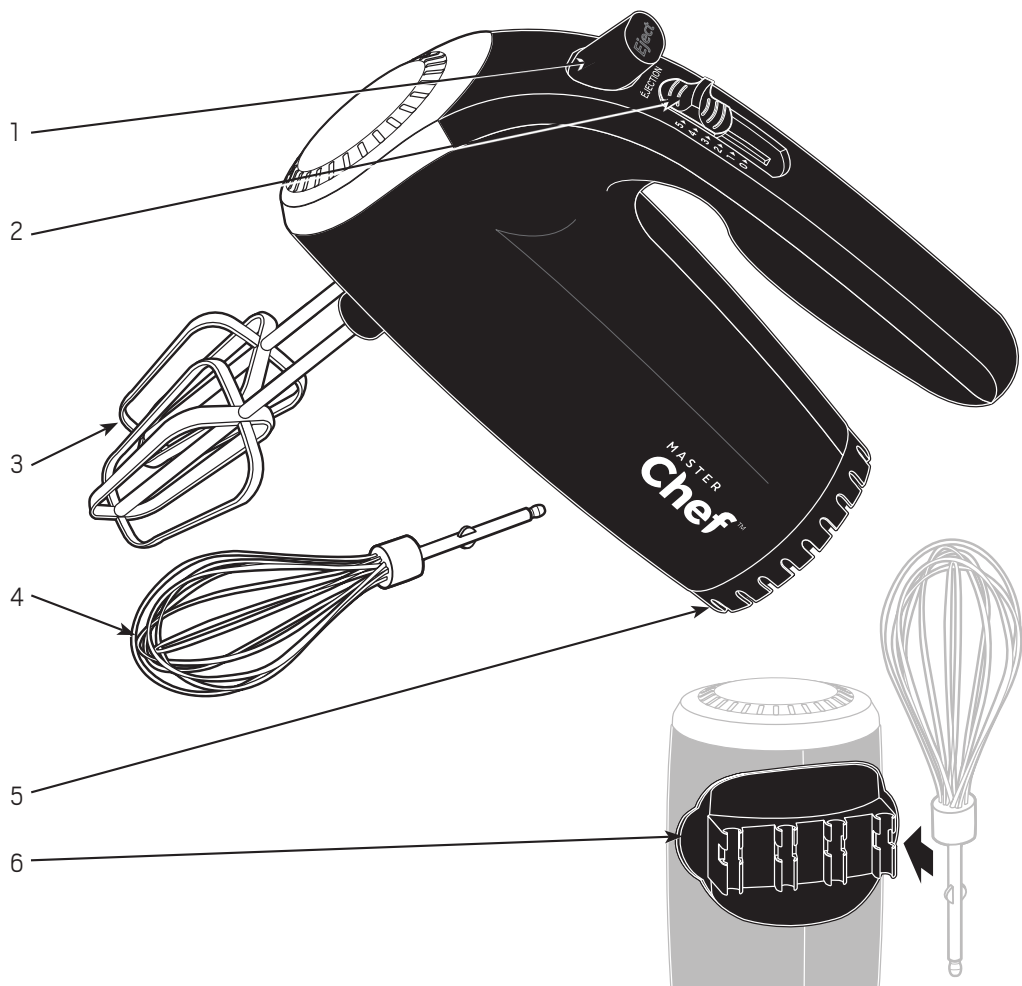

RATING: 120 V, 60 Hz, 150 W, AC ONLY

1		Beater Eject Button
2		Speed Selector Switch
3	*	Beaters (2)

4	*	Whisk (1)
5		Heel Rest
6	*	Accessory Clip

 
* denotes parts available for replacement. Call 1-855-803-9313 for ordering details.

Carefully unpack the hand mixer, beaters and whisk and remove all packaging materials. Set the mixer on a clean, dry table or counter. Wash the beaters and whisk in warm, soapy water. Dry thoroughly. The mixer may be wiped with a clean, damp cloth. Do not immerse the mixer body, cord or plug in water.

INSERTING BEATERS AND WHISK

Be sure the unit is unplugged before inserting beaters or whisk. Please note that the whisk is designed to fit in the mixer only one way. See fig. 1.

Firmly grasp the mixer by the handle. Insert the whisk into the left (smaller) opening. Push the whisk in as far as it will go. The whisk will click as it locks into place. Plug the mixer into a 120 volt 60 Hz AC only outlet. Your mixer is now ready to use.

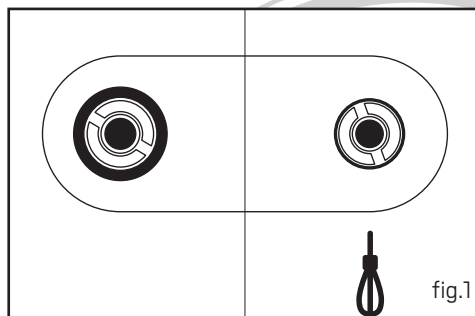

REMOVING BEATERS

Your hand mixer has a beater eject button to allow easy removal of the beaters and whisk. Be sure the unit is unplugged and the speed switch is set to "OFF" before removing the beaters or whisk. With one hand holding the beaters or whisk, press the eject button. The beaters/whisk will drop out of their locks for easy cleaning.



CAUTION: Never insert whisk with a beater. Whisk is to be used on its own.

Model no. 043-1000-2 | Contact us: 1-855-803-9313

CONTROLLING THE MIXER SPEED

To operate your hand mixer, simply move the speed selector switch from the “OFF” position to the desired speed. Your mixer will beat at the speed level you have selected. See fig. 2.

During operation, it is possible to alter the speed of the mixer by selecting a new speed setting. Your mixer has 5 speed levels (1 to 5).

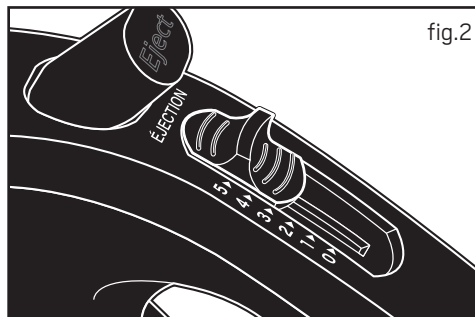 


fig.2

STORAGE ACCESSORY CLIP

To attach accessory clip, match the pins on the underside of the clip to the corresponding beater holes on the motor housing. See fig. 3.

Clip beaters and whisk into the shaft holders on the accessory clip. See fig. 4.

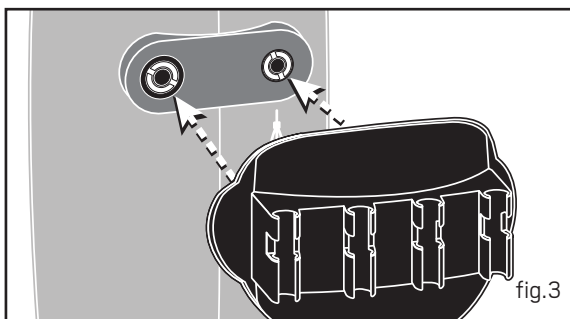 


fig.3

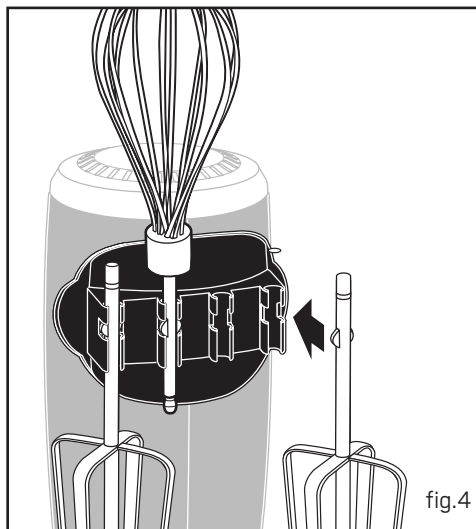 


fig.4

INTERRUPTING THE MIXING PROCESS

To stop your mixer, simply move the speed selector switch to the “OFF” position. This will stop the beaters' rotation.

Your mixer has been designed with a heel rest to make mixing easier. Lift the mixer up from your mixing bowl. Stand the mixer on its heel with the beaters positioned over the mixing bowl. This will allow the batter to drip directly into the bowl. You may now add other ingredients as necessary. Resume mixing whenever you are ready.



CAUTION: To prolong the life of your mixer, avoid getting flour into the air vents. Do not use the mixer for more than 5 minutes consecutively. After 5 minutes of use, allow the mixer to rest for a few minutes before continuing to mix ingredients.

SPEED	SUGGESTED USES
1	Folding in delicate ingredients. Mixing dry ingredients.
2	Stirring liquids or pastry. Blending liquids.
3	Blending ingredients, such as butter and sugar. Mixing batters, such as quick breads.
4	Mixing cake mixes and thick batters.
5	Mashing potatoes.
Use whisk attachment	Beating egg whites, whipping cream and meringue.

Be sure mixer is unplugged before cleaning. Remove beaters or whisk from mixer and wash in warm soapy water. The mixer body may be wiped clean with a damp cloth.



CAUTION: Do not immerse the cord, plug or mixer body in water or other liquid.

Model no. 043-1000-2 | Contact us: 1-855-803-9313

1-Year Limited Warranty

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by

Trileaf Distribution Trifeuil, Toronto, Canada M4S 2B8

For assistance regarding this appliance, please call 1-855-803-9313.

