

MASTER
Chef™


12-CUP COFFEE MAKER

Model no. 043-1002-8



INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.

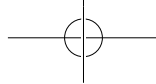

Model no. 043-1002-8 | Contact us: 1-855-803-9313


Important Safeguards	2-3
Know Your Coffee Maker	4
Using Your Coffee Maker	5
Removing Mineral Deposits	6
Cleaning and Maintenance	7
Warranty	8

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

 1. Read all instructions before using. Save these instructions for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquids.
5. Remove plug from power outlet before cleaning and when not in use. Allow appliance to cool down completely before attaching or removing components, or before cleaning.
6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock and/or personal injury.
7. The carafe is designed for use with this appliance. It must not be used on a range top.
8. Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
9. Do not let the power cord hang over the edge of tables or counters, or touch hot surfaces.
10. Do not place the coffee maker on a hot surface or beside fire to avoid damage.
11. To disconnect, remove plug from power outlet. Always hold the plug when removing from power outlet. Never pull the cord.
12. Do not use appliance for other than its intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used near children.
14. Be careful not to get burned by the steam.
15. To disconnect, turn any control to "Off", then remove plug from power outlet.
16. Do not let the coffee maker operate without water.
17. Never use the appliance if the carafe shows any signs of cracks or a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
18. Scalding may occur if the cover is removed during the brewing cycles.
19. Some parts of appliance are hot when operated, so do not touch parts with hands. Use handles or knobs only.
20. Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
21. This appliance has been incorporated with a grounded plug. Please ensure the power outlet in your house is well grounded.
22. Do not set a hot carafe on a hot or cold surface.
23. Do not use outdoors.
24. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
25. Save these instructions.






4

5

Model no. 043-1002-8 | Contact us: 1-855-803-9313

MASTER
Chef™

 Know Your Coffee Maker

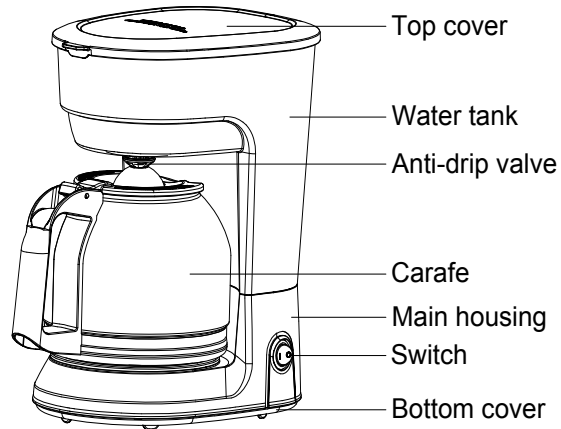

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



Notes on the cord

- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
 - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

BEFORE FIRST USE

Check that all accessories are complete and the appliance is not damaged. Add water into the water tank to the MAX level and brew water for several times without ground coffee, then discard the water. Clean all detachable parts thoroughly with water.

NOTE: The max capacity of coffee maker is 1.8 L.

- Open the top cover and fill the water tank with fresh water. The water level should not exceed MAX level as indicated on the water level gauge.
- Place the funnel into the funnel support, ensuring it is positioned correctly, otherwise the top cover will not close. Place a paper filter into the funnel. Add ground coffee to the paper filter. Usually one cup of coffee requires one level spoon of ground coffee, but adjust according to desired brew strength. Close the top cover completely.
- Insert the carafe on the warming plate.
- Plug the power cord into the outlet.
- Press **ON/OFF** switch to the "I" position, the indicator will be illuminated. The appliance will start brewing.

- The brewing process can be interrupted by pressing **ON/OFF** switch to the "O" position at any time. The appliance will continue brewing once the **ON/OFF** switch is pressed to the "I" position.

Note: The carafe can be removed to pour and serve at any time. The appliance will stop brewing automatically. The carafe should be put back on the warming plate within 30 seconds.

- Remove carafe to serve when brewing is finished.

Note: The coffee you get will be less than the water you have added, as some water is absorbed by the ground coffee. DO NOT touch cover or warming plate as they are very hot after brewing.

- When the brewing process is finished, if you do not want to serve immediately, keep the coffee maker on and the coffee will be kept warm on the warming plate until you unplug the appliance.

- Always turn the coffee maker off and disconnect the power supply when not in use.

Note: Use caution when pouring the coffee. Coffee will be hot and may cause injury.

Using Your Coffee Maker

Model no. 043-1002-8 | Contact us: 1-855-803-9313

MASTER
Chef™



NOTE:

You can remove the carafe, pour and serve at any time. The appliance will stop dripping automatically. The carafe should be placed back on the warming plate within 30 seconds.

- 7) Remove carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)



NOTE:

The coffee you get will be less than the water you have added, as some water is absorbed by the ground coffee. DO NOT touch cover, keep warm plate when brewing as they are very hot.

- 8) When the process is finished, if you do not want to serve immediately, the coffee can be kept warm on the warming plate until you unplug the appliance. For an optimum coffee taste, serve it just after brewing.

- 9) Always turn the coffee maker off and disconnect the power supply when not use.



NOTE:

Use caution when pouring coffee as it will be hot.

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water. Follow these directions:

1. Fill the tank with water and descaler to the MAX level (the proportion of water and descaler is 4 to 1. Use a "household descaler", and refer to the instructions on the package of the descaler. Citric acid can also be used in place of a descaler.).
2. Make sure the filter is free of any coffee.
3. Press the ON/OFF switch to "I" position. The indicator will be illuminated. The appliance will begin brewing.
4. Brew about two cups of coffee.
5. Press the ON/OFF switch to the "O" position to stop the unit immediately, leave the descaler in the unit for at least 15 minutes.
6. Restart the unit and repeat steps 3-5 at least 3 times.
7. To rinse the machine, brew with tap water at least 3 times..



CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug in water or liquid. After each use, always make sure plug is first removed from power outlet.

- 1) Clean all detachable parts after each use in hot water with soap.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may build up in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
- 4) Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaners to clean it.
- 5) Replace all parts and keep for next use.

1-Year Limited Warranty

 
 

This product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.

This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

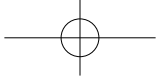

Customer service hotline:
Masterchef Tel: 1-855-803-9313

