


MASTER  
**Chef™**


# 1.7 L CORDLESS KETTLE

 Model no. 043-1004-4

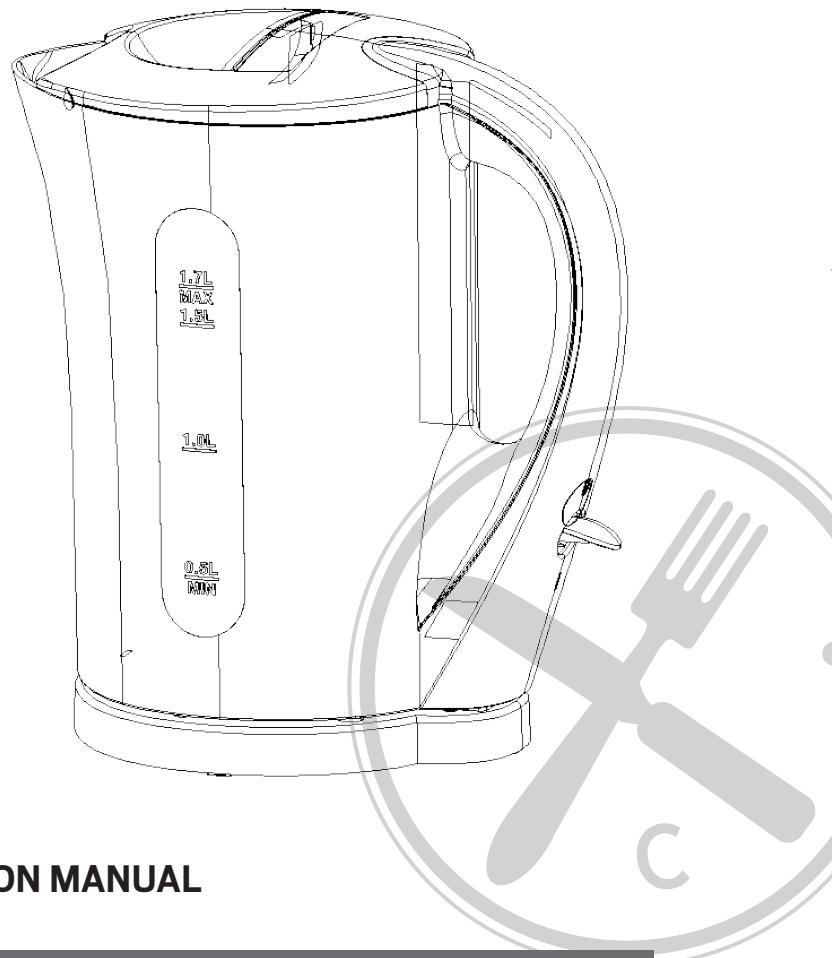

## INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.



Model no. 043-1004-4 | Contact us: 1-855-803-9313

MASTER  
**Chef**™

## Table of Contents

Important Safeguards	2
Know Your Electric Kettle	4
Before Using Your Kettle	5
Using Your Electric Kettle	5
Boil-Dry Protection	6
Cleaning and Maintenance	6
Removal of Mineral Deposits	7
Warranty	7

## IMPORTANT SAFETY INSTRUCTIONS

 
When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than its intended use.
4. Do not operate the appliance without load to avoid damaging the heating elements.
5. Unplug from the power outlet when not in use.
6. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid any damage or injury.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.


## Important Safeguards

11. Always take care when pouring boiling water. Pour slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play with it.
17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
18. Avoid contact with steam coming from the spout when water is boiling or just after it has switched off.
19. Unplug from power outlet when not in use and before cleaning. Allow it to cool before attaching or removing parts and before cleaning the appliance.
20. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed when boiling.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than its intended use.
23. Do not move the unit while the kettle is switched on.
24. The kettle can only use with the base provided.
25. If the kettle is overfilled, boiling water may spill out.
26. Do not use the kettle outdoors.
27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance.
29. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
30. Save these instructions.
31. This appliance has been incorporated with a grounded plug. Please ensure the power outlet in your house is grounded.

## Important Safeguards



Model no. 043-1004-4 | Contact us: 1-855-803-9313

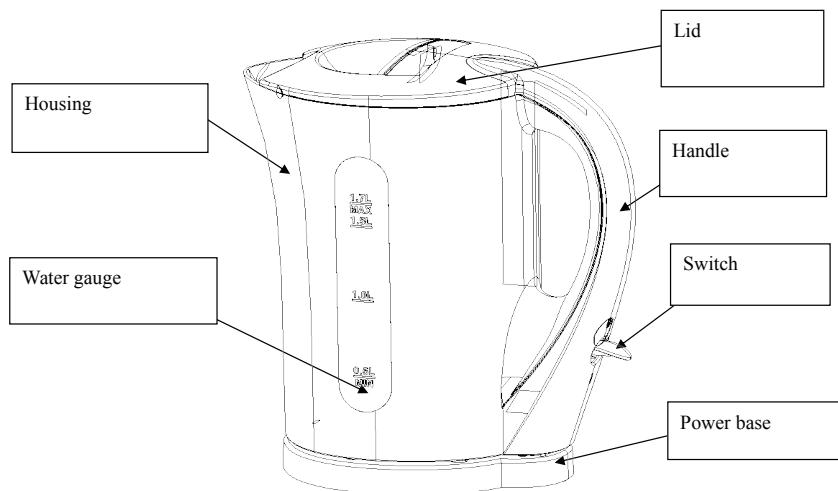

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



### Notes on the cord plug:

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### Notes on the cord

- a) A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
  - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

MASTER  
**Chef**™

### Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discard the water.

### Operation

1. To add water in the kettle, remove it from the power base and open the lid by lifting the lid handle. Fill with the desired amount of water. Always fill the kettle between the minimum (0.5 L) and maximum (1.7 L) marks. Too little water will result in the kettle switching off before the water has boiled.



**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power cord into the power outlet.

2. Close the lid. Position the kettle on the power base. Make sure the kettle is positioned correctly on the power base.
3. Plug into power outlet. Press the switch down to "I" position and the switch light will illuminate. The water will start to boil. The kettle will switch off automatically once the water has boiled and the switch light turns off. You can shut off the power by pressing the switch at any moment to stop the boiling process.



**NOTE:** Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is obstructed or if the lid is open.

4. Lift the kettle from the power base and then pour the water.

 


**NOTE:** Use caution when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid as the water in the kettle is hot.

5. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.



**NOTE:** Always disconnect the power supply when not in use.



Model no. 043-1004-4 | Contact us: 1-855-803-9313

#### Boil-dry protection

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

#### Care and cleaning

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to come in contact with these parts.

#### Cleaning external housing

Wipe the external housing with a damp cloth or cleaner.

**CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.**

#### Cleaning the filter

Remember to clean the filter with a damp cloth after a few uses.

#### Storage

When not in use or in storage, the power cord may be wound around the cord storage under the base of kettle.

#### Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolour. To remove this build-up, use non-toxic liquid descaler.

#### Alternatively:

1. Fill the kettle with 3 cups of white vinegar and liquid descaler stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle is ready to use.

#### 1-Year Limited Warranty

 
This product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.

This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8



Customer service hotline:  
Masterchef Tel: 1-855-803-9313

