


MASTER
Chef™

 
500W Blender

Model no. 043-1034-2

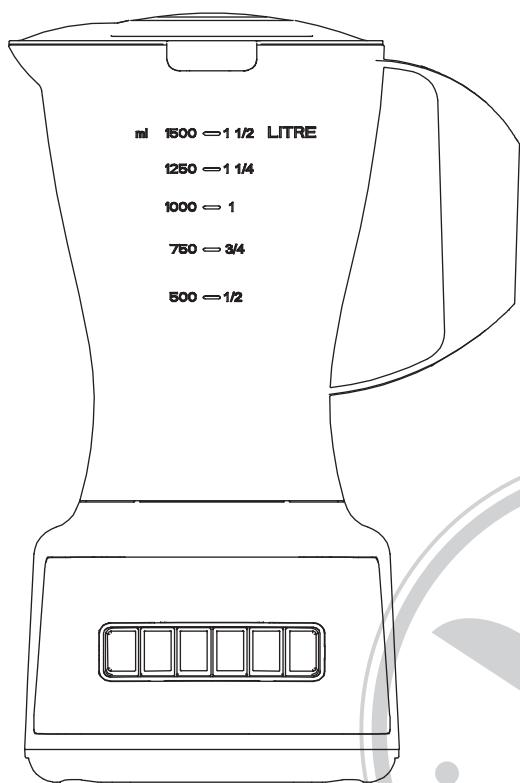

INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.



Model no. 043-1034-2 | Contact us: 1-855-803-9313


MASTER
Chef™


IMPORTANT SAFEGUARDS	2-3
KNOW YOUR BLENDER	4
SWITCH BUTTONS	4
USING YOUR BLENDER	5-6
IMPORTANT OPERATING TIPS	7
CLEANING AND MAINTENANCE	8
WARRANTY	9

IMPORTANT SAFEGUARDS



When using this electrical appliance, basic safety precautions should always be followed, including the following:

 1. Read all instructions being using. Save these instructions for future reference.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damage, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contact with the moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from power outlet when not in use, before attaching or removing parts, and before cleaning. To disconnect, turn controls to "off", then remove plug from power outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance should not be used by children. Keep the appliance and its cord out of reach of children.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.
14. Do not leave the machine on unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
19. Do not use outdoors.
20. Do not use appliance for other than its intended use.
21. Do not operate without lid in place;
22. Avoid any contact with blades or moveable parts.
23. Switch off the appliance and disconnect from power outlet before changing accessories or touching parts that move while in operation.
24. Always disconnect the appliance from the power outlet when not in use, and before assembling, disassembling or cleaning.
25. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
26. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
27. Use caution when pouring hot liquids into the blending jar as it can be ejected out of the blending jar due to a sudden steaming.
28. To protect against electrical shock do not immerse cord, plugs, portable appliances or other specific part or parts in water or other liquid.

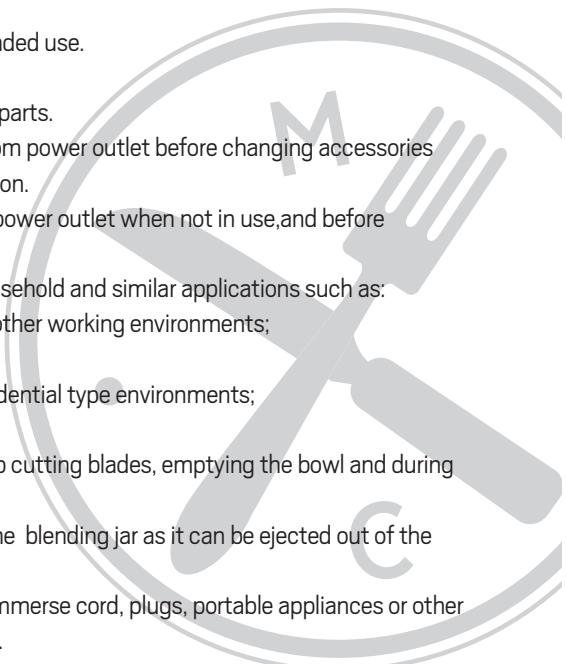



Model no.043-1034-2 | Contact us: 1-855-803-9313

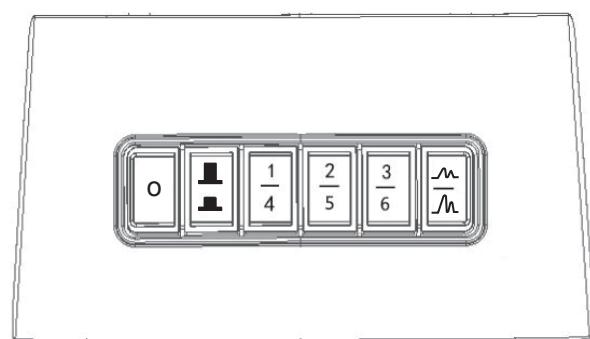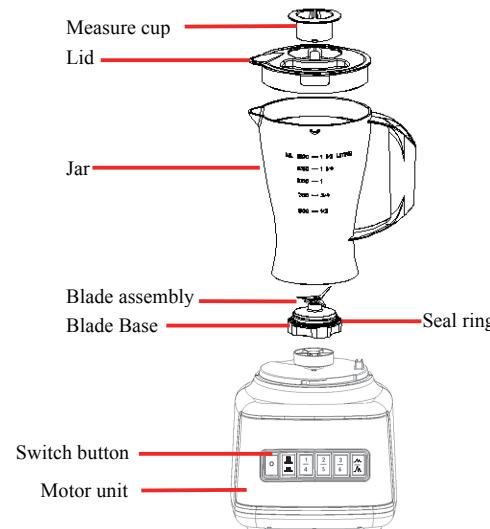

○ OFF

■ Low speed

■ High speed

■ Pulse

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY




POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify in any way.

Before first use

1. Unpack the appliance and place all parts on a flat, level surface.
2. The jar assembly (including the measure cup, lid, jar, seal ring, blade assembly and blade base) has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the section on Cleaning and Maintenance.
3. Once all pieces have been cleaned and dried thoroughly, reassemble.
 - 1) Invert the jar onto a level surface, holding the jar handle, put the seal ring and blade assembly onto the jar base bottom and secure the blade assembly by turning it counter-clockwise until tight (See Fig.1).
 - 2) Reposition the jar assembly with its opening upwards and put the lid onto the jar assembly. Place the measure cup into the lid by fitting the small knob on the both sides of the cup into the slots of the lid and turning the cup clockwise until tight. (See Fig.2).
 - 3) Place the assembled jar onto the motor unit by aligning the strip on the assembled jar bottom. (See Fig.3).

CAUTION: Jar and jar base is now secure. Do not try to twist the jar and jar base onto motor unit

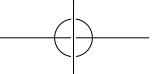

Model no. 043-1034-2 | Contact us: 1-855-803-9313

Using Your Blender

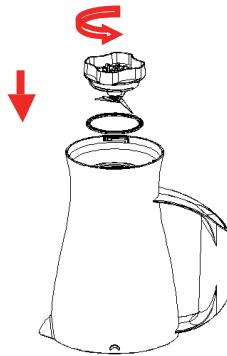


Fig.1

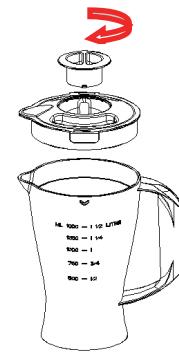


Fig.2

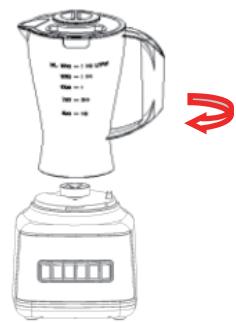


Fig.3

1. Peel and core fruits and vegetables, then dice before adding to jar.
2. Place the food to be blended into the jar (See Fig. 4). It is recommended to add some water to help blending of food. The proportion of the food and water is 2 to 3. The amount of mixture should not exceed the max level as indicated on the jar.

RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc.)	Cut into 15 mm (1/2") cubes.	Carrot: 600g Water: 900g	High speed



NOTE:

Never use boiling liquids or run the appliance empty.

3. Put the lid on the jar. Be sure the measuring cup is in place.
4. Plug the power cord into the power outlet.
5. Choose to the appropriate speed setting for your task.
6. For quick or delicate blending tasks, press the key to "■" position and hold "■" for a few seconds and then release. Operate several times until the consistency you want is obtained.
7. If you want to add ingredients while the blender is running, remove the measuring cup and place ingredients through the lid opening. (See Fig.5).
8. When crushing ice or hard food, keep one hand firmly on the lid.

9. When the consistency you desire is obtained, press the key to "O" position.
- 1) Blending time should not exceed 3 minutes. Allow at least 10 minutes to rest between two continuous blending cycles. Let the appliance cool down to room temperature before starting to blend again.
- 2) If you want to stop the machine during operation, press the key to "O" position anytime.

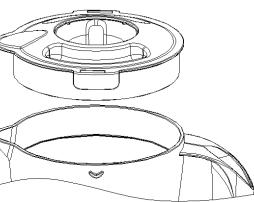


Fig.4



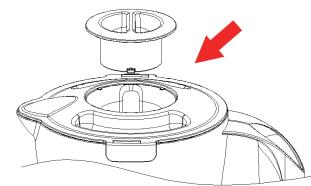


Fig.5

- For best circulation of food to be blended, add liquid into the jar first, and then add the food.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruits and vegetables.
- The following items should never be placed in the appliance as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

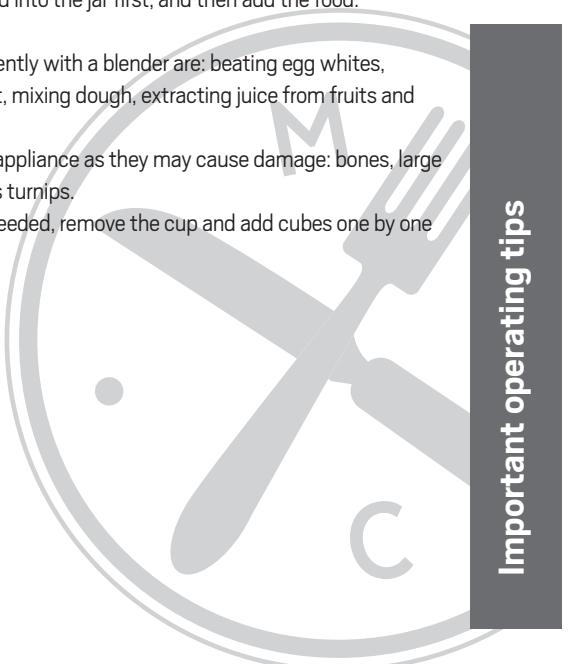

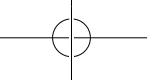

Model no. 043-1034-2 | Contact us: 1-855-803-9313

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
3. Pour a little warm soapy water into the jar and press button  for a few seconds. Then empty water from the jar.
4. Dismantle all detachable parts. Lift the jar assembly off the motor unit. Detach the blade assembly by turning it clockwise from the jar base bottom, and remove the seal ring and blade assembly (See Fig.6).

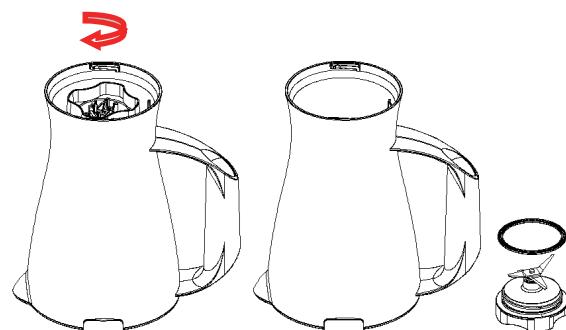


Fig.6

5. Rinse the measure cup, lid, seal ring, jar and blade assembly by hand or in a dishwasher and then dry. These are dishwasher safe. The temperature should not exceed 70°C (160°F).
6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. Don't immerse the blade assembly in water. Leave to dry upside down away from children.
7. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.
8. When blending foods at maximum level or hard fruits and vegetables, ensure that the button is set at highest speed (speed 6). If the speed is too low, the motor will be damaged due to insufficient torque. When the motor speed is found to be too slow, you must immediately use a higher speed setting to blend or press button "0" to stop blend!



CAUTION:


- 1) Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- 2) Do not use rough scouring pads or cleansers on parts or finish.


1-Year Limited Warranty

This Product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

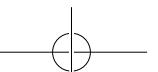

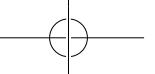


10

Model no. 043-1034 | Contact us: 1-855-803-9313

11

 MASTER
Chef™





Customer service hotline:
Masterchef Tel: 1-855-803-9313

