


MASTER
Chef™

3-CUP FOOD CHOPPER

Model no. 043-1036-8

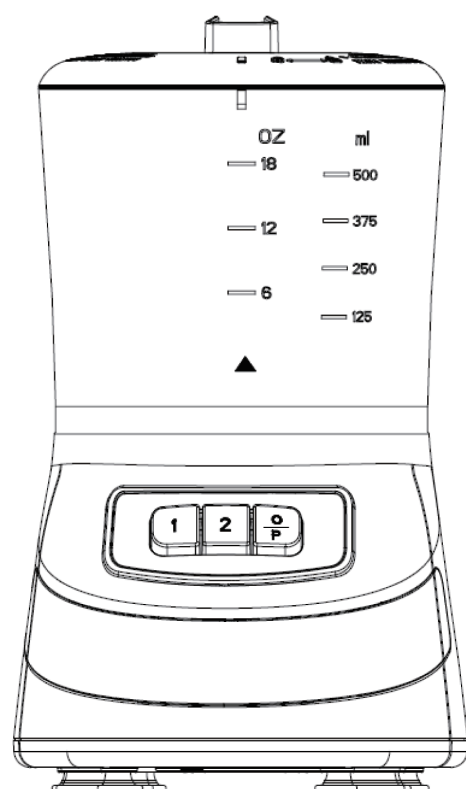

INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.

Customer service hotline:
Masterchef Tel: 1-855-803-9313

Model no.043-1036-8 | Contact us: 1-855-803-9313

MASTER
Chef™

IMPORTANT SAFEGUARDS	2
KNOW YOUR FOOD CHOPPER	4
BEFORE THE FIRST USE	4
USING YOUR FOOD CHOPPER	4-5
CHOPPING GUIDE	5
CLEANING AND MAINTENANCE	6
ENVIRONMENT FRIENDLY DISPOSAL	6
WARRANTY	7

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Do not remove cover until blades stop.
3. The attached motor unit must not be used for other than its intended use.
4. Unplug from the power outlet when not in use and before cleaning. Allow to cool before attaching or removing parts, and before cleaning the appliance. To unplug, grasp the plug and pull to remove from power outlet. Never pull from the power cord.
5. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
6. Do not place on or near a hot gas or electric burner or in a heated oven.
7. Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only when the food chopper is not running.
8. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs, or motor unit in water or other liquids.
9. Close supervision is necessary when any appliance is used by or near children.
10. The appliance is not a toy. Do not let children play with it.
11. Avoid contact with moving parts.
12. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner; Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.

14. Do not use the appliance for other than its intended use.
15. Be sure motor unit is locked securely in place before operating appliance.
16. Do not attempt to access or repair the lid interlock mechanism.
17. Do not use outdoors.
18. Use caution when handling blade unit.
19. Do not let cord contact hot surfaces, including the stove.
20. Do not fill the chopper bowl above the marked maximum fill line to avoid risk of injury due to damage to the cover or bowl.


DO NOT OPEN UNTIL BLADES STOP HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify in any way.

Model no.043-1036-8 | Contact us: 1-855-803-9313

KNOW YOUR FOOD CHOPPER

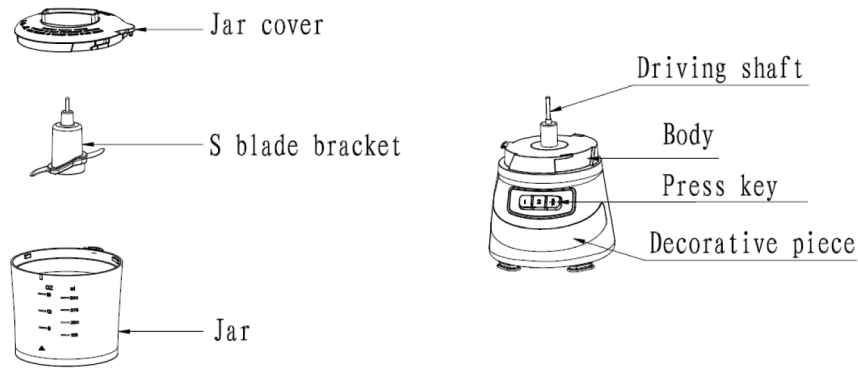

BEFORE THE FIRST USE

Before using this appliance for the first time, wash the bowl and blade assembly in water with soap and dry thoroughly. These parts can be washed in dishwasher. Wipe the motor unit with a damp cloth, do not immerse the motor unit in water.



HOW TO CHOP OR MINCE FOOD

1. Place the jar on a counter or other flat surface, then slide the blade down over the shaft in the bowl. Be careful not to touch the blade as it is extremely sharp.
 2. Place dry food in the bowl. Refer to Chopping Guide for ingredients and quantity recommendations.
 3. Position the jar cover onto the jar, lining up the locking tabs of the cover to the locking slots of the jar till it locks. Position the jar onto the body, aligning the slot with rotating clockwise until it locks.
- Note:** For your protection, this unit has a two lid locking systems. The unit will not operate unless the tabs in the jar cover and slots in the jar align. Do not attempt to operate the unit without locking the motor unit in place.
4. Press "1" button for low-speed function; Press "2" button for high-speed function; Press "O" button to stop the unit. Depress and hold the "P" button to process.


MASTER
Chef™

Note: This product has a "pulse action" feature. Avoid running the motor continuously in this mode for more than 1 minute. The longer the continuous pulse, the finer the texture. For coarsely chopped foods, use short pulses.

5. Ensure the blade stops rotating completely before removing it from motor unit. Unplug the unit. Remove the jar cover and grasp the plastic blade hub carefully, then pull the blade assembly out. Remove the jar and empty the processed food. Do not use jar for storing food.

CHOPPING GUIDE

FOOD	OPERATION	NOTES
Celery and carrots	"P" process up 120 g (4 oz) carrots (or celery) to desired size (no longer than 30 seconds at a time).	Cut into 1/2" (1.2 cm) pieces.
Beef	"2" process up to 150 g (5 oz) beef for 15 seconds then turn off for 1 min until desired chop is reached.	Cut into 3/8" (10 mm) * 3/8" (10 mm) * 1 1/2" (40 mm) cuboids
Cookies and crackers	"2" to crush (no longer than 30 seconds at a time).	Hard cookies only, 1/2" (1.2 cm) or smaller pieces; For buttered crumbs add 1 tsp butter per cracker or every 3 cookies.
Fresh fruits (for example apples)	"2" to puree (no longer than 30 seconds at a time)	Fruits size diced 5/8" (15 mm) cubes, weight is 120 g (4 oz) .
Hard cheese	"2" to break up (no longer than 30 seconds at a time)	Cut into 1/2" (1.2 cm) pieces. Remove from refrigerator 20-30 minutes before chopping. Chop up to 85 g (3 oz) at a time.

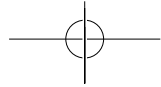

6

7

Model no.043-1036-8 | Contact us: 1-855-803-9313

MASTER
Chef™

Cleaning and Maintenance

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.
Wash the bowl, blade assembly immediately after use either with warm water and soap or in the dishwasher. Wipe off the motor unit with a damp cloth- do not immerse in water.
NOTE: Do not use chemical, steel, wooden or abrasive cleaners to clean the unit to prevent damage to the unit.

Environment Friendly Disposal

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
dispose of as per the requirements of your local municipality.

1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials.
Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.
This product is not guaranteed against wear, misuse and/or abuse.

Made in China
Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Warranty