 


MASTER
Chef™

1.7 L CORDED KETTLE

Model no. 043-1084-2

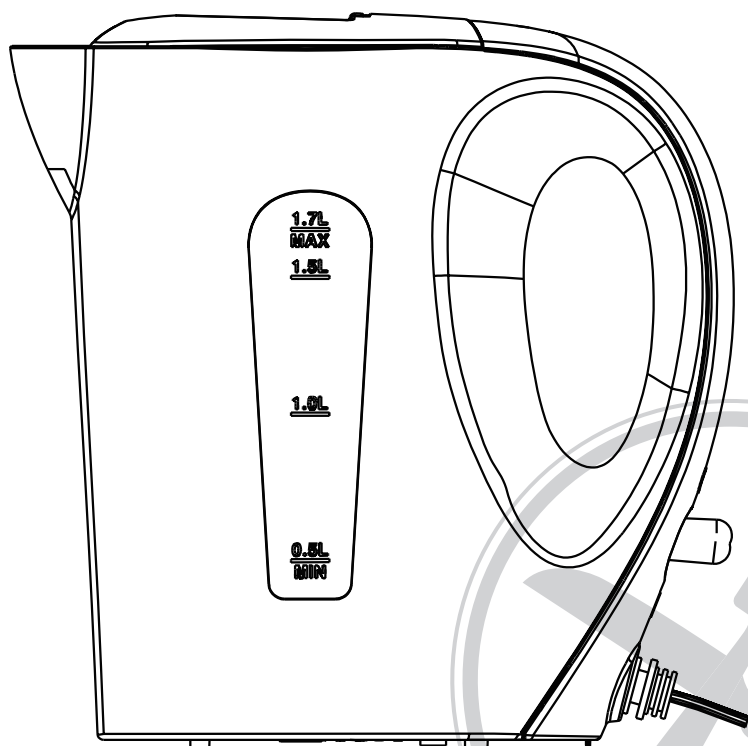

INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.

Model no. 043-1084-2 | Contact us: 1-855-803-9313

MASTER
ChefTM

Important Safeguards	2-3
Know Your Electric Kettle	4
Before Using Your Kettle	5
Using Your Electric Kettle	5
Boil-Dry Protection	6
Cleaning and Maintenance	6
Removal of Mineral Deposits	7
Warranty	7

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the kettle) corresponds with the voltage in your home.
3. Do not operate the appliance without water to avoid damaging the heating elements. Should the kettle be operated without water, the boil-dry protection will automatically turn the appliance off. Allow kettle to cool before using again.
4. Do not let the cord hang over the edge of a table, counter or touch hot surface.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Ensure that kettle is used on a firm and flat surface.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plug or kettle in water or other liquids.
8. Always take care when pouring boiling water. Pour slowly and carefully without tipping the kettle too fast.
9. Be careful when opening the lid for refilling when the kettle is hot.
10. Close supervision is necessary when any appliance is used by or near children.

11. Do not touch the hot surface. Use the handle or the button.
12. Extreme caution must be used when moving an appliance containing hot water.
13. The use of attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
14. Avoid contact with steam coming from the spout when water is boiling or just after it has switched off.
15. Unplug from power outlet when not in use and before cleaning. Allow it to cool before cleaning the appliance.
16. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed when boiling.
17. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
18. Do not use the appliance for other than its intended use.
19. Do not move the unit while the kettle is switched on.
20. If the kettle is overfilled, boiling water may spill out.
21. Do not use the kettle outdoors.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
26. This appliance has been incorporated with a grounded plug. Please ensure the power outlet in your house is grounded.
27. The kettle can only be used with the stand provided.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

Model no. 043-1084-2 | Contact us: 1-855-803-9313

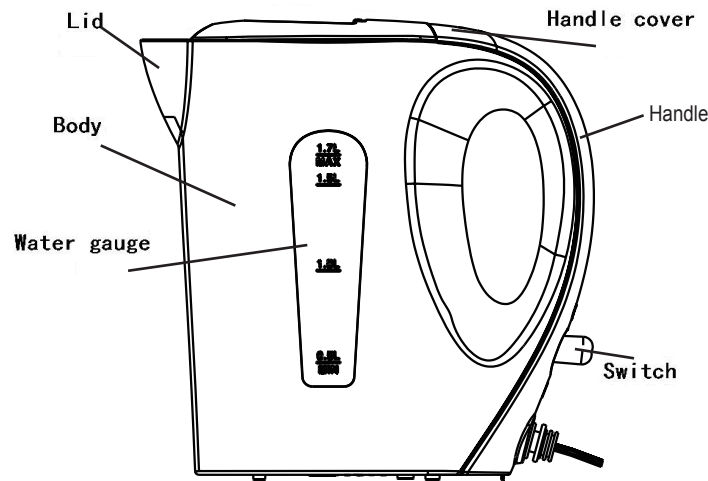

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord

- a) A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer, detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long, detachable power-supply cord or extension cord is used;
 - I. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - II. The extension cord should be a grounding-type 3-wire cord; and
 - III. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

MASTER
Chef™

Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

1. To add water in the kettle, open the lid by lifting the lid handle. Fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5 L) and maximum (1.7 L) marks. Too little water will result in the kettle switching off before the water has boiled.



NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the power outlet.

2. Close the lid.
3. Plug into power outlet. Press the switch down to "I" position and the switch light will illuminate. The water will then start to boil. The kettle will switch off automatically once the water has boiled and the switch light will turn off. You can shut off the power by pressing the switch at any moment to stop the boiling process.



NOTE: Ensure that the switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is obstructed or if the lid is open.

4. Lift the kettle and then pour the water.




NOTE: Use caution when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid as the water in the kettle is hot.

5. The kettle will not boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water.



NOTE: Always disconnect the power supply when not in use.

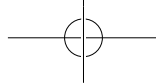

6

7

MASTER
Chef™

Model no. 043-1084-2 | Contact us: 1-855-803-9313

Boil-Dry Protection

Boil-dry protection

Should the kettle operate without water, the boil-dry protection will automatically switch the appliance off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolour. To remove this build-up, use a non-toxic liquid descaler.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and add water to reach the Max level. Let stand overnight. **Do not boil.**
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by wiping with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle is ready to use.

Removal of Mineral Deposits



CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

Cleaning the filter

Remember to clean the filter damp cloth at intervals.

Care and cleaning

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to come in contact with these parts.

Cleaning external housing

Wipe the external housing with a damp cloth or cleaner.


Cleaning and Maintenance

1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear, misuse and/or abuse.

Made in China
Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Warranty

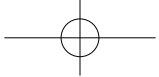

Customer service hotline:
Masterchef Tel: 1-855-803-9313