


MASTER
Chef™

1.7 L CORDLESS JUG KETTLE

Model no. 043-1168-4

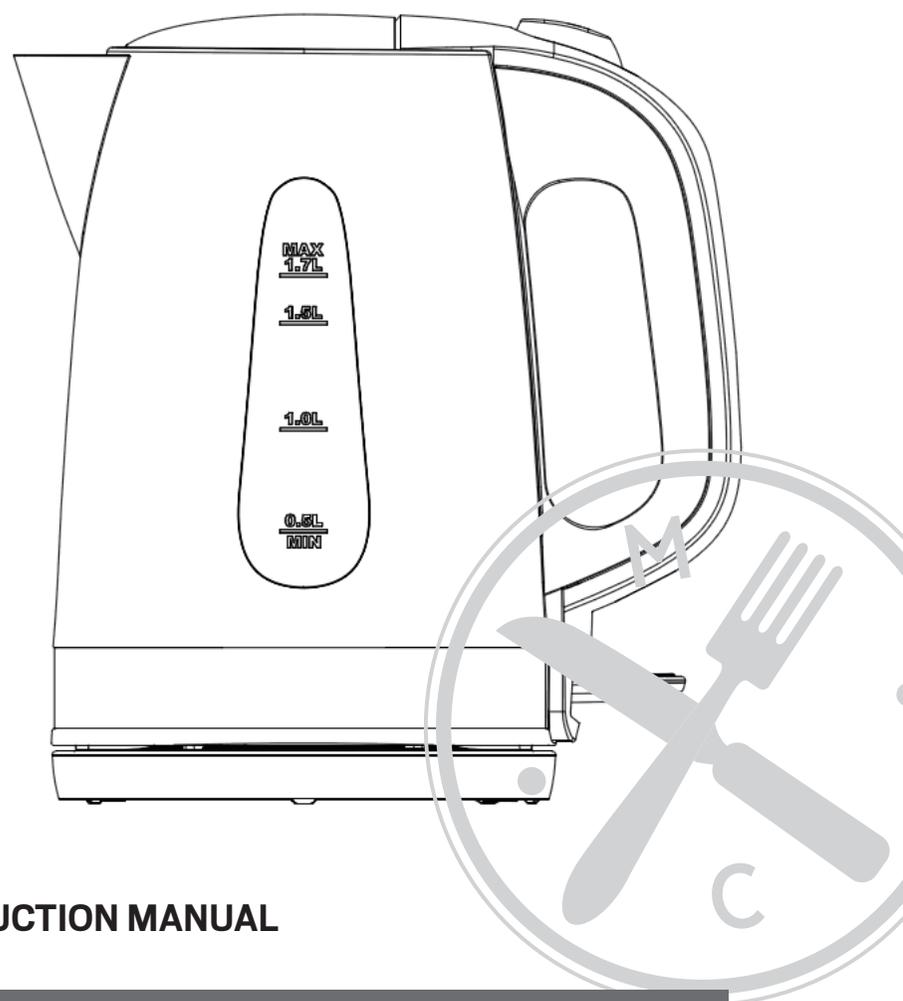

INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.

Customer service hotline:
Masterchef Tel: 1-855-803-9313

Model no.043-1168-4 | Contact us: 1-855-803-9313

MASTER
Chef™


IMPORTANT SAFEGUARDS	2-3
KNOW YOUR ELECTRIC KETTLE	4
BEFORE USING YOUR KETTLE	5
USING YOUR ELECTRIC KETTLE	5
BOIL-DRY PROTECTION	6
CLEANING AND MAINTENANCE	6
REMOVAL OF MINERAL DEPOSITS	7
ENVIRONMENT FRIENDLY DISPOSAL	7
WARRANTY	7


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. Avoid contact with steam coming from the spout when water is boiling or just after it has switched off.
9. Always take care when pouring boiling water. Pour slowly and carefully without tipping the kettle too fast.
10. Be careful refilling the kettle when it is hot.
11. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

12. Children should be supervised to ensure they do not play with the appliance.
13. Do not touch the hot surface. Use the handle or the button.
14. The attached base can not be used for other than its intended use
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play with it.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool before cleaning the appliance.
20. To disconnect, turn any control to "off" remove plug from power outlet.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than its intended use.
23. The kettle can only use with the base provided.
24. If the kettle is overfilled, boiling water may spill out.
25. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed when boiling.
26. This appliance can be used by children aged from 8 year-old and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 year-old.
27. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
28. Save these instructions.

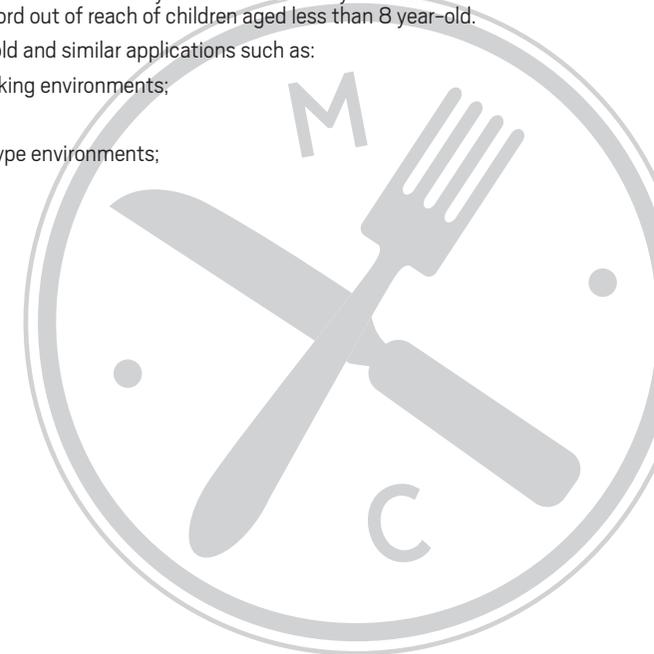

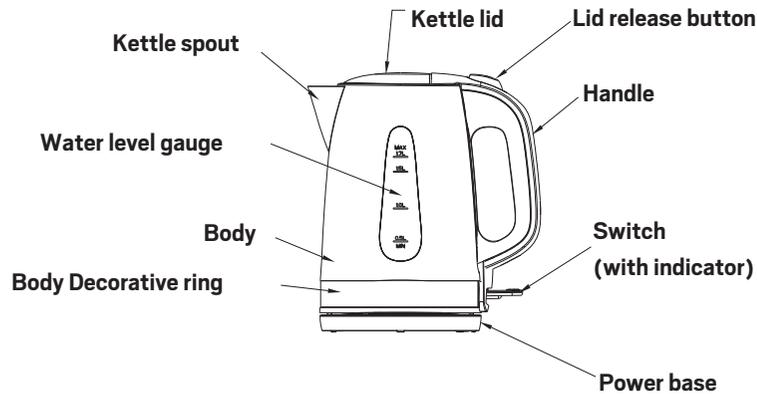

SAVE THESE INSTRUCTIONS.



Notes for cord plug:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Notes for Power Cord:

- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord;
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discard the water. Wipe the surface with a damp cloth.



NOTE: The max capacity of kettle is 1.7 L.

USING YOUR ELECTRIC KETTLE

1. Place the kettle on the flat surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button down. Then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle to switch off before the water has boiled.



NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the cord into the power outlet.

3. Position the kettle on the power base.
4. Plug into power outlet. Press the switch down and the indicator will light up. The water will start to boil. The kettle will switch off automatically once the water has boiled. If necessary, wait 30 seconds before pressing the switch again to re-boil the water. You may shut off the power by moving the switch up or lifting the kettle from the power base at any time to stop boiling process.



NOTE: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is obstructed or if the lid is open.

5. Lift the kettle from the power base and then pour the water.



NOTE: Use caution when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid as the the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.



NOTE: Always disconnect the power supply when not in use.

Model no.043-1168-4 | Contact us: 1-855-803-9313

MASTER
Chef™

BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle causing it to operate less efficiently. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow instructions using white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add water to the MAX level. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle, fill the kettle with clean water to the MAX level, boil again and then discard the water. Repeat several times until the odour of vinegar is no longer noticeable. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come into contact with these parts.
2. Wipe the surface of body with a damp cloth or cleaner, never use an abrasive cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter by pressing down the tab of filter inside the kettle and then replace it after cleaning.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle as this reduce the glossy finish.

4. When not in use or in storage, the power cord may be wound under the power base.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal centre.

1-Year Limited Warranty

This product carries a one(1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.

This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8