

MASTER
Chef™

DOUBLE-BURNER COOKTOP

Model no. 043-1201-8



INSTRUCTION MANUAL

Read this manual thoroughly before using and save it for future reference.

Model no. 043-1201-8 | Contact us: 1-855-803-9313

Important Safeguards	2
How to Use	3
Care and Cleaning	4
Warranty	4

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the manufacturer for examination, repair or adjustment. See Warranty section.
7. The use of accessories or attachments not recommended by the manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
14. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY



Grounded Plug

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

Any flat-bottomed pot or container that can be used on a conventional electric stove element can also be used on the Cooktop. For maximum heat transfer, cookware that has a solid perfectly flat bottom is recommended. Cookware made from solid aluminum or some other material with an encapsulated aluminum base will provide the best results. Any cookware can be used to reheat but if maximum energy is required, such as boiling water, please use the recommended cookware.

1. Place the Cooktop onto a smooth, dry, flat surface. Be sure that the knobs are in the 'O' position and plug into any 120 V AC outlet. Once the unit is plugged into the wall outlet the red indicator light will glow until it is unplugged.
2. Place filled cookware on element. Each element is equipped with its own Temperature Control Knob and Indicator Light.
3. Turn Control Knob (s) clockwise to desired setting. The green Indicator Light (s) will glow and go on and off as the selected temperature is automatically maintained.



NOTE:

1. DO NOT preheat before using.
2. DO NOT switch on before cookware is placed on the element.
3. The wattage of the small element is 600 W and the large element is 900 W.

Model no. 043-1201-8 | Contact us: 1-855-803-9313

Care and Cleaning

- 1. Unplug unit and allow to cool.
- 2. This unit should be cleaned with a cloth or sponge dampened in warm soapy water.
- 3. NEVER USE ABRASIVE CLEANSERS.
- 4. NEVER IMMERSE THIS UNIT IN WATER.

Warranty

1-YEAR LIMITED WARRANTY

This MASTERCHEF™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.



Master Chef Canada
Toronto, Canada M4S 2B8