 


MASTER
Chef™


COFFEE MAKER

Model no. 043-1320-0

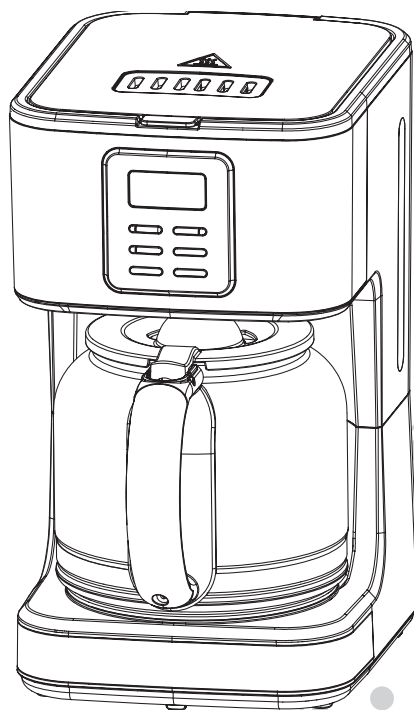

INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.

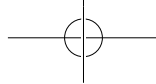

Important Safeguards	2
Know Your Coffee Maker	4
Control Panel	4
Using Your Coffee Maker	5
Delay Function	7
Cleaning and Maintenance	8
Removing Mineral Deposits	8
Hints for Great-Tasting Coffee	9
Warranty	9

 
IMPORTANT SAFEGUARDS

When using electrical appliances, the following basic precautions should always be followed :


1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug, or coffee machine in water or any other liquid.
4. Close supervision is necessary when your appliance is operating, including while using the warming plate. Avoid excessive use of the warming plate. Do not let the appliance on the standby state for a long time.
5. Unplug from outlet when neither the appliance or display clock are in use. Unplug and allow to cool before putting on or taking off parts, and before cleaning the appliance. When removing plug from wall outlet, always hold the plug. Never pull the cord.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of an accessory not recommended by the appliance manufacturer may result in

fire, electric shock or injury to persons.

8. Do not use outdoors.
9. Place appliance on flat surface or table. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use and place it in a dry environment.
12. Do not clean container with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "off" and remove plug from wall outlet. Always hold the plug; never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycle. Be careful not to get burned by the steam.
15. Do not touch hot surfaces. Use handles or knobs. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Never leave the empty carafe on the warming plate. Heating an empty carafe makes it more liable to crack.
17. Never use the appliance if the carafe shows any signs of cracks or if the carafe has a loose or weakened handle. Only use the provided carafe with this appliance. Use carefully as the carafe is very fragile.
18. Do not set a hot container on a hot or cold surface.
19. Do not let the coffee maker operate without water.
20. Do not use a cracked container or a container having a loose or weakened handle.
21. Please do not open the top cover, and make sure the carafe is placed on the warming plate correctly during brewing.
22. To reduce the risk of fire or electrical shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
23. The container is designed for use with this appliance. It must never be used on a range top.
24. Do not set a hot container on a wet or cold surface.
25. During brewing, do not open the water tank cover to avoid splashing.
26. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
27. Children should be supervised to ensure that they do not play with the appliance.
28. At least one copy of this manual should be kept in a location available at all times to maintenance and management staff.

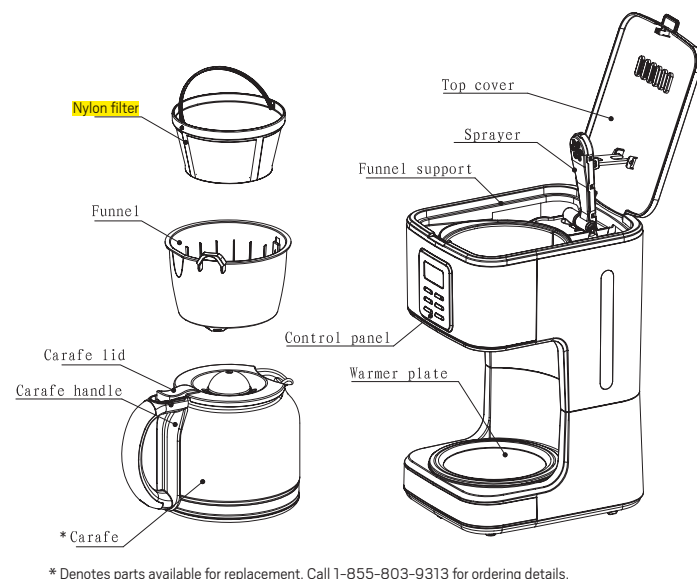

* Denotes parts available for replacement. Call 1-855-803-9313 for ordering details.

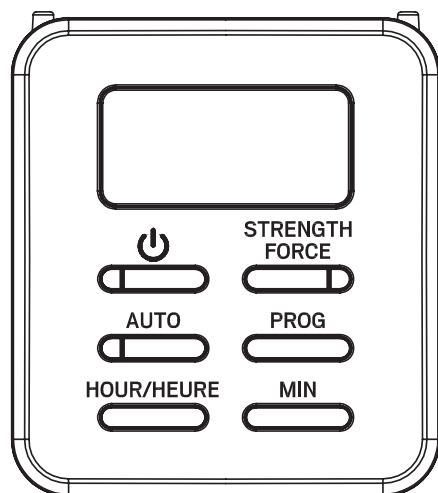

Model no. 043-1320-0 | Contact us: 1-855-803-9313

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY



Notes on the cord plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



Notes on the cord

- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer, detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long, detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

BEFORE FIRST USE

Check that all accessories are included and the unit is not damaged. Add water into water tank to the MAX level of water gauge and run through the brew cycle using plain water and without coffee grounds several times, discarding the water. Clean all detachable parts thoroughly with warm water.

- Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated in the water tank.
- Place the funnel into the funnel support. Make sure it is assembled correctly, or the top cover will not close properly. Place the nylon filter or a paper filter (12 cup) in the funnel according to your preference.
- Add coffee grounds into filter. Usually one cup of coffee needs a level spoon of coffee grounds, but you may adjust according to personal taste. Close the top cover completely.
- Insert the carafe on the warming plate horizontally.
- Plug the power cord into the outlet. The LCD will display "AM12:00" and the "AM12:00" will flicker.
- Press ON/OFF button. The ON/OFF indicator illuminates and the appliance begins working.
 - If you want to brew strong coffee, press the STRENGTH button; the corresponding indicator

Model no. 043-1320-0 | Contact us: 1-855-803-9313

turns on. Then press ON/OFF button once, and the appliance will start to brew strong coffee. Both the STRENGTH and ON/OFF indicators will be illuminated.

b. The brewing process can be interrupted by pressing the ON/OFF button once at any time. At that time, the ON/OFF indicator will extinguish and the appliance will turn off. The appliance will continue brewing once ON/OFF button is pressed again.

c. When the AUTO indicator is on, you can set the delay function to start the coffee maker at your desired time. If you do not want to use delay function, you can cancel the automatic start function by pressing the AUTO button. The AUTO indicator will be extinguished.

7. You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically, but the time cannot exceed 30 seconds.

8. Remove the carafe to serve when finish brewing (about one minute after the coffee stops dripping out.)



NOTE:

The coffee you get will be less than the water you have added, as some water is absorbed by the coffee grounds.

9. When the brewing process is finished, if you do not want to serve immediately, the coffee can be kept warm on the warming plate. The appliance will shut off automatically two hours after the ON/OFF button is pressed if it has not been manually turned off at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.



NOTE:

Use caution when pouring the coffee. You may be hurt as the temperature of freshly-brewed coffee is high.

MASTER
Chef™

If you do not want the coffee maker to start operation immediately, for example: now it is 8:10 a.m. and you want the coffee maker to start automatically at 1:00 p.m., first follow steps 1 to 5 of the USING YOUR COFFEE MAKER section, then set the automatic start function as follows:

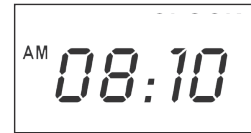


Fig.1

1. Press the HOUR or MIN button repeatedly to set the present time, 8:10 a.m. If you don't press the HOUR and MIN button again, after 3 seconds, the coffee maker will store the time you just set (see Fig. 1).



Fig.2



NOTE:

The time cycle is 12 hours.


2. Press PROG button once, and the word TIMER shows in the upper-left corner of the display.
3. Set the delayed starting time by pressing HOUR and MIN button repeatedly. In our example that is PM 01:00 (see Fig. 2).
4. Press the AUTO button once. The AUTO button indicator illuminates. The LCD will display the current time. You may check the automatic start time by following the operation as below: firstly, press "AUTO" once, its indicator turns off, then press "PROG" once and then you can check the automatic start time. And you need to press "AUTO" again to reactivate the "automatic start function" after checking the automatic start time.



NOTE:

You may cancel the automatic start function by pressing ON/OFF button. If you want to change the automatic start time, repeat steps 1-4 above.

5. When the time is due, the AUTO button indicator will turn off and the unit starts brewing. The appliance will shut off automatically two hours after the delayed brewing starts if it has not been manually disconnected at the completion of brewing.

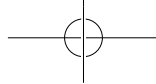

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electric shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1) Clean all detachable parts after each use in hot, sudsy water.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may build up in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the CLEANING AND MAINTENANCE section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in the refrigerator to maintain its freshness. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
3. Do not reuse coffee grounds since this will greatly reduce the coffee's flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
4. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oils from the coffee grounds. Oiliness may occur more frequently if heavily-roasted coffees are used.

To keep your coffee maker operating efficiently, clean away the mineral deposits left by the water regularly depending on the water quality in your area and the frequency with which you use the appliance. To remove mineral deposits:

1. Fill the water tank with water and descaler to the MAX level as indicated in the water tank. Please use "household descaler" at the ratio recommended in the descaler instructions (generally 4:1). Citric acid can also be used instead of descaler at a ratio of the 100 parts of water to 3 parts of citric acid.
2. Put the carafe on the warming plate and ensure it is placed in position.
3. Press the ON/OFF button once to start the brewing process.
4. After one cup of water flows into the carafe, switch off the appliance by pressing the ON/OFF button again to stop the brewing process.
5. Leave the solution to work for 15 minutes. Repeat steps 3–5 again.
6. Turn the appliance on by pressing the ON/OFF button once and run until the water tank is completely empty.
7. Rinse by operating the appliance with plain water at least 3 times.


Limited Warranty

1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials.

If found defective, return to **place of purchase**, with **proof of purchase**.

This product is not guaranteed against wear, misuse and/or abuse.

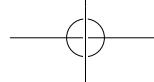


10

11

Model no. 043-1320-0 | Contact us: 1-855-803-9313

 MASTER
ChefTM





Customer service hotline:
Masterchef Tel: 1-855-803-9313