 


MASTER
Chef™


KETTLE

Model no. 043-1321-8

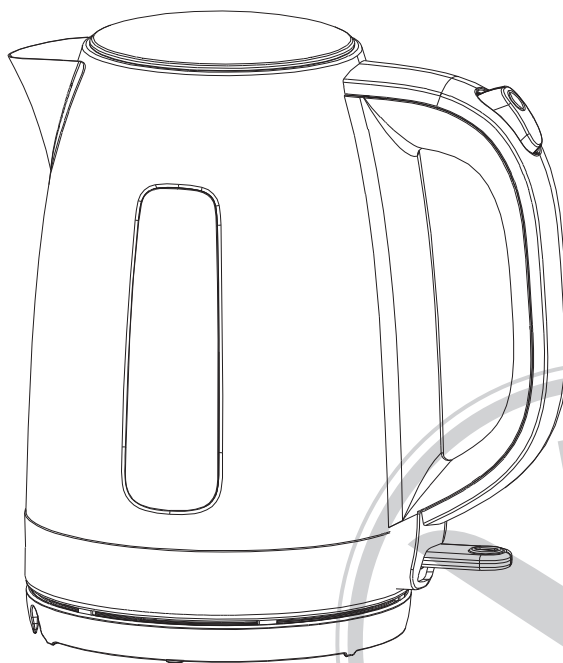

INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.

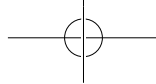

Model no. 043-1321-8 | Contact us: 1-855-803-9313


Important Safety Instructions	2
Know Your Electric Kettle	4
Before Using Your Kettle	5
Using Your Electric Kettle	5
Boil-Dry Protection	6
Cleaning and Maintenance	6
Removal of Mineral Deposits	7
Warranty	7

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (under the kettle and base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children. This will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.

 10. Be careful when refilling when the kettle is hot.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Close supervision is necessary when any appliance is used by or near children.
13. Do not touch the hot surface. Use the handle or the button.
14. The attached base can not be used for other than its intended use.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
20. To disconnect, turn any control to "off," then remove plug from wall outlet.
21. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly-qualified person in order to avoid a hazard.
22. Do not use the appliance for other than intended use.
23. The kettle can only use with the stand provided.
24. If the kettle is overfilled, boiling water may spill out.
25. Always ensure the lid is closed. Scalding may occur if the lid is removed during the boiling cycle.
26. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
27. Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
28. Close supervision is necessary when any appliance is used by or near children.
29. Save these instructions.




4

5

Model no. 043-1321-8 | Contact us: 1-855-803-9313

MASTER
Chef™

 Know Your Electric Kettle

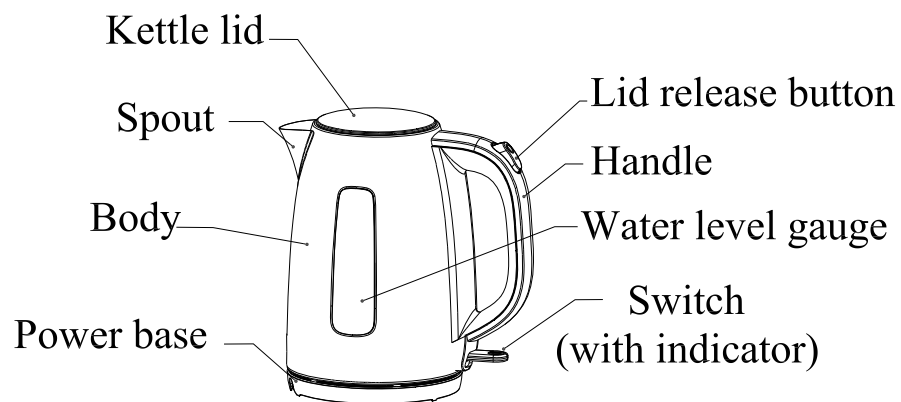

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY



Notes on the cord

- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer, detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long, detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - The extension cord should be a grounding-type 3-wire cord; and
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Before using your kettle

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling the maximum capacity of water and then discarding the water twice. Wipe the surface with a damp cloth.



NOTE: The maximum capacity of kettle is 1.7 L.

- Place the kettle on a flat surface.
- To fill the kettle, remove it from the power base and open the lid by pressing down the lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle to switch off before the water has boiled.



NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging into the power outlet.

- Position the kettle on the power base.
- Connect the plug into a power outlet. Press down the switch. The indicator will light up, and the kettle will start to boil the water. The kettle will switch off automatically once the water has boiled. If necessary, wait 30 seconds before pressing the switch again to re-boil the water. You may shut off the power by lifting switch up or directly lift the kettle from the power base at any moment to stop boiling process.



NOTE: Ensure that switch is free of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is open.

- Lift the kettle from the power base and pour the water.




NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in being scalded. Don't open the lid while the water in the kettle is hot.

- The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.



NOTE: Always disconnect the power supply when not use.

Using Your Electric Kettle

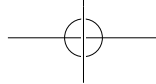

6

7

MASTER
Chef™

Model no. 043-1321-8 | Contact us: 1-855-803-9313

Boil-Dry Protection

Should you accidentally let the kettle operate without water, the boil-dry protection function will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

The kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of the kettle and cause it to operate less efficiently. Use a commercially-available descaler and follow the instructions on the package, or follow the instructions below using white vinegar:

1. Fill the kettle with 3 cups of white vinegar, then add enough water to cover the bottom of the kettle completely.
2. Discard the mixture in the kettle, then fill the kettle with clean water to the maximum position. Boil and then discard the water. Repeat several times until the odour of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

Removal of Mineral Deposits

Cleaning and Maintenance

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come in contact with these parts.
2. Wipe the body of the kettle with a damp cloth or cleaner—never use a poisonous cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter by pressing down the filter tab inside the kettle. Replace it after cleaning.



CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the loss of gloss.

4. When not use or storage, the power cord may be wound under the bottom of kettle.

Limited Warranty


1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials.

If found defective, return to **place of purchase**, with **proof of purchase**.

This product is not guaranteed against wear, misuse and/or abuse.

Warranty

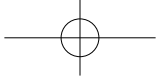

Customer service hotline:
Masterchef Tel: 1-855-803-9313