 


# MASTER **Chef**<sup>TM</sup>

 
## TOASTER

Model no. 043-1323-4

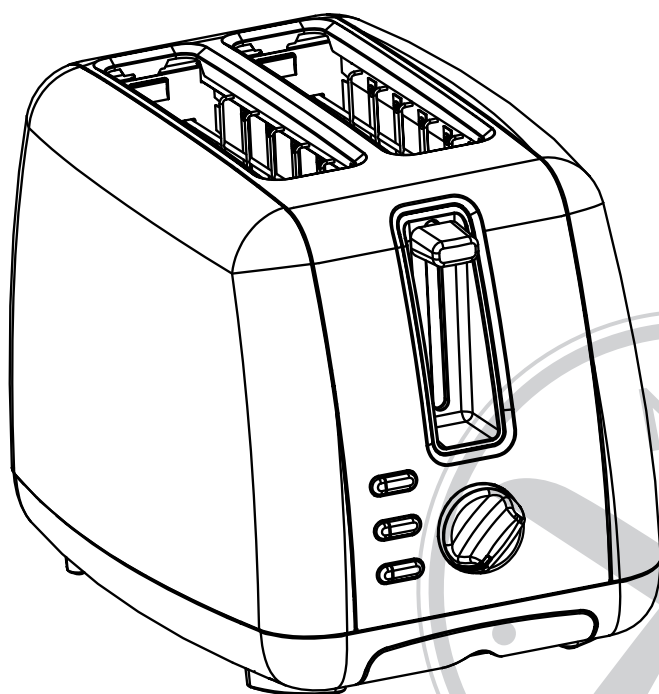

## INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.



Model no. 043-1323-4 | Contact us: 1-855-803-9313

Important Safeguards	2
Know Your Toaster	4
The First Use	4
Operation	5
Caution	6
Cleaning and Maintenance	6
Warranty	7

9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Do not use outdoors.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
14. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
15. Bread may burn, therefore toasters must not be used near or below curtains or other combustible materials; they must be watched.
16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
17. Don't attempt to dislodge food when toaster is plugged in.
18. Be sure to take the bread out carefully after toasting so as to avoid injuries.
19. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, etc., while in operation.
20. WARNING: To prevent electric shock, unplug before cleaning.

## IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. Do not let the cord hang over edge of table or counter, or touch a hot surface.

## SAVE THESE INSTRUCTIONS

### HOUSEHOLD USE ONLY




#### Notes on the cord plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.



#### Notes on the cord

- a) A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) A longer, detachable cord or extension cord is available and may be used if care is exercised in its use.
- c) If a long, detachable power-supply cord or extension cord is used:
  - I. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
  - II. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
  - III. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

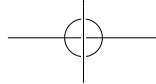


4

5

MASTER  
Chef™

Model no. 043-1323-4 | Contact us: 1-855-803-9313

 Know Your Toaster

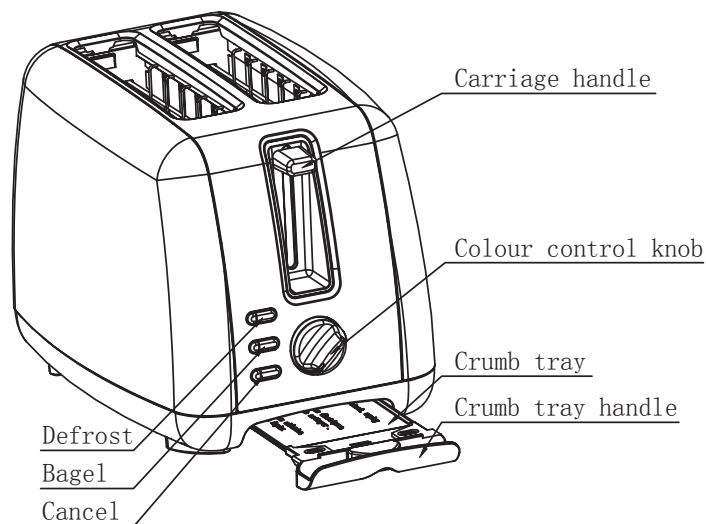

As there is manufacturing residue or oil remaining in the toaster or on the heat element, it usually emits an odour the first time it is used. It is normal and will not occur after the toaster has been used a few times. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

The First Use

1. Put bread slice into the bread slot. This toaster is built to accommodate regular-sized pieces of bread. Some larger sizes may not fit.

**NOTE:**

Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.
3. Set the toasting colour by turning colour control knob to your desired colour. There are 7 levels: 1, 2, 3, 4, 5, 6 and 7. Turn clockwise to increase colour level; counter-clockwise to decrease colour level. The bread slice can be toasted to golden colour at setting level 4.

**NOTE:**

1. When using the bagel setting (only one side is toasted) the colour is darker at the same setting than it would be if both sides of the toast was being toasted.
2. If using the toaster repeatedly, toasting colour for the later toast is darker than the colour of the toast made earlier at the same level.


4. Press carriage handle down vertically until it is positioned in place, and toasting begins. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up.

**NOTE:**

1. The carriage handle can only be latched when the appliance is connected to the power supply.
2. During the toasted process, you may observe the toasting colour. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time.

5. If the bread has been taken out of the refrigerator, set colour control knob to your desired colour, press carriage handle down vertically until it is positioned in place, then press **Defrost** button and the **Defrost** indicator will be illuminated. In this mode it will be toasted to your desired colour.
6. If you only want to toast one side of the bread slice, press carriage handle down vertically until it is positioned in place, set colour control knob to your desired colour, then press the **Bagel** button and the indicator will be illuminated. In **Bagel** mode, only the **Bagel** indicator will be illuminated, In this mode, the heating elements on the outer side are used, but heating elements toward the middle on each side are not used.

Operation

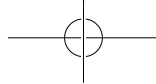

6

7

MASTER  
Chef™

Model no. 043-1323-4 | Contact us: 1-855-803-9313

## Caution

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, press Cancel to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular-sized bread slices.

## Cleaning and Maintenance

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft, dry cloth after toaster cools down. Never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or when in storage, the power cord may be wound under the bottom of toaster.

## Limited Warranty

 
## 1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials.

If found defective, return to **place of purchase**, with **proof of purchase**.

This product is not guaranteed against wear, misuse and/or abuse.

## Warranty



Customer service hotline:  
Masterchef Tel: 1-855-803-9313