


MASTER **Chef**[™]

0.7 CU. FT. BLACK MICROWAVE WITH STAINLESS STEEL TRIM

Model: EM720CL7 / Product No: 043-1508-6

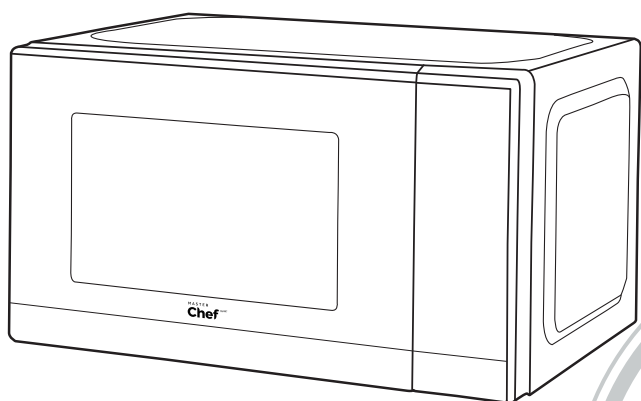

INSTRUCTION MANUAL

Read this instruction manual carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

Toll free: 1-855-803-9313

Read this manual thoroughly before using and save it for future reference

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

Precautions to Avoid Possible Exposure to Excessive Microwave Energy	2
Specifications	3
Important Safety Instructions	3
Grounding Information	4
Utensil Use	5
Microwavable Utensils and Containers	6
Non-microwavable Utensils and Containers	6
Know your Microwave Oven	7
Turntable Installation	7
Countertop Installation	8
Operation	9
Troubleshooting	15
Warranty	16
Braille Tactile Keypad Overlay	17

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this microwave oven with the door open as this can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the microwave oven if it is damaged. It is particularly important that the microwave oven door close properly and that there is no damage to the:
- DOOR (bent)
 - HINGES AND LATCHES (broken or loosened)
 - DOOR SEALS AND SEALING SURFACES
- (d) The microwave oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Model:	043-1508-6 (EM720CL7)
Rated Voltage:	120 VAC 60 Hz
Rated Input Power (Microwave):	1050 W
Rated Output Power (Microwave):	700 W
Oven Capacity:	20 L (0.7 cu. ft.)
Turntable Diameter:	25.5 cm (10")
Outer Dimensions (HxWxD):	25.9 x 44 x 33 cm (10 3/16 x 17 5/16 x 13")
Net Weight:	9.2 kg (20 lb 5 oz)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING—To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 2.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 4.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers—for example, closed glass jars—can explode and should not be heated in this microwave oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of microwave oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water—for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surface.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and microwave oven that touch when closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

16. To reduce the risk of fire in the microwave oven cavity:

- (1) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the microwave oven to facilitate cooking.
- (2) Remove wire twist-ties from paper or plastic bag before placing bag in microwave oven.
- (3) If materials inside of the microwave oven ignite, keep door closed, turn microwave oven off, and unplug the power cord, or shut off power at the fuse or circuit breaker panel.
- (4) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

- (1) Do not overheat the liquid.
- (2) Stir the liquid before and halfway through heating it.
- (3) Do not use straight-sided containers with narrow necks.
- (4) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- (5) Use extreme care when inserting a spoon or other utensil into the container.
- (6) Do not operate microwave with a burnt, chipped, or cracked waveguide cover/mica plate. If the microwave hasn't been cleaned, food particles and grease on the waveguide cover/mica plate can cause sparking in your microwave.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING—Improper use of the grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

DANGER—Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death.
Do not disassemble this appliance.

WARNING—Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) The extension cord must be a grounding-type 3-wire cord.
 - (3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1) Clean door and sealing surface of the microwave oven.
 - (2) Reorient the receiving antenna of radio or television.
 - (3) Relocate the microwave oven with respect to the receiver.
 - (4) Move the microwave oven away from the receiver.
 - (5) Plug the microwave oven into a different outlet so that the microwave oven and receiver are on different branch circuits.

UTENSILS

CAUTION

Personal Injury Hazard

Tightly-closed containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Microwavable/Non-microwavable Utensils and Containers" on page 6.

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below:

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250 mL) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

This device complies with part 18 of the FCC Rules.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

Microwavable Utensils and Containers

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 5 mm (3/16") above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.


Non-microwavable Utensils and Containers

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the microwave oven.
Paper bags	May cause a fire in the microwave oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

Names of Microwave Oven Parts and Accessories


Remove the microwave oven and all materials from the carton and oven cavity. Your microwave oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

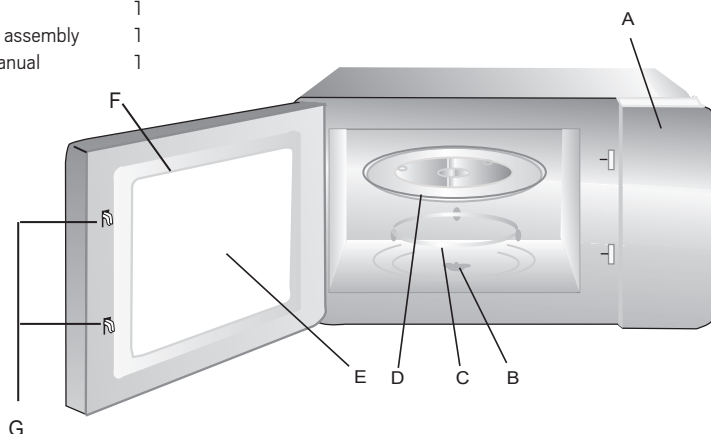

- | | | | |
|--------------------|----------------------------|-----------------------|----------------------------|
| A) Control panel | C) Turntable ring assembly | E) Observation window | G) Safety interlock system |
| B) Turntable shaft | D) Glass tray | F) Door assembly | |

Turntable Installation

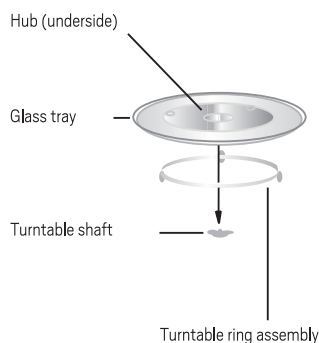

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food should always be placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service centre.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

Countertop Installation


Remove all packing material and accessories. Examine the microwave oven for any damage such as dents or broken door. Do not install if microwave oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Do not remove the light silver mica cover that is attached to the microwave oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

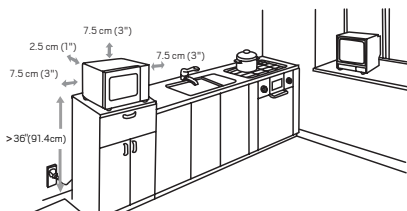

- (1) Leave a minimum clearance of 7.5 cm (3") on each side, 7.5 cm (3") on top and 2.5 cm (1") in the rear. The minimum installation height is 36 inch(91.4cm).

- (2) Do not remove the legs from the bottom of the microwave oven.


- (3) Blocking the intake and/or outlet openings can damage the microwave oven.

- (4) Place the microwave oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your microwave oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.

WARNING: Do not install microwave oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave oven could be damaged and the warranty would be void.

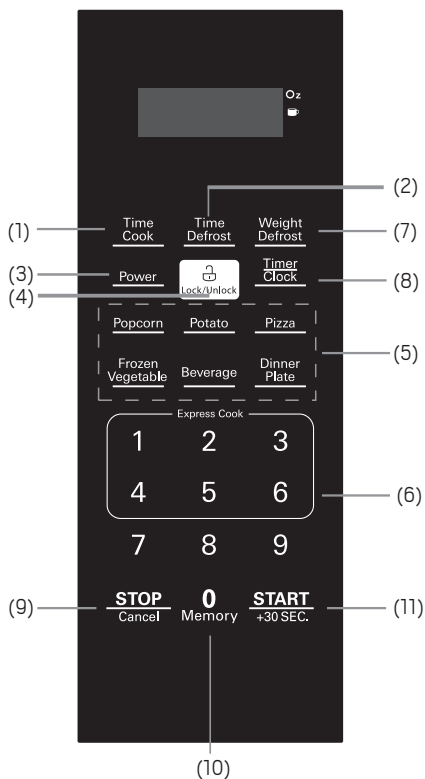OPERATION**Control Panel and Features**

- (1) Time Cook
- (2) Time Defrost
- (3) Power
- (4) Lock/Unlock
- (5) Auto menu: Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate
- (6) Number keys: 0 to 9
- (7) Weight Defrost
- (8) Timer/Clock
- (9) STOP/Cancel
- (10) 0/Memory
- (11) START/+30 SEC.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

OPERATION

1. Power Level

11 power levels are available.



Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Clock Setting

- (1) Press **"TIMER/CLOCK"** twice; "00:00" will display.

(2) Press the number keys and enter the current time. For example: time is 12:10 now; please press "1, 2, 1, 0" in turn.

(3) Press **"TIMER/CLOCK"** to finish clock setting. ":" will flash and the clock will be illuminated.

(4) If the numbers inputted are not within the range of 1:00-12:59, the setting will be invalid until valid numbers are inputted.
- 

Note: (1) In the process of clock setting, if the **"STOP/CANCEL"** button is pressed or if there is no operation within 5 minute, the oven will go back to the former setting automatically.

 
- (2) If the clock needs to be reset, please repeat step 1 to step 3.

3. Kitchen Timer

- (1) Press **"TIMER/CLOCK"** once; the screen will display 00:00, and the first hour figure will flash.

(2) Press the number keys and enter the timer time. (The maximum cooking time is 99 minutes and 99 seconds.)

(3) Press **"START/+30 SEC."** to confirm setting.

(4) When the timer ends, the buzzer will sound 5 times.
- 
- If the clock has been set (12-hour system), the screen will display the current time.

Note: (1) The kitchen timer is different from 12-hour system; it is a timer only.



- (2) No programs can be set when the timer is running.

4. Microwave Cook

- (1) Press **"TIME COOK"** once; the screen will display "00:00".

(2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

(3) Press **"POWER"** once; the screen will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.

(4) Press **"START/+30 SEC."** to start cooking.
- 

Example: To cook the food with 50% microwave power for 15 minutes.

- Press **"TIME COOK"** once. "00:00" displays.
- Press "1", "5", "0", "0" in order.
- Press **"POWER"** once, then press "5" to select 50% microwave power.
- Press **"START/+30 SEC."** to start cooking.

Note: (1) In the process of setting, if the **"STOP/CANCEL"** button is pressed or if there is no operation within 5 minute, the oven will go back to the former setting automatically.

- (2) If **"PLO"** selected, the oven will work with fan for no power. You can use this level to remove odours from the microwave oven.
- (3) During microwave cooking, **"POWER"** can be pressed to change the power you need. After pressing **"POWER"**, the current power flash for 3 seconds, now you can press number button to change the power. The microwave oven will operate using the selected power for the remaining cooking time.

5. Speedy Cooking

- (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press **"START/+30 SEC."** to increase the cooking time; The maximum cooking time is 99 minutes and 99 seconds.
- (2) In waiting state, instant cooking at 100% power level with 30 seconds cooking time can be started by pressing **"START/+30 SEC."**. Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.

Note: During microwave cooking and time defrost, time can be added by pressing **"START/+30 SEC."** button.

6. Weight Defrost Function

- (1) Press **"WEIGHT DEFROST"** once; the screen will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight ranged between 4–100 oz.
- (3) Press **"START/+30 SEC."** to start defrosting and the cooking time remaining will be displayed.

7. Time Defrost Function

- (1) Press **"TIME DEFROST"** once; the screen will display "dEF2".
- (2) Press number pads to input defrosting time. The effective time range is 0:01–99:99.
- (3) The default microwave power is power level 3. If you want to change the power level, press **"POWER"** once, and the screen will display "PL 3", then press the number pad of the power level you wanted.
- (4) Press **"START/+30 SEC."** to start defrosting. The remaining cooking time will be displayed.

Note: The defrost power is PL3 and it cannot be changed during defrosting.

8. Popcorn

- (a) Press **"POPCORN"** repeatedly until the number you wish appears in the display:
"1.75", "3.0", "3.5" will display in order.
For example, press **"POPCORN"** once, "1.75" appears.
- (b) Press **"START/+30 SEC."** to cook; buzzer sounds once. When cooking finishes, buzzer will sound five times and the microwave will return to waiting state.

9. Potato

- (a) Press **"POTATO"** repeatedly until the number you wish appears in the display:
"1", "2", "3" will display in order.
"1" for 1 potato (approximately 227 g/8 oz)

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

"2" potatoes (approximately 453 g/16 oz)

"3" potatoes (approximately 680 g/24 oz)

 
For example, press "**POTATO**" once, "1" appears

- (b) Press "**START/+30 SEC.**" to cook; buzzer sounds once. When cooking finishes, buzzer sounds five times and the microwave will return to waiting state.

10. Frozen Vegetables

- (a) Press "**FROZEN VEGETABLE**" repeatedly until the number you wish appears in the display: "4.0-", "8.0-", "16.0-" will display in order.


For example, press "**FROZEN VEGETABLE**" once, "4.0-" appears.



- (b) Press "**START/+30 SEC.**" to cook; buzzer sounds once. When cooking finishes, buzzer sounds five times and the microwave will return to waiting state.

11. Beverages

 - (a) Press "**BEVERAGE**" repeatedly until the number you wish appears in the display: "1", "2", "3" will display in order. "1" is about 120 mL (1/2 cup). For example, press "**BEVERAGE**" once, "1" appears.




- (b) Press "**START/+30 SEC.**" to cook; buzzer sounds once. When cooking finishes, buzzer sounds five times and the microwave will return to waiting state.

12. Dinner Plate

- (a) Press "**DINNER PLATE**" repeatedly until the number you wish appears in the display: "9.0-", "12.0-", "18.0-" will display in order.

 For example, press "**DINNER PLATE**" once, "9.0-" appears.



- (b) Press "**START/+30 SEC.**" to cook; buzzer sounds once. When cooking finishes, buzzer sounds five times and the microwave will return to waiting state.

13. Pizza

- (a) Press "**PIZZA**" repeatedly until the number you wish appears in the display: "4.0-", "8.0-", "14.0-" will display in order.

For example, press "**PIZZA**" once, "4.0-" appears.



- (b) Press "**START/+30 SEC.**" to cook; buzzer sounds once. When cooking finishes, buzzer sounds five times and the microwave will return to waiting state.

14. Memory Function

- (1) Press "**O/MEMORY**" to choose memory 1-3 procedure. The screen will display 1, 2, 3.
 (2) If the procedure has been set, press "**START/+30 SEC.**" to use it. If not, continue to set the procedure. Only one or two stages can be set.
 (3) After finishing the setting, press "**START/+30 SEC.**" once to save the procedure.
 If "**START/+30 SEC.**" is pressed again, it will start cooking.



Example: To set the following procedure as the second memory, that is memory 2.

To cook the food with 80% microwave power for 3 minutes and 20 seconds.

The steps are as follows:

- In waiting state, press "**O/MEMORY**" twice; stop pressing when the screen displays "2".
- Press "**TIME COOK**" once, then press "3", "2", "0" in order.
- Press "**POWER**" once, "PL10" displays, then press "8" and "PL8" displays.
- Press "**START/+30 SEC.**" to save the setting. Buzzer sounds once and the screen will display "2". If you press "**START/+30 SEC.**" again, the procedure will be saved as the memory 2 and operated.
- If you want to run the saved procedure, in waiting state, press "**O/MEMORY**" twice, screen displays "2" then press "**START/+30 SEC.**" to run.

15. Multi-stage Cooking

At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Auto cooking cannot work in the multi-stage cooking.

Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes.

The cooking steps are as following:

- Press "**TIME COOK**" once, then press "5", "0", "0" to set the cooking time.
- Press "**POWER**" once, then press "8" to select 80% microwave power.
- Press "**TIME COOK**" once, then press "1", "0", "0", "0" to set the cooking time.
- Press "**POWER**" once, then press "6" to select 60% microwave power.
- Press "**START/+30 SEC.**" to start cooking.

16. Lock Function For Children

Lock: In waiting state, press "**STOP/CANCEL**" for 3 seconds; there will be a long "beep" denoting the microwave has entered into the children-lock state; meanwhile, screen will display "L _ _ _".

Unlock: In locked state, press "**STOP/CANCEL**" for 3 seconds; there will be a long "beep" denoting that lock is released.

17. Inquiring Function

- In cooking state, if the clock has been set, press "**TIMER/CLOCK**"; the oven will display clock for three seconds.
- In the microwave cooking state, press "**POWER**" to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. This will also work during multi-stage cooking.

18. Cooking End Reminder Function

When the cooking is over, the buzzer will sound 5 "beeps" to alert user the cooking is finished.

19. Other Specifications

- In standby state, if the clock is set, the icon ":" will flash; otherwise, it shows "**0:00**".
- In setting function state, the screen displays corresponding setting.
- In working or pause state, the screen displays surplus cooking time.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

20. Safety Lock


Safety Lock is a system that safeguards against unintended activation of the oven, providing a protective measure to ensure child safety.

(1) How the safety lock works


Initiating a cooking process triggers the door lock, and it also engages if the door remains unlocked for additional 30 minutes following the completion of cooking before the door is opened.

Safety Lock is active by default. It will only be deactivated if the user chooses to do so manually. Even in the event of a power disconnection, the safety lock will return to the same activated/deactivated state.

(2) Unlock the door

 
Press  during operation and open the door within 10 seconds, or the safety lock will re-engage. The door will stay unlocked until cooking is initiated.


Or:

Press  within 30 minutes after cooking is complete to manually disable the door lock and switch to standby mode. If no key is pressed, the safety lock will automatically disengage after 30 minutes.


(3) Deactivate the safety lock

If there are no children in the house, you can choose to permanently deactivate the safety lock function.

Press "7", "9" in consecutive order and then press and hold  for three seconds within 30 seconds, the screen will display "U-O", indicating the successful deactivation of the safety lock.

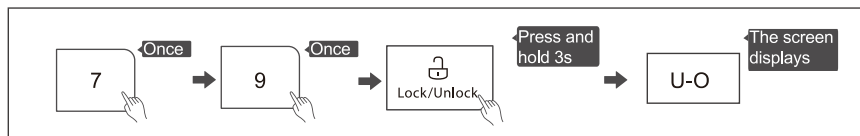

(4) Re-activate the safety lock

Press "7", "9" in consecutive order and then press and hold  for three seconds within 30 seconds, the screen will display "L-F", indicating the successful re-activation of the safety lock.

21. ECO Function

ECO mode saves electricity by turning off the display when the microwave is not in use.

(1) To enter ECO mode:

In standby mode, press " **STOP/CANCEL** " once. The screen will turn off.

(2) To cancel ECO Mode:

In ECO Mode, pressing any key, or opening and closing the door will cancel it.

22. Mute Mode

To activate the mute mode:

In standby mode, press and hold " **8** " for 3 seconds. A beep will sound and "OFF" will display.

Pressing any key will not make a sound.

To deactivate the mute mode:

In mute mode, press and hold " **8** " for 3 seconds. A beep will sound and "On" will display.

Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service centre.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Microwave will not start	a. Electrical cord for microwave oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Non-microwavable utensils or containers were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe utensils or containers only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Non-microwavable utensils or containers were used. b. Food is not defrosted completely. c. Cooking time/power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe utensils or containers only. b. Completely defrost food. c. Use correct cooking time/power level. d. Turn or stir food.
Overcooked foods	Cooking time/power level is not suitable.	Use correct cooking time/power level.
Undercooked foods	a. Non-microwavable utensils or containers were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time/power level is not suitable.	a. Use microwave-safe utensils or containers only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time/power level.
Improper defrosting	a. Non-microwavable utensils or containers were used. b. Cooking time/power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe utensils or containers only. b. Use correct cooking time/power level. c. Turn or stir food.

NORMAL	
Microwave oven interfering TV reception	Radio and TV reception may experience interference when the microwave oven is operating, similar to the interference caused by other small electrical appliances like a mixer, vacuum cleaner, or electric fan. It is normal.
Dim oven light	In low power microwave cooking, the oven light may become dim. It is normal.
Steam accumulating on door/hot air out of vents	While cooking, food may produce steam. Most will escape from vents, but some may condense on cool places like the oven door. It is normal.



This product contains materials potentially harmful to the environment. If at any time in future you need to dispose of this product, please do NOT dispose of this product with household waste. Check with your local municipality for appropriate recycling/disposal options.

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by/
Trileaf Distribution Toronto, Canada M4S 2B8

Braille Tactile Keypad Overlay

A braille tactile keypad overlay sticker is included in the box for your MasterChef® microwave oven and is sized to fit the control area.

The abbreviated braille labels mark each key function to assist blind and visually-impaired customers while using their microwave oven.

To apply the braille tactile keypad overlay sticker:

- (1) Remove the protective film covering the control area.
- (2) A small paper tab identifies the top left of the overlay. Use the tab to fold the top square of the backing down. Do not tear off the tab because you will use it later. Be careful not to let the sticky part of the overlay touch anything until you are ready.
- (3) Line up the bottom of the overlay inside the bottom edge of the control area, all edges of the overlay should be inside the frame?
- (4) Holding the bottom of the overlay in position, smooth it into place from the bottom to top. Work carefully to avoid any wrinkles or bubbles.
- (5) Pull down on the paper tab to peel away the rest of the backing. Hold the sticker away from the control area until you are ready to apply.
- (6) Using one hand, hold the bottom of the overlay away from the appliance. Use the other hand to smooth the overlay down from top to bottom. Work carefully to avoid any wrinkles or bubbles.
- (7) Once you remove the protective film covering the new braille keypad overlay, it is ready to use.

Product No: 043-1508-6 (EM720CL7) | Contact us 1-855-803-9313

Function	Short Form	Braille
1	1	
2	2	
3	3	
4	4	
5	5	
6	6	
7	7	
8	8	
9	9	
0 / Memory	0	
Beverage	bv	
Dinner Plate	dp	

Function	Short Form	Braille
Pizza	pz	
Popcorn	pc	
Frozen Vegetable	vg	
Potato	pt	
Lock/Unlock	lu	
Timer/Clock	tc	
Time Defrost	dt	
Weight Defrost	dw	
Start/+30 Sec.	go	
Stop / Cancel	st	
Time Cook	tc	
Power	pl	
Express Cook	ce	

EM720CL7

