


MASTER **Chef**[™]

0.9 cu. ft. Black Microwave with Stainless Steel Trim

Model: EM9P022PS / Product No: 043-1509-4

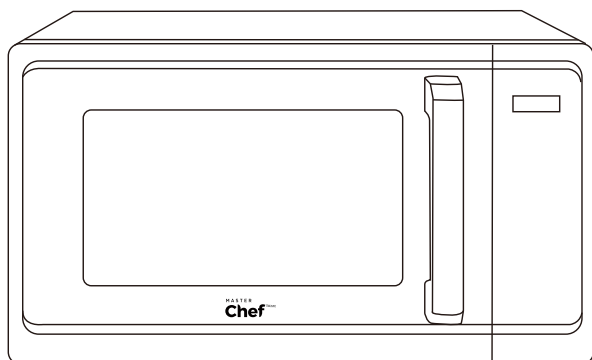

INSTRUCTION MANUAL

Read these instructions carefully before using your microwave oven, and keep the instructions for future reference.

If you follow the instructions, your oven will provide you with many years of good service.

Toll free: 1-855-803-9313



Product No: 043-1509 -4 (EM9P022PS) | Contact us 1-855-803-9313

Precautions to Avoid Possible Exposure to Excessive Microwave Energy	2
Specifications	3
Important Safety Instructions	3
Grounding Information	4
Utensil/Container Use	5
Microwave-safe Materials	
Materials to be Avoided	6
Parts List	7
Turntable Installation	7
Countertop Installation	8
Operation	9
Troubleshooting	16
Warranty	17
Braille Tactile Keypad Overlay	18

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) DOOR (bent).
 - (2) HINGES AND LATCHES (broken or loosened).
 - (3) DOOR SEALS AND SEALING SURFACES.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Specifications

Model:	043-1509-4 (EM9P022PS)
Rated Voltage:	120 VAC 60 Hz
Rated Input Power (Microwave):	1400 W
Rated Output Power (Microwave):	900 W
Oven Capacity:	23 L (0.9 cu. ft.)
Turntable Diameter:	27 cm (10 5/8")
External Dimensions:	29.3 x 48.5 x 38 cm (11 9/16 x 19 1/8 x 15")
Net Weight:	11.21 kg (24 lb 11 oz)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING – To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 2.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 4.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers – for example, closed glass jars – may explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not allow corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surface.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and oven that come together when closing the door, use only mild, non-abrasive soaps, or detergent applied with a sponge or soft cloth.

Product No: 043-1509-4 (EM9P022PS) | Contact us 1-855-803-9313

16. To reduce the risk of fire in the oven cavity:

- (1) Do not overcook food. Carefully watch appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- (2) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- (3) If materials inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- (4) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

17. Liquids, such as water, coffee, or tea can be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

- (1) Do not overheat the liquid.
- (2) Stir the liquid both before and halfway through heating it.
- (3) Do not use straight-sided containers with narrow necks.
- (4) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- (5) Use extreme care when inserting a spoon or other utensil into the container.
- (6) Do not operate microwave with a burnt, chipped, or cracked waveguide cover/mica plate. If the microwave hasn't been cleaned, food particles and grease on the waveguide cover/mica plate can cause sparking in your microwave.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

DANGER - Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death.

Do not disassemble this appliance.

WARNING - Electric Shock Hazard

Improper grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) The extension cord must be a grounding-type 3-wire cord.
 - (3) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, T V or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - 1) Clean door and sealing surface of the oven.
 - 2) Reorient the receiving antenna of radio or television.
 - 3) Relocate the microwave oven with respect to the receiver.
 - 4) Move the microwave oven away from the receiver.
 - 5) Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

UTENSIL/CONTAINER USE

CAUTION - Personal Injury Hazard

Tightly-closed utensils/containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See page 6 for lists of microwave-safe/non-microwave-safe materials.

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, test the utensil in question.

Utensil/Container Test:

1. Fill a microwave-safe container with 1 cup of cold water (250 mL) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

This device complies with part 18 of the FCC Rules.

Product No: 043-1509-4 (EM9P022PS) | Contact us 1-855-803-9313

Materials you can use in microwave oven

Utensil/Container	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3 5 mm (3/16") above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jar	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bag	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plate and cup	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towel	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometer	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensil/Container	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensil	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist tie	May cause arcing and could cause a fire in the microwave oven.
Paper bag	May cause a fire in the microwave oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN

Parts List


Remove the microwave oven and all materials from the carton and oven cavity. Your microwave oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction manual	1

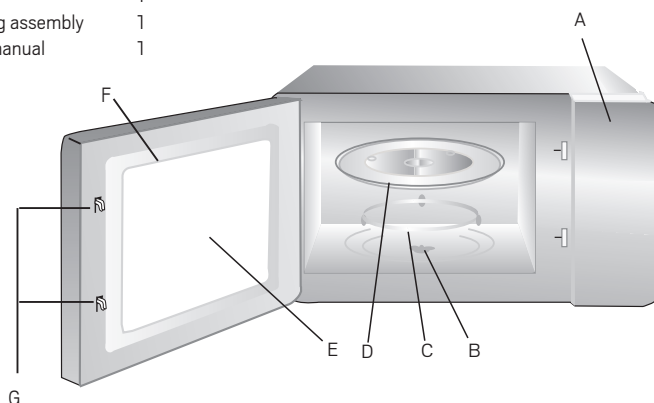

- | | | | |
|--------------------|----------------------------|-----------------------|----------------------------|
| A) Control panel | C) Turntable ring assembly | E) Observation window | G) Safety interlock system |
| B) Turntable shaft | D) Glass tray | F) Door assembly | |

Turntable Installation

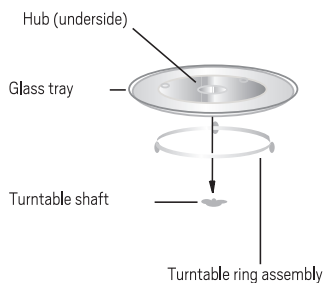

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food should always be placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service centre.

Product No: 043-1509-4 (EM9P022PS) | Contact us 1-855-803-9313

Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Do not remove the light silver mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provides enough open space for the intake and/or outlet vents.

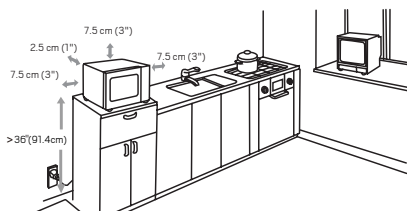

- (1) Leave a minimum clearance of 7.5 cm (3") on each side, 7.5 cm (3") on top and 2.5 cm (1") in the rear. The minimum installation height is 36 inch(91.4cm).

- (2) Do not remove the legs from the bottom of the microwave oven.


- (3) Blocking the intake and/or outlet openings can damage the microwave oven.

- (4) Place the microwave oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your microwave oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.

WARNING: Do not install microwave oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave oven could be damaged and the warranty would be void.

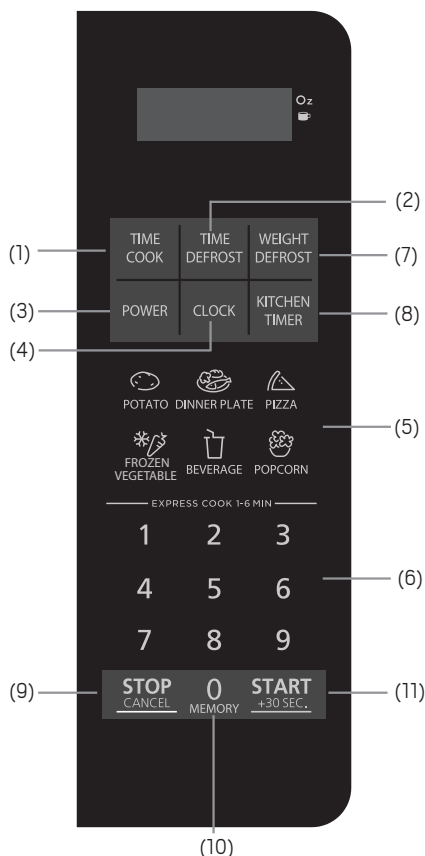OPERATION**Control Panel and Features**

- (1) Time Cook
- (2) Time Defrost
- (3) Power
- (4) Clock
- (5) Auto menu: Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate
- (6) Number keys: 0 to 9
- (7) Weight Defrost
- (8) Kitchen Timer
- (9) STOP/Cancel
- (10) 0/Memory
- (11) START/+30SEC.

OPERATION

1. Power Level

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Clock Setting

- (1) Press "**CLOCK**" once; "00:00" will display.
- (2) Press the number keys and enter the current time. For example if the time is 12:10, press "1, 2, 1, 0" in turn.
- (3) Press "**CLOCK**" to confirm the clock setting. ":" will flash and the clock will illuminate.
- (4) If the input numbers are not within the range of 1:00 – 12:59, the setting will not be accepted until valid numbers are entered.

Note: (1) In the process of setting the clock, if the "**STOP/CANCEL**" button is pressed, or if there is no input for 1 minute, the oven will go back to the former setting automatically.

(2) If the clock needs to be reset, repeat step 1 to step 3.

3. Kitchen Timer

- (1) Press "**KITCHEN TIMER**" once; the screen will display 00:00 and the first hour figure will flash.
- (2) Press the number keys and enter the timer time. (The maximum timer setting is 99 minutes and 99 seconds.)
- (3) Press "**START/+30 SEC.**" to confirm the timer setting and start the timer.
- (4) When the set time has elapsed, the buzzer will sound 5 times.

If the clock has been set (12-hour system), the screen will display the current time once the timer has completed.

Note: (1) The kitchen timer does not use the 12-hour system. It cannot be set to turn off at a specific time, only after a specific duration.

(2) While the kitchen timer is running, the microwave program cannot be changed.

4. Microwave Cook

- (1) Press "**TIME COOK**" once; the screen will display "00:00".
- (2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "**POWER**" once; the screen will display "PL10". The default power is 100% power.

Press the number keys to choose the power level.

- (4) Press "**START/+30 SEC.**" to start cooking.
- Example: cook the food with 50% microwave power for 15 minutes:
- a. Press "**TIME COOK**" once; "00:00" displays.
 - b. Press "1", "5", "0", "0" in order.
 - c. Press "**POWER**" once, then press "5" to select 50% microwave power.
 - d. Press "**START/+30 SEC.**" to start cooking.

Note: (1) In the process of setting, if the "**STOP/CANCEL**" button is pressed, or if there is no input for 1 minute, the oven will go back to the former setting automatically.

(2) If "PL 0" selected, the oven will run the fan without microwave cooking power. You can use this level to remove odours in the oven.

- (3) During microwave cooking, "**POWER**" can be pressed to change the power level.

After pressing "**POWER**", the currently set power level will flash for 3 seconds. Press a different number to set to a different power level.

5. Speedy Cooking

- (1) Instantly cook at 100% power level and select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press "**START/+30 SEC.**" to increase the cooking time by 30 seconds for each press; the maximum cooking time is 99 minutes and 99 seconds.
- (2) Instantly cook at 100% power level with 30 seconds' cooking time by pressing "**START/+30 SEC.**". Each press of the "**START/+30 SEC.**" button will increase the cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.

Note: During microwave cooking and time defrost, time can be added by pressing the "**START/+30 SEC.**" button.

When using the auto-set menu, weight defrost, or during the first step of multi-stage cooking, time cannot be added by pressing "**START/+30 SEC.**" button.

6. Weight Defrost Function

- (1) Press "**WEIGHT DEFROST**" once; the screen will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight between 4 and 100 Oz.
- (3) Press "**START/+30 SEC.**" to start defrosting; the remaining defrosting time will be displayed.

7. Time Defrost Function

- (1) Press "**TIME DEFROST**" once; the screen will display "dEF2".
- (2) Press number pads to input defrosting time between 0:01 and 99:99.
- (3) The default microwave power is power level 3. To change the power level, press "**POWER**" once (the screen will display "PL 3"), then press the number pad of the power level you want.
- (4) Press "**START/+30 SEC.**" to start defrosting; the remaining defrosting time will be displayed.

Note: The defrost power is PL3 and it cannot be changed during defrosting.

8. Popcorn

- (a) Press "**POPCORN**" repeatedly until the number you wish appears in the display: "1.75", "3.2", "3.5" (weight in oz) will display in order.
For example, press "**POPCORN**" once and "1.75" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

9. Potato

- (a) Press "**POTATO**" repeatedly until the number you wish appears in the display.
"1", "2", "3" will display in order.
"1": 1 potato (approximate 230 g)
"2": 2 potatoes (approximate 460 g)
"3": 3 potatoes (approximate 690 g)
For example, press "**POTATO**" once, "1" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

Product No: 043-1509-4 (EM9P022PS) | Contact us 1-855-803-9313

10. Pizza

- (a) Press "**PIZZA**" repeatedly until the number you wish appears in the display.
"4.0-", "8.0-", "14.0-" (weight in Oz) will display in order.
For example, press "**PIZZA**" once; "4.0-" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

11. Frozen Vegetable

- (a) Press "**FROZEN VEGETABLE**" repeatedly until the number you wish appears in display, "4.0-", "8.0-", "16.0-" (weight in Oz) will display in order.
For example, press "**FROZEN VEGETABLE**" once; "4.0" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

12. Beverage

- (a) Press "**BEVERAGE**" repeatedly until the number you wish appears in the display, "1-", "2-", "3-" (measuring in cups) will display in order. One cup is about 120 mL.
For example, press "**BEVERAGE**" once; "1-" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

13. Dinner Plate

- (a) Press "**DINNER PLATE**" repeatedly until the number you wish appears in the display, "9.0-", "12.0-", "18.0-" (weight in Oz) display in order.
For example, press "**DINNER PLATE**" once; "9.0-" appears.
- (b) Press "**START/+30 SEC.**" to cook; the remaining cooking time will be displayed.

14. Memory Function

- (1) Press "**O/MEMORY**" repeatedly to choose memory function 1 - 3. The screen will display 1, 2, 3.
- (2) If a procedure has been set to memory, press "**START/ +30 SEC.**" to use it. If not, follow steps a to e below to set the procedure. The memory function can be used to store up to two stages (see Multi-stage Cooking) for easier use.
- (3) Once the cooking procedure is set, press "**START/ +30 SEC.**" once to save the procedure, and a second time to start the procedure.

Example: Set memory function 2 to cook at 80% power for 3 minutes and 20 seconds.

The steps are as follows:

- From standby mode, press **"O/MEMORY"** twice until the screen displays "2".
- Press **"TIME COOK"** once, then press "3", "2", "0" in order.
- Press **"POWER"** once; "PL10" displays, then press "8" and "PL8" displays.
- Press **"START/ +30 SEC."** to save the setting. Buzzer sounds once and the screen will display "2". If you press **"START/+30 SEC."** again, the procedure saved in memory 2 will begin.
- If you want to run the saved procedure from stand-by mode, press **"O/MEMORY"** twice, the screen will display "2", then press **"START/+30 SEC."** to run.

Note: memory procedures cannot include auto menu entries.

15. Multi-stage Cooking

This microwave can accept instructions to cook food in two different stages with two different times at two different power levels. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: multi-stage cooking procedures cannot include auto menu entries.

Example: Use multi-stage cooking to cook with 80% microwave power for 5 minutes and then 60% microwave power for 10 minutes. The cooking steps are as follows:

- Press **"TIME COOK"** once, then press "5", "0", "0" to set the cooking time;
- Press **"POWER"** once, then press "8" to select 80% microwave power.
- Press **"TIME COOK"** once, then press "1", "0", "0", "0" to set the cooking time;
- Press **"POWER"** once, then press "6" to select 60% microwave power.
- Press **"START/+30 SEC."** to start cooking.

16. Child-lock Function

Lock: In standby mode, press **"STOP/CANCEL"** for 3 seconds; there will be a long "beep" signifying that the child-lock function of the microwave has been activated. The screen will display "C L O C K".

Un-lock: In locked mode, press **"STOP/CANCEL"** for 3 seconds; there will be a long "beep" signifying that the lock is released.

17. Inquiring Functions

- In cooking mode, press **"CLOCK"**; the oven will display the time for three seconds.
- In cooking mode, press **"POWER"** to display the current microwave power level. After three seconds, the oven display will return to show cooking time remaining. The microwave power level will not display when the microwave is in either defrost mode or auto-cooking mode.

18. Program End Signal

When any cooking function is complete, the buzzer will sound 5 "beeps" to alert the user.

19. Notes

- In standby mode, if the clock has been set to the current time, the colon ":" will flash. If the clock is not set, the display will show "0:00".
- When setting a function, the screen displays the current setting.
- When cooking or when paused, the screen displays the remaining cooking time.


Auto-set Menu

Menu	Weight	Display
A-1 Popcorn	49.6 g/1.75 oz	1.75
	90.7 g/3.2 oz	3.2-
	99.2 g/3.5 oz	3.5-
A-2 Potato	1 (about 0.23 kg)	1
	2 (about 0.46 kg)	2
	3 (about 0.69 kg)	3
A-3 Pizza	113.3 g/4.0 oz	4.0-
	226.7 g/8.0 oz	8.0-
	396.8 g/14.0 oz	14.0-
A-4 Frozen vegetable	113.3 g/4.0 oz	4.0-
	226.7 g/8.0 oz	8.0-
	453.5 g/16.0 oz	16.0-
A-5 Beverage	1 cup (120 mL)	1-
	2 cup (240 mL)	2-
	3 cup (360 mL)	3-
A-6 Dinner Plate	255.1 g/9.0 oz	9.0-
	340.1 g/12.0 oz	12.0-
	510.2 g/18.0 oz	18.0-

WARNING: Do not run the microwave without any food inside. Running the microwave empty is dangerous.

HOW TO OPEN THE DOOR

Pull the release trigger upwards and then pull the handle to open the door.

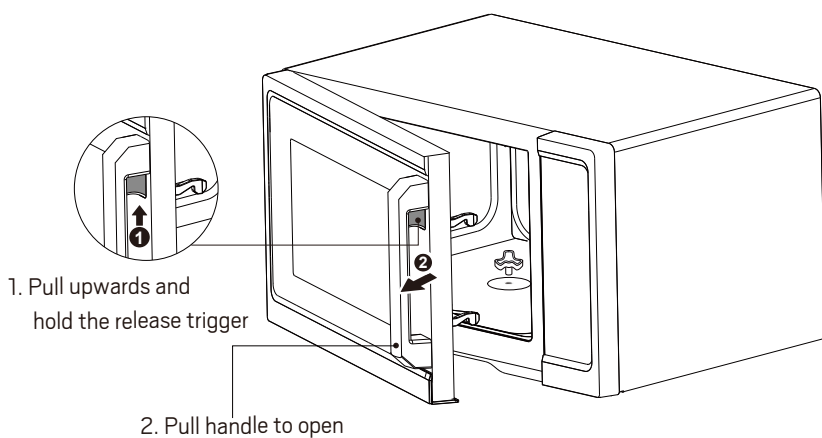**Note:**

The two distinct actions that meets 36A 1.1 and 1.2 of UL 923 regulations are to prevent accidental operation and ensure child safety.

Product No: 043-1509-4 (EM9P022PS) | Contact us 1-855-803-9313

MAINTENANCE

Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service centre.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Materials to be avoided in microwave oven are being used. b. The oven is operating when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven are being used. b. Food is not defrosted completely. c. Cooking time/power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time/power level. d. Turn or stir food.
Overcooked foods	Cooking time/power level is not suitable.	Use correct cooking time/power level.
Undercooked foods	a. Materials to be avoided in microwave oven are being used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time/power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time/power level.
Improper defrosting	a. Materials to be avoided in microwave oven are being used. b. Cooking time/power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time/power level. c. Turn or stir food.

NORMAL	
Microwave oven interfering TV reception	Radio and TV reception may experience interference when the microwave oven is operating, similar to the interference caused by other small electrical appliances like a mixer, vacuum cleaner, or electric fan. It is normal.
Dim oven light	In low power microwave cooking, the oven light may become dim. It is normal.
Steam accumulating on door/hot air out of vents	While cooking, food may produce steam. Most will escape from vents, but some may condense on cool places like the oven door. It is normal.



This product contains materials potentially harmful to the environment. If at any time in future you need to dispose of this product, please do NOT dispose of this product with household waste. Check with your local municipality for appropriate recycling/disposal options.

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by/

Trileaf Distribution Toronto, Canada M4S 2B8

Braille Tactile Keypad Overlay

A braille tactile keypad overlay sticker is included in the box for your MasterChef® microwave oven fit the control area.

The abbreviated braille labels mark each key function to assist blind and visually-impaired customers while using their microwave oven.

To apply the braille tactile keypad overlay sticker:

- (1) Remove the protective film covering the control area.
- (2) A small paper tab identifies the top left of the overlay. Use the tab to fold the top square of the backing down. Do not tear off the tab because you will use it later. Be careful not to let the sticky part of the overlay touch anything until you are ready.
- (3) Line up the bottom of the overlay inside the bottom edge of the control area, all edges of the overlay should be inside the frame.
- (4) Holding the bottom of the overlay in position, smooth it into place from the bottom to top. Work carefully to avoid any wrinkles or bubbles.
- (5) Pull down on the paper tab to peel away the rest of the backing. Hold the sticker away from the control area until you are ready to apply.
- (6) Using one hand, hold the bottom of the overlay away from the appliance. Use the other hand to smooth the overlay down from top to bottom. Work carefully to avoid any wrinkles or bubbles.
- (7) Once you remove the protective film covering the new braille keypad overlay, it is ready to use.

Function	Short Form	Braille
1	1	
2	2	
3	3	
4	4	
5	5	
6	6	
7	7	
8	8	
9	9	
0 / Memory	0	
Beverage	bv	
Dinner Plate	dp	

Function	Short Form	Braille
Pizza	pz	
Popcorn	pc	
Frozen Vegetable	vg	
Potato	pt	
Kitchen Timer	tm	
Clock	cl	
Time Defrost	dt	
Weight Defrost	dw	
Start/+30 Sec.	go	
Stop / Cancel	st	
Time Cook	tc	
Power	pl	



EM9P022PS