

# **Stainless Steel Blade Coffee Grinder**

## User Manual

Part Number  
CG9701AD-UL  
SKU  
043-1562-4

**vida**<sup>™</sup>  
by PADERNO

Table of Contents

IMPORTANT SAFEGUARDS ..... 04

KNOW YOUR COFFEE GRINDER ..... 05

BEFORE USING FOR THE FIRST TIME ..... 06

USING YOUR COFFEE GRINDER ..... 06

CLEANING AND MAINTENANCE ..... 07

GRINDING TIPS ..... 07

TROUBLESHOOTING ..... 08

WARRANTY ..... 09

## IMPORTANT SAFEGUARDS

1. Read all the instructions in this manual. Save for future reference.
2. Before using the appliance, check that the voltage marked on the appliance matches the voltage of your local electrical supply.
3. If any part of the appliance is or appears to be damaged, or malfunctions, do not use it and instead contact customer support.
4. Do not allow the power cord to rest on any hot surfaces, or to drape over counter tops or tabletops. If the cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified technician in order to avoid hazards.
5. When the appliance is not in use, or prior to assembling/ disassembling the appliance, or prior to cleaning, turn the appliance OFF and unplug from the wall outlet. To unplug, grasp the plug—not the power cord—and with a steady amount of force pull it from the outlet. Never yank the power cord from the outlet.
6. Close supervision is necessary when the appliance is used by or near children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
7. Make sure that hands, fingers and utensils are kept away from all moving parts.
8. Do not immerse the base of the appliance, which contains the motor, in liquid, or place in a dishwasher. Doing so will damage the appliance.
9. To protect against fire, electric shock or personal injury, do not immerse the electric plug or the power cord in any liquid, or place in a dishwasher.
10. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
11. Do not use the appliance for anything other than its intended purpose.
12. Check inside the appliance for any foreign objects before using.
13. Always operate the appliance on a secure, dry, level surface.
14. Do not place the appliance on or near a hot gas, electric burner, or where it could contact another hot appliance.
15. If the appliance motor stalls, turn off the appliance immediately.
16. Do not leave the appliance unattended while in use.
17. For household use only. Do not use outdoors.
18. Do not remove the appliance jar cover until the blade has completely stopped.
19. Do not attempt to use the appliance without the jar cover and small jar cover being in place.
20. To avoid the risk of injury, do not fill the bowl above the marked maximum fill line (MAX).
21. Ensure the body is on a flat, level surface, and all attachments are

locked securely in place before operating the appliance.

## KNOW YOUR COFFEE GRINDER

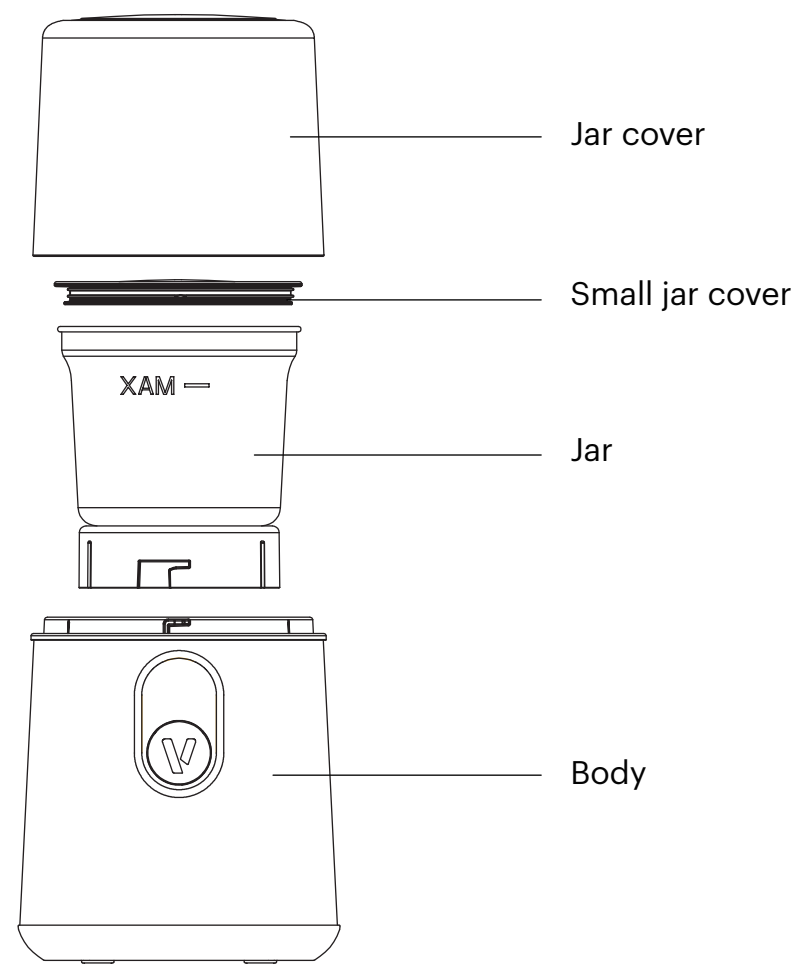


Figure 1: Components of the Coffee Grinder

## BEFORE USING FOR THE FIRST TIME

Carefully unpack your appliance and remove all packing materials from the area. To remove any dust that may have accumulated during packaging, wipe the jar, blades, and appliance exterior with a damp lint-free cloth or a damp sponge. Use extreme care as the blades are sharp.

The cleaning exception among the appliance components are the jar cover and small jar cover, which can be immersed in water for cleaning. Dry the covers thoroughly.

**CAUTION:** Do not immerse the appliance body in water or fill the jar with water while cleaning.

## USING YOUR COFFEE GRINDER

1. Place the appliance on a flat surface.
2. Place the jar on the appliance body, turning clockwise until a clicking sound is heard. The jar is now attached to the body. Turn the jar counter-clockwise to detach it.
3. Pour the coffee beans into the jar. Note that the quantity must not exceed the maximum line (MAX) marked on the exterior of the bowl (85 g).
4. Place the small jar cover on the jar. Then place the jar cover on the jar and lock it into place by turning clockwise until a clicking sound is heard.
5. Plug the appliance into a convenient power outlet.
6. Press and hold the power button to operate the appliance. Release the power button to stop the appliance.
7. Check the consistency of the coffee grounds through the transparent jar cover.
8. When the desired grind has been achieved, release the power button and allow the blades to come to a complete stop. Unplug the appliance from the power outlet.
9. Remove the jar cover, turn the jar counter-clockwise to release it from the appliance body, and pour out the coffee grounds.

**CAUTION:** To check the consistency of the coffee grounds by removing the jar cover, wait until the blades have come to a complete stop. Never remove the cover until the blades have come to a complete stop.

**CAUTION:** Do not operate the appliance for longer than 30 seconds at a time. Allow the appliance to cool down for three minutes between one session and the next.

## CLEANING AND MAINTENANCE

**CAUTION:** Unplug the appliance before cleaning. Do not immerse the power cord, plug, or appliance base—containing the motor—in water or any other liquid. Always remove the plug from the wall outlet after each use.

1. Wipe the appliance body with a damp cloth only, as the appliance is not dishwasher safe. The jar can be hand-washed carefully with mild, soapy water. The jar has a sharp

blade for grinding coffee beans in the bottom of it, so care must be taken while cleaning. The jar cover and small jar cover are dishwasher-safe. Never immerse the appliance in water or fill the jar with water.

2. The jar cover and the small jar cover are both dishwasher-safe.
3. Wipe the jar and the blades with a lint-free cloth. Be very careful as the blades are sharp.

## GRINDING TIPS

1. A coarse grind is generally used for percolators and coffee urns. A medium grind is used for drip coffee makers and steam espresso machines. A fine grind is used for electric espresso machines. The amount of time you spend grinding your coffee beans will determine whether the grind is coarse, medium, or fine.
2. Vary the grinding times to suit your tastes and the type of coffee beans you are using.
3. Coffee beans will keep up to two

months in the freezer in an airtight container and can be ground while still frozen. For the freshest, most flavourful coffee, grind only enough for the pot you are making. Coffee grounds left in your grinder will become stale and adversely affect the flavour of the coffee. Make sure to clean the jar, blades, and jar covers after each use.

4. In addition to grinding coffee beans, you may also grind the following ingredients:

Ingredient	Grinding time or until desired consistency
Coffee beans 85 g (3 oz)	30 seconds
Pepper 30 g (1 oz)	30 seconds
Star Anise 30 g (1 oz)	30 seconds
Dried Peanuts 30 g (1 oz)	30 seconds
Sea Salt 30 g (1 oz)	30 seconds

**NOTE:** The maximum amount of any ingredient should not exceed the MAX line on the bowl exterior.

## TROUBLESHOOTING

Issue	Solution
Appliance is not working.	Check that the jar and base are assembled correctly. The jar will make a clicking sound when it is in place.
	Check that the jar covers and jar are assembled correctly. The jar covers should sit firmly on the jar.
	Check that the plug is inserted correctly. Remove the plug from the outlet and reinsert.
	Remove the plug, wait five minutes, and reinsert. Press the power button to check that the appliance is now working.

## WARRANTY

### 2-Year Limited Warranty:

Starting from the date of purchase, Vida™ by PADERNO warrants that your product is free from any manufacturing defects in materials or workmanship for a period of 2 years. This warranty is only offered on Vida™ by PADERNO products sold and used in Canada. The Vida™ by PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at the discretion of Vida™ by PADERNO.

The Vida™ by PADERNO warranty does not apply to products that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with the product's Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Vida™ by PADERNO, are used. There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.

### CONTACT:

If you have any questions, please contact us at 1-800-263-9768  
TRILEAF DISTRIBUTION TRIFEUIL, 2180 Yonge Street, Toronto, ON, Canada, M4S 2B8.

**A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.**

