



PADERNO™

User Manual PORTABLE ICE MAKER

Model No. ICE036
Product No. 043-2386-8



Product No. 043-2386-8

The PADERNO™ Portable Ice Maker with its sleek exterior design and large ice production capacity is the ideal addition to your home bar or kitchen. Quickly produces ice in as little 7 minutes and continues to produce up to 33 lb of ice in 24 hours. Entertain with ease, ensuring that your guests always have a cold drink.

1-800-263-9768 paderno.com

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	4
Technical Specifications	6
Using Your Ice Maker	8
Cleaning and Maintenance	10
Troubleshooting	11
Our Guarantee	12

ATTENTION: Before plugging in the ice maker for the first time, let it sit on a flat surface for at least 2 hours, allowing the coolant to settle. Plugging it in before then could result in a product malfunction.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Check that the voltage on the rating label on the appliance corresponds with the voltage in your home.
3. DO NOT remove any safety, warning, or product information labels from your Ice Maker.
4. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Refer to the "Our Guarantee" section regarding the product's warranty before returning the appliance to the point of purchase.
5. DO NOT let the cord hang over the edge of a table or counter, or touch hot surfaces.
6. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
7. Place power cord in such a way that it cannot be pulled on by children or cause a tripping hazard.
8. DO NOT use appliance for other than its intended use.
9. DO NOT use outdoors.
10. The use of attachments not recommended by the manufacturer may cause fire, electric shock or injury.
11. DO NOT touch the evaporator when using the Ice Maker or making ice.
12. To protect against a fire or electric shock, do not immerse any part of the Ice Maker housing in water or other liquids.
13. To disconnect, turn any control to the off position then remove the plug from the wall outlet.
14. Unplug the appliance from the outlet when not in use and before cleaning.
15. DO NOT clean your Ice Maker with any flammable or abrasive cleaners.
16. DO NOT overturn the Ice Maker. If the ice maker is overturned, let the Ice Maker sit upright for 2 hours before powering it on again.
17. If the Ice Maker is brought in from a cold environment, do not use for a few hours. Allow the unit to warm up to the room temperature before operating.
18. Never put flammable, explosive or corrosive articles in the icemaker.
19. Never use the Ice Maker when there is a flammable gas leakage.
20. Unplug the Ice Maker before moving it to avoid damaging the refrigeration system.
21. This appliance can be used by children of the age of 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved.
22. Children should not play with the appliance.
23. Cleaning and maintenance should not be done by children without supervision.
24. Close supervision is needed when any appliance is used by or near children.
25. DO NOT leave the appliance unattended when in use.
26. Dispose of the Ice Maker according to local regulators as it uses flammable blowing gas and refrigerant.
27. This appliance is intended to be used in household and similar applications such as:
 - a. Staff kitchen areas in shops, offices and other working environments
 - b. Farm houses and by clients in hotels, motels and other residential type environments
 - c. Bed and breakfast type environments
 - d. Catering and similar non-retail applications

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: DO NOT use mechanical devices or other means to accelerate the defrosting process.

WARNING: DO NOT damage the refrigerant circuit.

WARNING: DO NOT use electrical appliances inside the food storage compartments of the appliance.

WARNING: DO NOT store explosive substances such as aerosol cans with a flammable propellant in this appliance.

WARNING: Risk of fire/flammable materials.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: DO NOT use multiple portable socket-outlets or portable power supplied at the rear of the appliance.

SAVE THESE INSTRUCTIONS THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

Grounded Plug

Plug the Ice Maker into an exclusive grounded power outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the outlet.

This appliance must be plugged into an outlet that is properly installed and grounded. It is equipped with a power cord having a grounded plug.

DO NOT attempt to modify the plug in any way.

Notes on the Power Cord

Avoid the use of an extension cord as it may overheat and cause risk of fire.


However, if it is necessary to use a long detachable power-supply cord or extension cord:

- The marked electrical rating of the detachable power-supply cord or extension cord should be greater than or equal to the electrical rating of the appliance.
- The extension cord must be a grounding-type 3-wire cord.
- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Technical Specifications

Class	I
Electrical Rating	1.8 A MAX, 120 V AC 60 Hz
Refrigerant/Refrigerant Amount	R600a/0.0605 lbs
Design Pressure	138Psig – 290Psig
Foaming Agent	C ₅ H ₁₀
Net Weight	24 lb 4 oz (11 kg)
Unit Size (LxWxH)	15 3/4 x 9 11/16 x 17" (40 x 24.6 x 43 cm)

Product Diagram

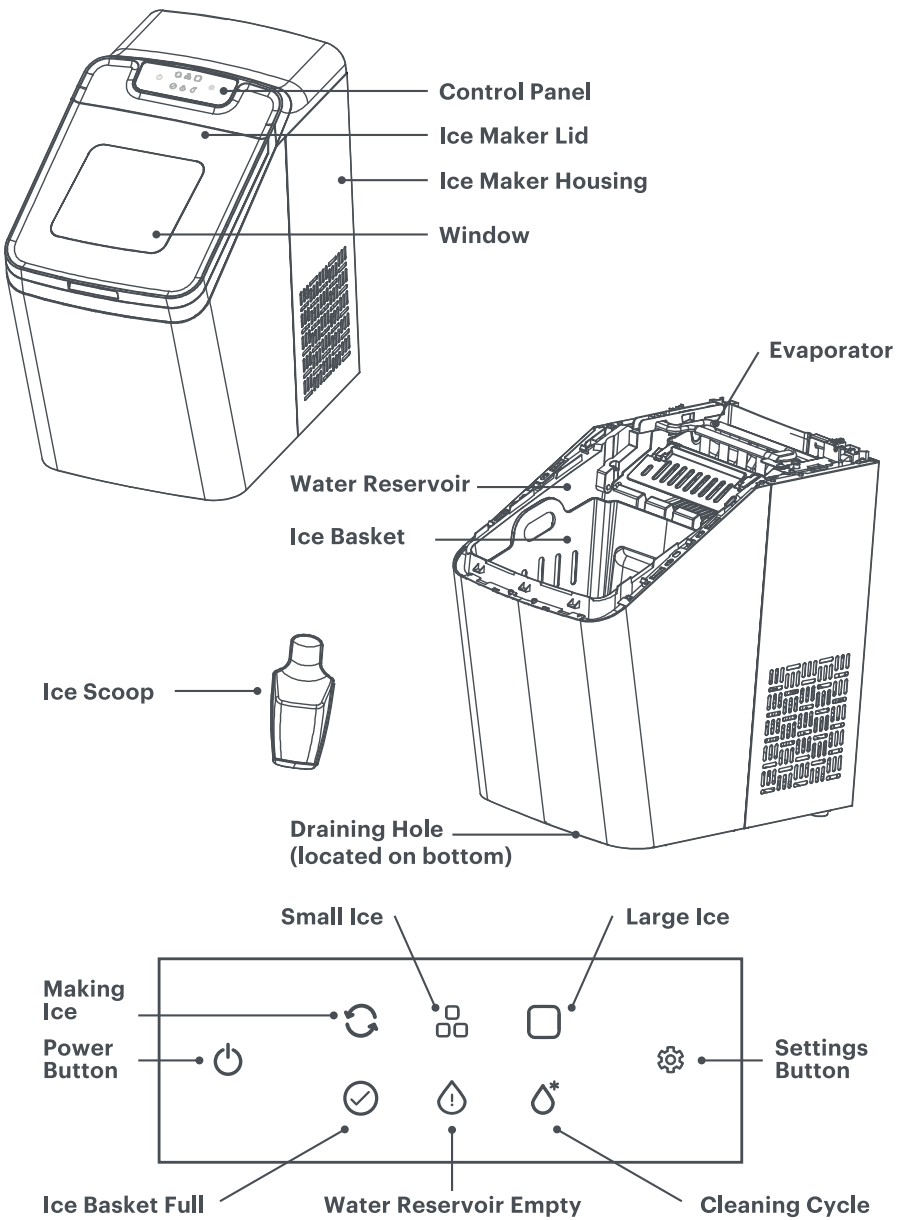

Note: Product may vary slightly from illustration.

Note: Please refer to the Cleaning and Maintenance section for instructions about the Cleaning Cycle.

Using Your Portable Ice Maker

Quickly and conveniently produce ice in your PADERNO™ Portable Ice Maker.

Before First Use

1. Refer to the Cleaning & Maintenance section of this manual. Clean the appliance thoroughly before first use. Remove all packing material and accessories.
2. Ensure the Ice Maker is level and on a stable table or platform.
3. Do not turn the Ice Maker upside down to prevent damage to the refrigerating system in the Ice Maker. **Let the Ice Maker sit on a counter for 2 hours before using.**
4. Ensure there is sufficient space around the Ice Maker for ventilation. Leave at least 6" (15 cm) of clearance on all sides of the Ice Maker for proper ventilation.
5. For best results, use room temperature or cold water in the Water Reservoir. Hot water may damage the Ice Maker.
6. DO NOT use the Ice Maker in a very cold environment (lower than 41°F/5°C).
3. Plug the unit in to a grounded outlet.
NOTE: Allow the Ice Maker to sit on a flat surface for 2 hours before using if it has been recently moved.
4. Open the Ice Maker Lid and remove the Ice Basket.
5. Fill the Water Reservoir.
NOTE: Do not exceed the MAX marking indicated in the Water Reservoir.
6. Place Ice Basket back into the Ice Maker. Close the lid.
7. Use the Setting Selection to choose between Large or Small Ice.
8. The Making Ice indicator will blink when the machine is in standby mode. Press the Power Button to begin the ice making cycle. The Making Ice indicator will become solidly lit to show this.
9. Depending on the ambient temperature of the environment and water temperature, a batch of ice can be made in approximately 7-15 minutes.
10. Ice will automatically drop and be dispensed into the Ice Basket when the cycle is complete.
11. The Control Panel will indicate when the Ice Basket is full. The Ice Maker will continue to make ice when some ice has been removed from the basket. The maximum capacity of the Ice Basket is 4 lb (1.8 kg) of ice.
12. The Control Panel will indicate when the Water Reservoir is empty. Remove the Ice Basket to refill the Water Reservoir and press the Power Button to resume making ice.
13. Stop making ice at any time by selecting the Power Button and unplugging the unit from the wall.
14. Open the top lid and transfer any remaining ice to a freezer.
NOTE: The ice will last in the Ice Maker for up to an 18 hour period, dependent on the ambient temperature.
15. Empty the remaining water from the Water Reservoir by removing the drain plug over a sink.

HOW TO USE

1. Place appliance on a flat surface.
2. Ensure the drain plug on the bottom of the Ice Maker is in place and secure.

Cleaning and Maintenance

To keep your ice tasting fresh, we recommend cleaning your Ice Maker once per week.

Cleaning

1. Always disconnect the appliance from the power outlet and allow it to warm to room temperature.
2. If residual water is found in the ice tray, gently push the tray back to allow the water to drain back into the Water Reservoir.
3. Remove the drain plug located on the bottom of the Ice Maker to remove excess water from the reservoir. Ensure it is secured back into the Ice Maker for future use.

Cleaning Cycle Mode

1. Fill the Water Reservoir with fresh water. Using the Setting Selection Button, select the Cleaning Cycle indicator and press the Power Button. The pump will run for 6 minutes and then go into standby.
2. Empty the water from the Cleaning Cycle by removing the drain plug.
3. Remove the Ice Basket.
4. Clean the Ice Maker interior with a soft cloth soaked with warm water and vinegar, then rinse with clean water. Drain the water.
5. Wash the Ice Basket and Ice Scoop in warm, soapy water. Rinse and dry.

6. Clean the exterior of the Ice Maker with a soft damp cloth. Use mild soap, if necessary.
NOTE: DO NOT use organic solvent, boiled water, detergent, or abrasive cleaners for cleaning.
7. If the Ice Maker will not be used for a while, empty and dry the Water Reservoir before storing.

Disposal of Appliance

DO NOT dispose of this product in household waste. Dispose of as per the requirements of your local municipality.

Troubleshooting

Problem	Possible Causes	Solution
Water Reservoir Empty indicator turns on.	<ol style="list-style-type: none"> 1. Low water level or lack of water. 2. The water screen at the bottom of the reservoir is blocked. 3. Pump malfunction. 	<ol style="list-style-type: none"> 1. Stop making ice, refill the Water Reservoir and press the Power Button to resume making ice. 2. Clean the Ice Maker. 3. Refer to the "Our Guarantee" section for warranty information.
Ice Basket Full indicator turns on.	<ol style="list-style-type: none"> 1. Ice Basket is full. 2. Sensor is not working. 	<ol style="list-style-type: none"> 1. Remove ice from the Ice Basket. 2. Clean the Ice Maker thoroughly. If the issue persists, refer to "Our Guarantee" section for warranty information.
Ice Basket Full indicator is blinking.	<ol style="list-style-type: none"> 1. The ice shovel for pushing ice into the basket is blocked. 	<ol style="list-style-type: none"> 1. Remove some ice from the Ice Basket and check that the ice shovel is not blocked.
Ice Maker stops working.	<ol style="list-style-type: none"> 1. Ice Tray is not in the right position. 	<ol style="list-style-type: none"> 1. Remove ice from the Ice Basket and press the Power Button to reset the Ice Maker. If issue persists, refer to "Our Guarantee" section for warranty information.
Ice Basket is full but indicator is not on.	<ol style="list-style-type: none"> 1. Sensor is not working. 	<ol style="list-style-type: none"> 1. Unplug the appliance and move it to a location that is not exposed to direct sunlight. If issue persists, clean the ice maker thoroughly.
Ice is sticking together.	<ol style="list-style-type: none"> 1. The ice making process is too long. 2. Water in the Water Reservoir is too cold. 	<ol style="list-style-type: none"> 1. Stop making ice and wait for the ice to melt before restarting the appliance. 2. Fill the Water Reservoir with water between 47°F (8°C) and 77°F (25°C).
No ice is being produced.	<ol style="list-style-type: none"> 1. Ambient temperature or water temperature is too high to produce ice. 2. Refrigerating system is leaking. 3. Refrigerating system is blocked. 	<ol style="list-style-type: none"> 1. Ensure that the ambient temperature of the room is less than 90°F (32°C). Fill the Water Reservoir with water between 47°F (8°C) and 77°F (25°C). 2. Refer to "Our Guarantee" section for warranty information. 3. Refer to "Our Guarantee" section for warranty information.
Poor ice quality.	<ol style="list-style-type: none"> 1. Poor heat dissipation. 2. The water temperature is too high. 3. The ambient temperature is too high. 	<ol style="list-style-type: none"> 1. Leave a clearance of 6" (15 cm) on all sides of the Ice Maker for proper ventilation. 2. Fill the Water Reservoir with water between 47°F (8°C) and 77°F (25°C). 3. Operate the Ice Maker in an environment with an ambient temperature between 50°F (10°C) and 90°F (32°C).

Our Guarantee

If you experience any issues with your PADERNO™ Portable Ice Maker, please refer to the warranty terms below to determine the corrective course of action.

2-Year Limited Warranty

Padinox Inc. ("PADERNO") has been fuelling your passion for cooking since 1979. This iconic Canadian brand gives you outstanding durability and performance, so you can concentrate on the important things, like what to make next.

That's why we stand by all our products! Starting from the date of purchase, PADERNO warrants that your Kitchen Appliance is free from any manufacturing defects in materials or workmanship for a period of 2 years.

This warranty is only offered on PADERNO appliances sold and used in Canada. The PADERNO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labour so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product at PADERNO's discretion.

The PADERNO warranty does not apply to appliances that have been used commercially or in non-household applications. The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this User Manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product. This warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by

PADERNO, are used. You may also arrange for service after the warranty expires at an additional cost. **There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness (or those provided for by law) are limited in duration to the period of coverage of this express written limited warranty.**

CONTACT:

If you have any trouble with the product during the warranty period, please visit us online at **www.PADERNO.com**. For further information, please contact us at **1-800-263-9768** or email us at **customer.service@padinox.ca**

Padinox Inc. Toronto Canada M4P 2V8

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place. We recommend that you register your product on our website - **<https://www.PADERNO.com/pages/product-registration>**

Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.



Cook. For life.

Valued by professional chefs and passionate home cooks alike, PADERNO™ offers an exceptional level of durability and performance guaranteed.

Connect with us at PADERNO.com to learn more and register your product.

For questions and concerns, please contact:
Customer.service@padinox.ca
1-800-263-9768