



KEURIG

Let's get brewing.

K-Supreme™

SINGLE SERVE COFFEE MAKER

Quick Start Guide

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS

- For household use only.
- Do not use distilled water.
- Scalding may occur if the handle is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use coffee maker in upright position only. Allow coffee maker to cool (90 min) prior to turning it in any position other than upright.
- Do not immerse coffee maker in water.

For detailed coffee maker cleaning and maintenance instructions, videos, and the full Use & Care Guide visit keurig.ca.



- WARNING:** Keep all plastic bags away from children.
- CAUTION:** Keurig recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non K-Cup® pods or Keurig® accessories may cause coffee maker malfunction or injury.
- WARNING:** Used K-Cup® pods should be removed from the pod holder after the brew, or in part with the daily cleaning routine.
- WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
- CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder, and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- POWER CORD INSTRUCTIONS:**
 - A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a long detachable power-supply cord or extension cord is used:

i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.

iii. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

- CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

SAVE THESE INSTRUCTIONS



WARNING
RISK OF FIRE OR ELECTRIC SHOCK
DO NOT OPEN



WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE

Button Overview


ADD WATER

will illuminate when water is needed

DESCALE

will illuminate when your coffee maker needs to be descaled

Press the **STRONG** Button for bolder coffee

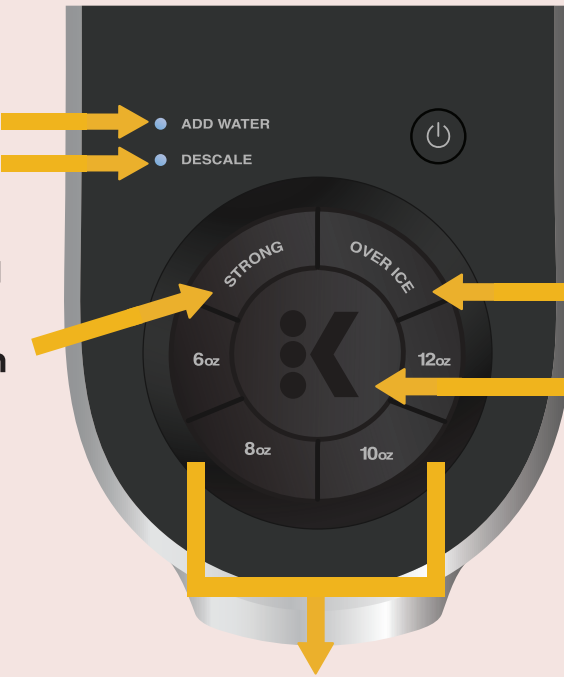

Brew your favourite beverages **OVER ICE**

BREW Button

BREW SIZES
Choose 177, 237, 296, or 355 ml (6, 8, 10, or 12 oz)

Before You Brew



1 Plug & Place

Remove packing tape from coffee maker. Plug into a grounded outlet.

Place a large mug (296 ml/10 oz minimum) on the drip tray.

NOTE: If changing water tank position to the back, please complete before first brew (refer to instructions included).

2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter, install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the lock tabs engage with the coffee maker. Replace lid.

NOTE: Do not use distilled water.

SCHAWKI

1620 Tech Avenue, Mississauga, ON L4W 5P4 Canada (905) 219-1600

Please check carefully before using. Although every effort is made to produce the finest possible product, errors do occur. We do not assume any liability beyond the replacement of our product.

Client Name: Keurig Green Mountain

Sales Order: 104209334

Service Order: 402002293

Date: 09/14/2020

Description: K Supreme QSG (Eng) CDN REV B QSG

KGM Job #: 10273

Item Part #: DC0000005004 REV B

Buyer: Mona Gandhi

Vendor:

Designer:

CC:

Operator: SB

Project:

Barcode:

Mag:

Bar Width Adj.:

Dieline #:

Line Screen: 150

Print Method: Offset Printing

Printer: GUANGDONG GAOTI PACKING AND PRINTING - DONGGUAN

Printer PO #:

Special Print Processes:

1% 2% 3% 5% 10% 25% 40% 50% 60% 75% 90% 95% 100%

Cyan

Magenta

Yellow

Black

KGM Approval:

Date:

Designer Approval:

Date:

Buyer Approval:

Date:

Proofreader Approval:

Date:

Changes:

Date:

