 


# MASTER Chef™

## Programmable Coffee Maker

Model no. 043-2742-0

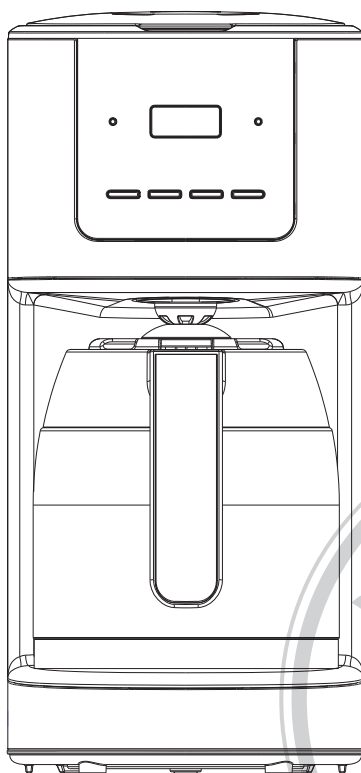

## INSTRUCTION MANUAL

Read this manual thoroughly before using this product and save it for future reference.

Model no. 043-2742-0 | Contact us: 1-855-803-9313

Important Safeguards	2-3
Know Your Coffee Maker	4
Before First Use	5
Using Your Coffee Maker	5
Delay Brew	6
Cleaning Your Coffee Maker	6
Removing Mineral Deposits	7
Hints for Great-tasting Coffee	7
Warranty	8

 
## IMPORTANT SAFEGUARDS

 
When using this electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions. Save these instructions for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before attaching or removing parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.

MASTER  
**Chef**<sup>TM</sup>

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than its intended use.
12. Do not clean container with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of the appliance are hot when operated, so do not touch with your hands. Use handles or knobs only.
16. Never leave the empty carafe on the heat insulation plate.
17. Never use the appliance if the thermal carafe shows any signs of cracks or has a loose or weakened handle. Only use the thermal carafe that comes with this appliance.
18. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. Do not set a hot container on a hot or cold surface.
21. Do not let the coffee maker operate without water.

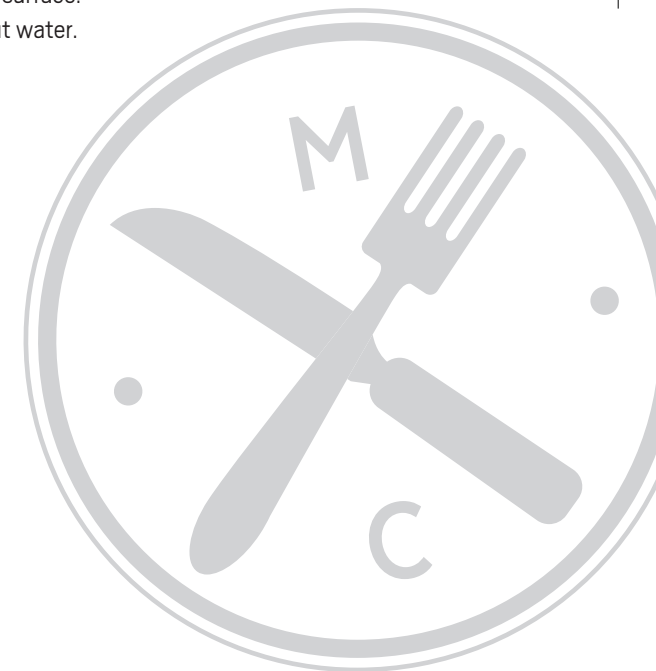

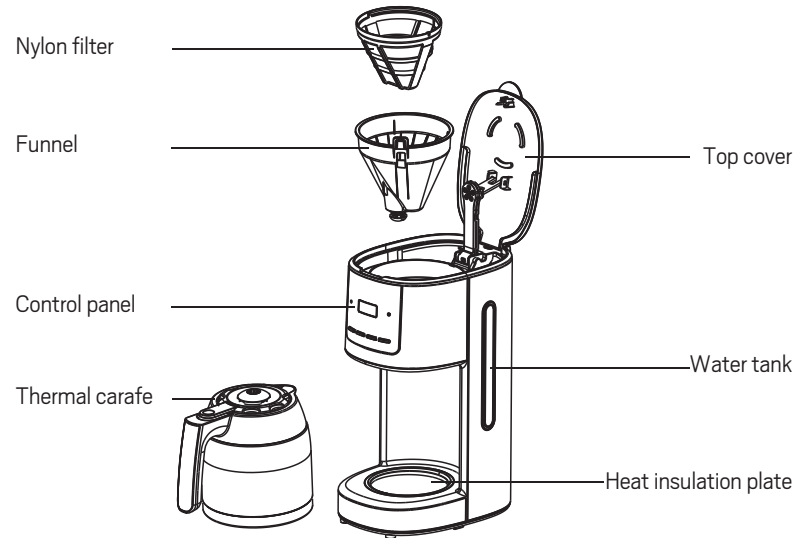

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

 


### Notes on the cord plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### Notes on the cord

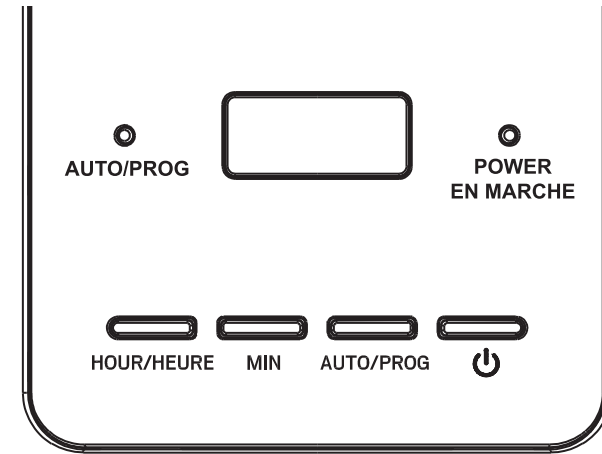


- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used,
  - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over.
  - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.



### BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the MAX level of water gauge and brew water for several times without coffee grounds, then discard the water. Clean all detachable parts thoroughly with warm water.

### USING YOUR COFFEE MAKER

- Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated in the water tank.
- Place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top cover cannot be closed. Place the nylon filter or a paper filter (10 cup) in the funnel according to your preference.
- Add coffee grounds into filter. Usually one cup of coffee requires one level spoon of coffee grounds, but you may adjust according to personal taste. Close the top cover completely.
- Insert the thermal carafe on base horizontally.
- Plug the power cord into the outlet. The LCD will display "AM12:00" together with the ":" flickers.
- Press  button, the red POWER/EN MARCHE indicator light will come on and the appliance will begin working.
- The brewing process can be interrupted by pressing the  button at any time, and the red POWER/EN MARCHE indicator light will go out. The appliance will continue brewing once  is pressed again.

Note: You can take out thermal carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

Model no. 043-2742-0 | Contact us: 1-855-803-9313

8. Remove the thermal carafe to serve when brewing is finished (about one minute later after the coffee stops dripping).  
Note: The coffee you get will be less than the water you have added, as some water is absorbed by the coffee grounds.
9. The appliance will turn off power automatically at the completion of brewing. For an optimum coffee taste, serve it just after brewing.
10. Always turn the coffee maker off and disconnect the power supply when not use.  
NOTE: Use caution when pouring coffee as the temperature will be high and may cause burns.

### DELAY BREW

If you do not want the coffee maker to start operation immediately, for example now it is 8:10 a.m., you would like the coffee maker to start automatically at 1:10 pm, first follow steps 1 to 5 of previous section, and then set the automatic start function as follows:

1. Press AUTO/PROG button once, LCD will show the automatic starting time and the green AUTO/PROG indicator light will flash.
2. Press the HOUR/HEURE and MIN button to set the automatic starting time, that is 1:10 p.m.  
Note: the time cycle is 12 hours.
3. Press AUTO/PROG button once again and the green indicator will go out.
4. Press and hold AUTO/PROG button for 3 seconds, and the green AUTO/PROG indicator light will remain on.
5. When the time is due, the green AUTO/PROG indicator light will go out and the red POWER/EN MARCHE indicator light will come on, and the coffee maker will start brewing. starts brewing.  
When brewing is completed, 3 buzzer sounds will be heard .

 

### CLEANING AND MAINTENANCE

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1) Clean all detachable parts after each use in hot, sudsy water.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
- 4) Use a damp cloth to gently wipe the heat insulation plate. Never use abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.


### REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use of appliance, the detail is as follows:

1. Fill the water tank with water and descaler to the MAX level as indicated in the water tank.  
(The scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you can use the citric acid instead of the descaler (use one hundred parts of water and three parts of citric acid).
2. Put the thermal carafe on the heat insulation plate and ensure it is placed in position.
3. Press the  button once and red POWER/EN MARCHE indicator light will come on. After a while, water will drop out automatically.
4. After running the equivalent of one cup, turn the coffee maker off by pressing the  button again.
5. Leave the solution to soak for 15 minutes. Repeat steps 3 to 5.
6. Turn the appliance on by pressing the ON/OFF button once and run the remaining until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

### HINTS FOR GREAT-TASTING COFFEE

 1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING YOUR COFFEE MAKER" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee grounds as this will greatly reduce the flavour of the coffee. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grounds.
6. Oiliness may occur more frequently if heavily roasted coffees are used.



# 8

## 1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

WARRANTY



Customer service hotline:  
1-855-803-9313