 
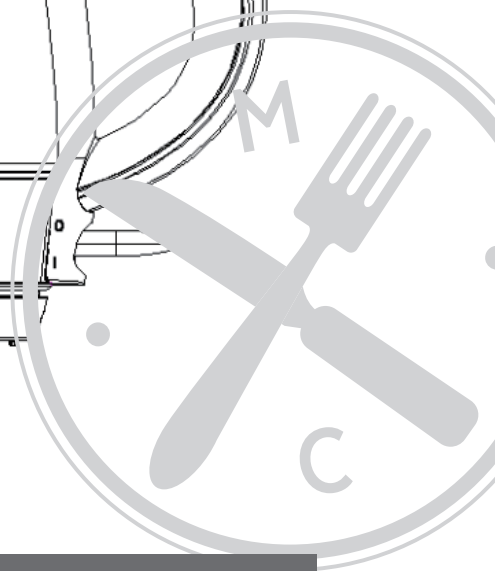 


MASTER
Chef™

1.2 L CORDLESS GLASS KETTLE

Model no. 043-2743-8

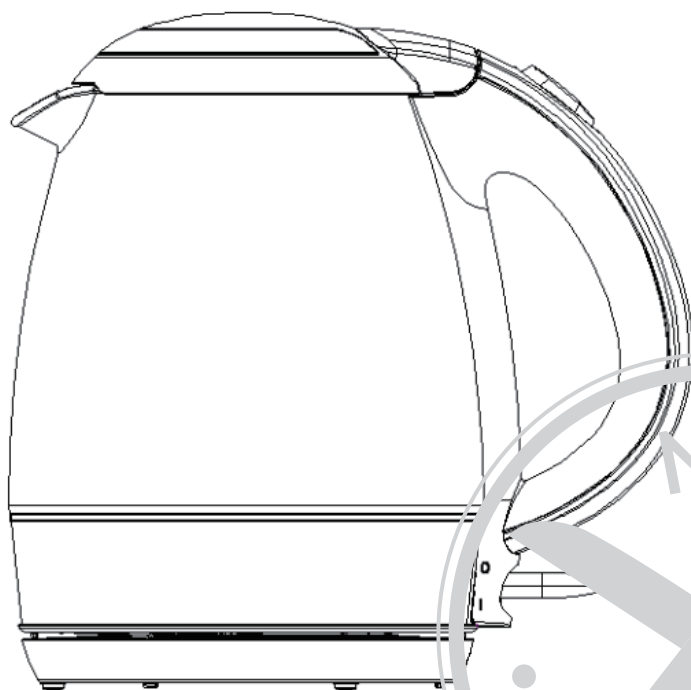

INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.

Model no. 043-2743-8 | Contact us: 1-855-803-9313

Important Safeguards	2-3
Know Your Cordless Kettle	4
Using Your Cordless Kettle	5
Boil-Dry Protection	6
Cleaning Your Cordless Kettle	6
Removal Of Mineral Deposits	7
Storage	7
Warranty	8

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heating elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.


MASTER
Chef™

10. Be careful of refilling when the kettle is hot.
11. Close supervision is necessary when any appliance is used by or near children.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Do not touch the hot surface. Use the handle or the button.
14. The attached base can not be used for other than its intended use.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play with it.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before cleaning the appliance.
20. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
21. To disconnect, turn any control to "off," then remove plug from wall outlet.
22. Do not use the appliance for other than its intended use.
23. The kettle can only use with the stand provided.
24. If the kettle is overfilled, boiling water may spill out.
25. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed when boiling.
26. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
27. Children should be supervised to ensure that they do not play with the appliance.
28. **WARNING:** Be careful to avoid any spillage on the connector during cleaning, filling or pouring. Always follow the cleaning instruction to clean your appliance;
 - Unplug the appliance.
 - Do not clean the appliance while hot.
 - Clean with a damp cloth or sponge.
 - Never immerse the appliance in water or put it under running water.

WARNING: Risks of injuries if you do not use this appliance correctly.

WARNING: The heating element surface is subjected to residual heat after use.

Model no. 043-2743-8 | Contact us: 1-855-803-9313

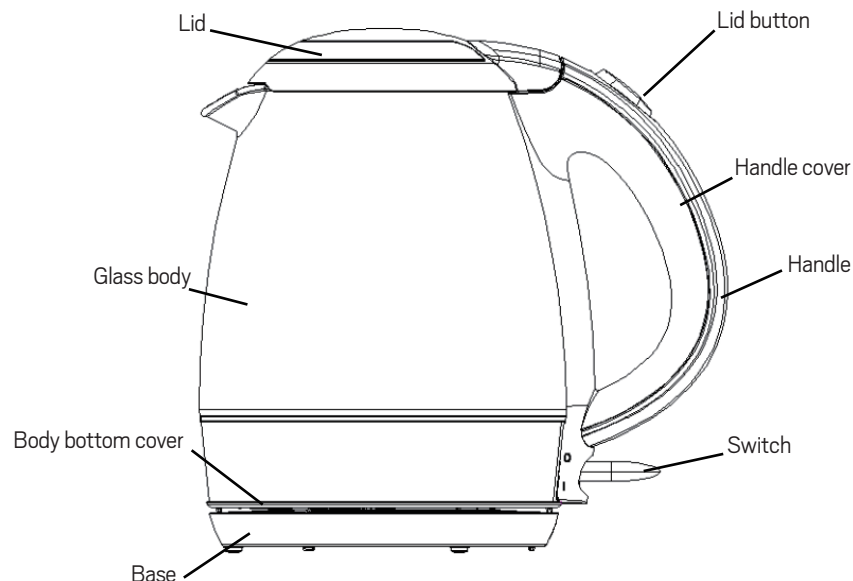 

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord plug (for the polarized plug only):

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Notes on the cord:

- a) A short power-supply cord (or detached power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cords or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord. (for the grounding plug only)
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

MASTER
Chef™

Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

Operation

1. Slot the cable around the tabs underneath the power base. Fit the power cable firmly into the base slot, so it's stable.
2. To fill water into the kettle: remove the kettle from the power base and open the lid by pressing down on the lid button. Fill kettle with the desired amount of water. Always fill the kettle between the minimum (0.5 L) and maximum (1.2 L) marks. Too little water will result in the kettle switching off before the water is boiled.



NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

3. Close the lid. Position the kettle on the power base in place. Make sure the kettle contacts the power base completely.



NOTE: Ensure the lid is firmly closed. The kettle will spout water if the lid is left open.



NOTE: Do not pull the lid when you are pressing the lid button.

4. Plug in the kettle. Push the switch down to boil. The light in the kettle will illuminate until the boiling is completed.
5. After the boiling is completed, unplug the kettle. Lift the kettle from the power base and then pour the water.

 


NOTE: Use caution when pouring the water from your kettle as boiling water may result in scalding. Plus, do not open the lid while the water in the kettle is still hot.

6. The kettle may be stored on the power base when not in use.



NOTE: Ensure the power supply is turned off when kettle is not in use.



6

7

Model no. 043-2743-8 | Contact us: 1-855-803-9313

MASTER
Chef™

BOIL-DRY PROTECTION

BOIL-DRY PROTECTION

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

CLEANING YOUR CORDLESS KETTLE

CLEANING YOUR CORDLESS KETTLE

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.
Never immerse the kettle or cord in any liquid, or allow moisture to contact with these parts.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior to discolour. To remove this build-up, use non-toxic Liquid Descaler.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water to the MAX level and allow to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use.

CLEANING EXTERNAL HOUSING

Wipe the external housing with a damp cloth or cleaner.



CAUTION: Do not use chemical, steel, or abrasive cleaners to clean the outside of the kettle.

Cleaning the filter

 
Remember to clean the filter with a damp cloth after several uses.

 
STORAGE

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

REMOVAL OF MINERAL DEPOSITS

STORAGE

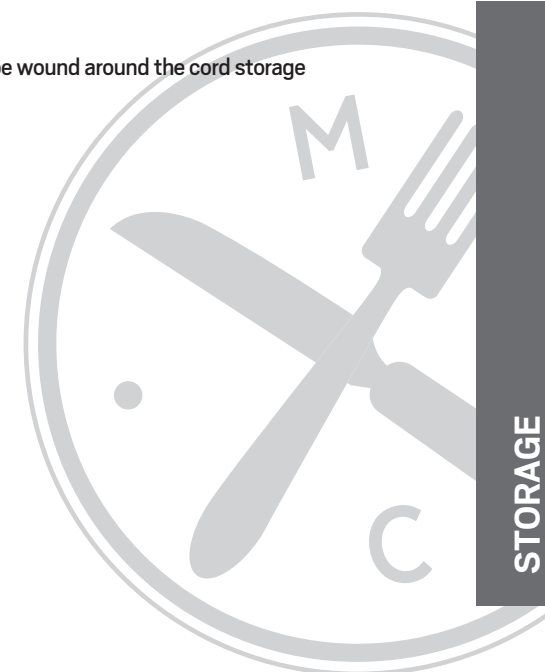



8

WARRANTY

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Customer service hotline:
1-855-803-9313

