


6-SLICE TOASTER OVEN & AIR FRYER

Model No. KCV23TL / Product No. 043-2744-6

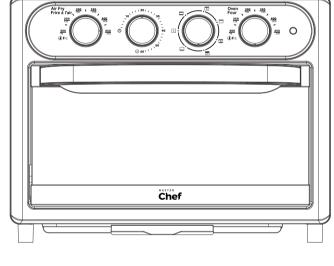


INSTRUCTION MANUAL

Read these instructions thoroughly before using this applliance, and save it for future reference.

If you follow the instructions, your Toaster Oven & Air Fyer will provide you with many years of good service.

Toll free: 1-855-803-9313

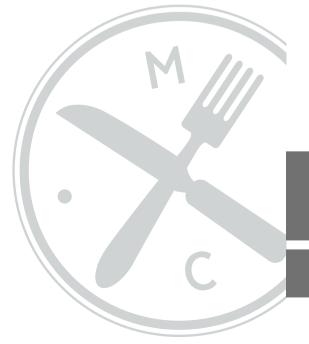

Helpful Hints

Product No: 043-2744-6 (KCV23TL) | Contact us at 1-855-803-9313



Important Safeguards	3
Before First Use	5
Know Your Toaster Oven & Air Fyer	6
Positions	7
Using Your Toaster Oven & Air Fyer	8
Cleaning Toaster Oven & Air Fyer	10
Helpful Hints	11
Warranty	11

Helpful Hints

Most baking recipes recommend reducing temperatures by 25 degrees when using the convection feature. Always check for doneness 10 minutes before end of suggested cooking time.

Select up & low heater with convection for most hearty baked goods that require even browning such as scones and pies, as well as roasts and poultry.

IMPORTANT

All of our recipes have been tested in our test kitchen and are specially developed to work in the Toaster Oven & Air Fryer.

Low heater (2 pc low heater working)

Place the Crumb Tray at the bottom of your oven below the heating element.

Place the Baking Pan at either Position 1 or Position 2 for Baking.

Close the oven and set your Function Dial to Low heater. Set your Temperature Dial to the correct temperature.

Then, turn the Timer Dial to the desired cooking time to turn on the oven.

The Power Light will illuminate. The Timer Dial will ring when the cycle is complete.

To stop baking, turn the Timer Dial to the "OFF" position.

Fan (only fan working)

Fit provided Baking Pan or Oven Rack into position 1 or position 2.

Set the Function Dial to Fan. Then turn the Timer Dial to the desired working time to start the oven.

The power light will illuminate. The timer will ring once when the cycle is complete and the oven will power off when the time expires.

To stop working, turn the Timer Dial to the OFF position.

add warranty

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Important Safeguards

Product No: 043-2744-6 (KCV23TL) | Contact us at 1-855-803-9313



Always allow the Toaster Oven & Air Fryer to cool completely before cleaning.

Always unplug the oven from the electrical outlet.

Do not use abrasive cleaners, as they will damage the finish. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply the cleansing agent to a cloth, not directly onto the toaster oven, before cleaning.

To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Never use harsh abrasives or corrosive products. These could damage the oven surface. Never use steel wool pads, etc., on interior of oven.

Oven Rack, Baking Pan, Air Fryer Basket and Crumb Tray should be hand washed in hot, sudsy water or use a nylon scouring pad or nylon brush. They are NOT dishwasher safe.

After cooking greasy foods and after your oven has cooled, always clean interior of oven. If this is done on a regular basis, your oven will perform like new. Removing the grease will help to keep toasting consistent, cycle after cycle.]

To remove crumbs, slide out the Crumb Tray and discard crumbs. Wipe clean and replace. To remove baked-on grease, soak the tray in hot, sudsy water or use nonabrasive cleaners. Never operate the oven without the Crumb Tray in place.

Never wrap the cord around the outside of the oven. Use the cord storage cleats on the back of the oven. Any other servicing should be performed by an authorized service representative.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
 Allow to cool before cleaning or handling, putting on or taking off parts.
- 3. Do not touch hot surfaces. Use handles, or knobs.
- To protect against electrical shock, do not place any part of this appliance in water or other liquids.
 See instructions for cleaning.
- 5. This appliance should not be used by or near children or individuals with certain disabilities.
- 6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way or is not operating properly. Return the Toaster Oven & Air Fryer to the store or retailer where purchased for examination or repair, or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards or injuries.
- 8. Do not use outdoors.
- 9. Do not let cord hang over the edge of the table or countertop, where it could be pulled on inadvertently by children or pets, or touch hot surfaces, which could damage the cord.
- 10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
- 11. Do not use this appliance for anything other than its intended purpose.
- Extreme caution should be exercised when using containers constructed of materials other than metal or glass in this appliance.
- 13. To avoid burns, use extreme caution when removing Toaster Oven & Air Fryer accessories or disposing of hot grease.
- 14. When not in use, always unplug the unit. Do not store any materials other than manufacturer's recommended oven proof accessories in this appliance.
- 15. Do not place any of the following materials in the this appliance: paper, cardboard, plastic and similar products.
- 16. Do not cover Crumb Tray or any part of the oven with metal foil. This will cause overheating of the oven.
- 17. Oversize foods, metal foil packages and utensils must not be inserted in the this appliance, as they may create a risk of fire or electric shock.
- 18. A fire may occur if this appliance is covered or touching flammable materials such as curtains, draperies or walls, when in operation.
 - Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 20. Do not attempt to dislodge food when the this appliance is plugged into an electrical outlet.
- 21. Warning: To avoid possibility of fire, NEVER leave this appliance unattended during use.
- 22. Use recommended temperature settings for all cooking/baking, roasting and air frying.
- 23. Do not rest cooking utensils or baking dishes on glass door.
- 24. Turn the Timer dials to the OFF position to turn off the Toaster Oven & Air Fryer.
- 25. Do not operate your appliance in an appliance garage or under a wall cabinet.

 When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
- 26. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 27. To disconnect, turn Timer Dial to "off", then remove plug from wall outlet.

Product No: 043-2744-6 (KCV23TL) | Contact us at 1-855-803-9313



Please read and keep these instructions handy. These instructions will help you use your Toaster Oven & Air Fryer to its fullest so that you will achieve consistent, professional results.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be tripped over unintentionally or pulled on by children.

FOR HOUSEHOLD USE ONLY NOT INTENDED FOR COMMERCIAL USE

Unwind the power cord. Check that the Crumb Tray is in place and that there is nothing in the oven. Plug power cord into the wall outlet.

Air Fry (4 pcs up heater+fan working)

Place the Crumb Tray at the bottom of oven below the heating element. Place the Air Fryer Basket and Oven Rack at position 2 for air frying. For chips or items that are greasy or might drip, place the Baking Pan beneath the Air Fryer Basket in position 1.

Turn the Function Dial on the symbol air fry. Turn the air fry temperature dial and set the desired cooking temperature. To switch the oven on, turn the timer on the desired cooking time. The power on light turns on and the oven starts cooking. When the set time expires, the timer dial rings and the light turns off. The turn the oven off, turn the Timer Dial to the position OFF, the heating elements will turn off.

Frie	es add space before bracket symbol Fries (frozen)	360g	15-20 minutes	450°C
Chi	icken wings	740g	15-20 minutes	450°C

Tips

Air frying is a healthy alternative to frying. Many foods that can be fried, can be air fried without using excess amounts of oil. Air fried foods will taste lighter and less greasy than deep-fried foods.

Most oils can be used for air fyring. Olive oil is preferred for a richer flavour. Vegetable, canola or grapeseed oil is recommended for a mild flavour.

Distribute oil evenly on food to achieve the crispiest and most golden results. An assortment of coatings can be used for air-fried foods.

Some examples of different crumb mixtures include: breadcrumbs, seasoned breadcrumbs, panko breadcrumbs, corn flakes, potato chip crumbs, graham cracker crumbs, quinoa, various flours, etc.

Most foods do not need to be flipped during cooking, but larger items, like chicken cutlets, should be flipped halfway during cooking to ensure quick, even cooking and browning.

When air frying large quantities of food that crowd the pan, toss food halfway through cooking to ensure even cooking and colour.

Use higher temperatures for foods that cook quickly, like and chips, and lower temperatures for foods that take longer to cook like breaded chicken.

Product No: 043-2744-6 (KCV23TL) | Contact us at 1-855-803-9313



Foods will cook more evenly if they are cut to the same size.

Line the Baking Tray with aluminum foil for easy cleanup.

Please note that when most foods cook, they release water. When cooking large quantities for an extended period of time. condensation may build up, which could leave moisture on your countertop.

Up heater (2 pcs up heater working)

Place the Crumb Tray at the bottom of your oven below the heating element.

Place the Baking Pan at either Position 1 or Position 2 for Baking.

Close the oven and set your Function Dial to Up heater. Set your Temperature Dial to the correct temperature.

Then, turn the Timer Dial to the desired cooking time to turn on the oven.

The Power Light will illuminate. The Timer Dial will ring when the cycle is complete.

To stop baking, turn the Timer Dial to the "OFF" position.

Up heater with convection (2 pcs up heater + fan working)

Place the Crumb Tray at the bottom of your oven below the heating element.

Place the baking pan at either position 1 or position 2 for baking.

Set the Function Dial to up heater with convection.

Then turn the Timer Dial to the desired cooking time to turn on the oven and begin broiling. The power light will illuminate. The timer will ring once when the cycle is complete and the oven will power off when the time expires.

To stop broiling, turn the Timer Dial to the OFF position.

Up & low heater (2 pcs up heater+2 pcs low heater working)

Fit provided Baking Pan or Oven Rack into either rack position.

Set the Function Dial to up & low heater. Set the Temperature Dial to desired temperature.

Then turn the Timer Dial to the desired cooking time to turn on the oven and begin baking (It is recommended to preheat oven for 5 minutes prior to baking. Incorporate this into the total baking time).

The power light will illuminate. The timer will ring once when the cycle is complete and the oven will power off when the time expires.

To stop baking, turn the Timer Dial to the OFF position.

Select up & low heater for more delicate baked goods like custards, cakes and eggs.

Most baked goods, as well as larger items, are baked in rack Position 1, while most egg dishes and custards should be baked in rack Position 2.

If making fresh pizza, place Baking Pan in oven in Position 1. If making frozen pizza, place pizza directly on the rack in Position 1. For chicken or other large items, the pan can be in Position 1.

To stop the up & low heater operation, turn the ON/Oven Timer Dial to the OFF position.

Up & low heater with convection (2 pcs up heater+2 pcs low heater+fan working)

Set the function to up & low heater with convection. Set the Temperature Dial to desired temperature.

Then turn the Timer Dial to the desired cooking time to start the oven and begin baking (It is recommended to preheat oven for 5 minutes prior to baking. Incorporate this into the total baking time).

The power light will turn on. The timer will ring once when the cycle is complete and the oven will power off when the time

Place the pan in Position 2 for baking. When cooking chicken or other large food items, the pan can be in Position 1. To stop Convection Bake operation, turn the Timer Dial to the OFF position.

Place your Toaster Oven & Air Fryer on a flat surface.

Before using your Toaster Oven & Air Fryer, move it 2 to 4 inches away from the wall or from any objects on the countertop. Do not use on heat-sensitive surfaces.

OBJECTS SHOULD NOT BE STORED ON THE TOP OF THE OVEN, IF THEY ARE, REMOVE ALL OBJECTS BEFORE YOU TURN ON YOUR APPLIANCE. THE EXTERIOR WALLS GET VERY HOT WHEN IN USE. KEEP OUT OF REACH OF CHILDREN.

Use First Before

Positions

6

master Chef™

Product No: 043-2744-6 (KCV23TL) | Contact us at 1-855-803-9313

1. Power On Light

Indicator light will turn on and remain lit when oven is in use.

2. Timer Dia

Use to set desired time for all functions including to set toast shade from light to dark. Setting the oven timer powers the unit on and begins the cooking cycle. When the timer runs out, the unit will power off.

3. Two Temperature Dia

Air Fry temperature dial is used to set desired temperature while in Air Fry mode. Oven temperature dial is used to set desired temperature while in all functions except Air Fry.

4. Function Dial

Use to select cooking method: up heater, up heater with convection, up & low heater, up & low heater with convection, fan, low heater, air frv.

5. Air Fyer Basket

Use the Air Fryer Basket in conjunction with the Air Fry function to optimize your cooking results. The Air Fry Basket should always be used nested in the oven rack


6. Oven Rack

Can be used in two positions: Position 1 (bottom), Position 2 (top). Position 2 has a 50% stop feature so the rack stops halfway out of the oven. The oven rack can be removed from Position 2 by lifting the front of the rack and sliding it out.


Baking Pan

A Baking Pan is included for your convenience. Use alone when baking or roasting.


8. Crumb tray

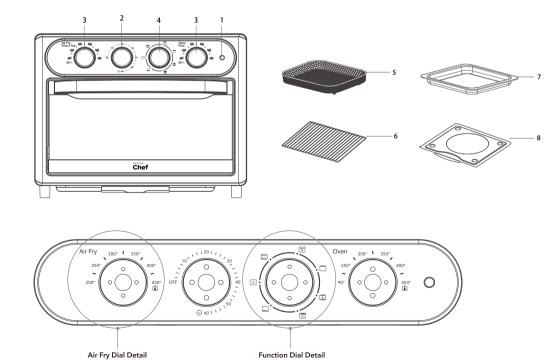


Each recipe gives you step-by-step directions and will tell you where the Oven Rack and tray should be positioned for best results. Please refer to the diagrams below for oven rack positions.

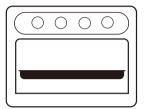


POSITION 1 FOR BAKING & FAN (large items)
Place the Baking Pan in the lowest placement.

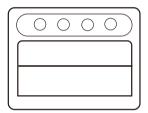

POSTION 2 FOR TOASING
Use the Oven Rack in the middle placement.

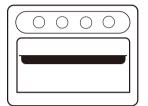

POSITION 1 FOR BAKING & FAN (Small items)
Use the Baking Pan in the middle placement.

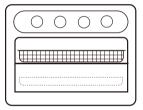

POSITON 2 FOR BOILING & AIR FRYING
Use the middle placement with Oven Rack and Air Fryer Basket.
Note: For items that are greasy or might drip,
place the Baking Pan beneath the Air Fryer Basket in position 1.