 




## 6-SLICE DIGITAL CONVECTION TOASTER OVEN

Model: AC25CEW / Product No: 043-2747-0

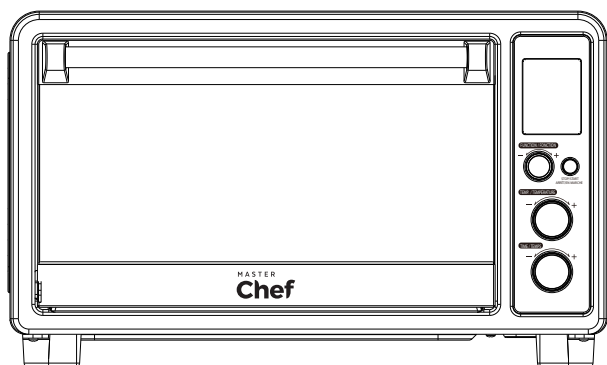

### INSTRUCTION MANUAL

Read these instructions carefully before using this appliance and save it for future reference, it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

Toll-free: 1-855-803-9313



Product No: 043-2747-0 (AC25CEW) | Contact us: 1-855-803-9313

Specifications	2
Important Safeguards	3
Before First Use	4
Know Your Convection Toaster Oven	5
Using Your Convection Toaster Oven	6
Cleaning Your Convection Toaster Oven	10
Warranty	11

SPECIFICATIONS

POWER SUPPLY:	120 V~60 Hz
POWER CONSUME:	1500 W

**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including following :

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than its intended use.
14. Use extreme caution when removing tray or disposing of hot grease.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
17. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.
19. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
20. Do not place any of the following materials in the oven: (e.g.: paper, cardboard, plastic, and other similar items).
21. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
22. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.  
If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
23. Caution-To ensure continued protection against risk of electric shock, connect to properly grounded outlets only. (If the appliance is of the grounded type).
24. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
25. Avoid contacting moving parts.
26. For household use only.

**SAVE THESE INSTRUCTIONS**

**Short cord instruction (detachable power-supply cord)**

- a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally;
  - 3) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

**BEFORE FIRST USE**

1. Remove all accessories and shipping materials packed inside the Toaster Oven.
2. Wash the Rack and Pan in warm soapy water. Wipe the interior of the Toaster Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
3. Place Toaster Oven on a flat counter or other stable surface. DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.
4. Make sure the Crumb Tray is properly installed before using.







Before first use, set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils remaining in the Toaster Oven.

NOTE: The Toaster Oven may produce smoke during this process. This is normal for a new Toaster Oven and will not last more than 10-15 minutes.

## CONTROL PANEL

### NAME OF PARTS

1. Door handle
2. Housing
3. Function knob
4. Stop/Start button
5. Temperature knob
6. Timer knob
7. Baking rack
8. Baking tray
9. Rotisserie fork
10. Crumb tray
11. Helper handle

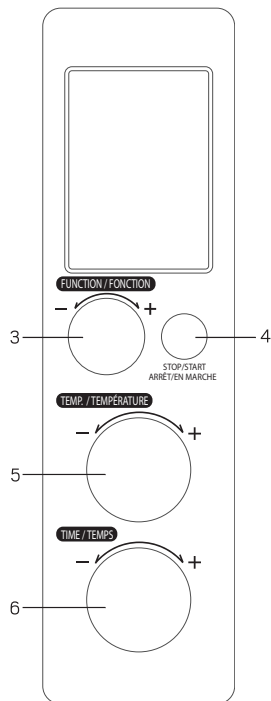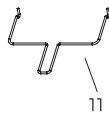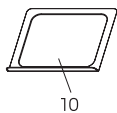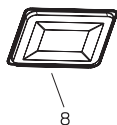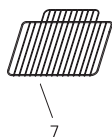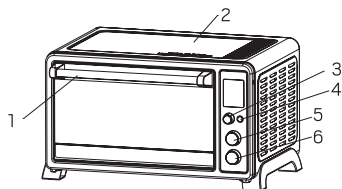

Product No: 043-2747-0 (AC25CEW) | Contact us: 1-855-803-9313

## HOW TO USE

CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE.

1. Place the Baking Rack in a position that will accommodate the height of the food to be cooked.
2. The food must be put on the baking pan to avoid any fire danger that may be caused by food spilling or dripping on the heating pipes.
3. Make sure that you always use an ovenproof container in the Toaster Oven, never use plastic or cardboard containers in the Toaster Oven.
4. Clean the heating pipe periodically.
5. Never use glass or ceramic pans or lids.
6. DO NOT let juices run to the bottom of the oven. Use the Crumb Tray when cooking.
7. Set the temperature as suggested by the recipe or as desired.
8. Securely shut the door and set the cooking time to begin using the Toaster Oven.

## OPERATION:

When the Toaster Oven is in operation, the buzzer will ring once. The default function is **TOAST**.

To stop cooking , press "**Stop/Start**".

### 1) TOAST FUNCTION:

Use the Toast function for foods such as corn, bread, cookies and heating food.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen displays "**TOAST**".
3. Rotate the **TEMPERATURE** knob to set the power level from 1-6.
4. Rotate the **TIMER** knob to set the quantity of bread from 1-6. The default quantity is 4 slices.
5. Press "**Stop/Start**" button to start cooking. The default temperature is 450°F(232°C) and it cannot be changed.
6. The buzzer will sound 3 times to remind you when cooking is finished.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

### 2) BAKE FUNCTION:

Use the Bake function for foods such as less tender cuts of meat, soups and stews.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display "**BAKE**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 450°F(232°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

**3) BROIL FUNCTION:****Note: Do not preheat when using this function.**

The Broil Function is ideal for fish, beef, steak, vegetables, etc.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**BROIL**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 350°F (175°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

**4) PIZZA FUNCTION:****Note: Do not preheat when using this function.**

Use the Pizza function is ideal for pizza.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**PIZZA**".
3. Rotate the **TIMER** knob to set the size of pizza (6 inches, 9 inches, 12 inches) . The default size is 9 inches.
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 450°F (232°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

**5) COOKIES FUNCTION:****Note: Do not preheat when using this function.**

The Cookies Function is ideal for cookies.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**COOKIES**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 350°F (175°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

Product No: 043-2747-0 (AC25CEW) | Contact us: 1-855-803-9313

## 6) DEFROST FUNCTION:

Use the Defrost Function for defrosting food.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**DEFROST**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 180°F (82°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

## 7) REHEAT FUNCTION:

The Reheat Function is ideal for reheating food.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**REHEAT**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 350°F (175°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

## 8) ROTISSERIE FUNCTION:

The Rotisserie Function is ideal for roasting chicken.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**ROTISSERIE**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 350°F (175°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.



**9) KEEP WARM FUNCTION:**

Use the Keep warm function for keeping food warm.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**KEEP WARM**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature between 100-180°F (37-82°C). The default temperature is 180°F (82°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

**10) CONVECTION FUNCTION:**

Use the Convection function for toasts, steaks, baking pizza and bread.

1. Place the Baking rack to the desired height.
2. Rotate the **FUNCTION** knob until the screen display "**CONVECTION**".
3. Rotate the **TIMER** knob to set the length of cooking time .
4. Rotate the **TEMPERATURE** knob to set temperature. The default temperature is 450°F (232°C).
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the Toaster Oven will turn back to current function.
7. Always remove food with oven mitts. Food and Toaster Oven are very hot.

**ROTISSERIE FUNCTION:**

1. Remove the Baking rack from the Toaster Oven and set aside.
2. Place the Baking tray in the lowest level of the oven. This will catch all the drippings from the food that is on the Rotisserie fork as it cooks. Do Not attempt to use the Rotisserie Function without placing the Baking tray in the correct position of the oven.
3. Set the Function knob to "ROTISSERIE".
4. Select the length of time you need.
5. Rotate the Temperature knob clockwise to desired temperature.

**Product No: 043-2747-0 (AC25CEW) | Contact us: 1-855-803-9313**

#### **ROTISSERIE FUNCTION USING THE ROTISSERIE FORK:**

1. Secure the food with weight centered on the fork.
2. Slide the Holding Forks onto each end of the fork and press firmly into the food, piercing the food to hold in place on the forks. Insert the Holding Forks at different angles to hold the food more firmly. Tighten the screws, turning clockwise so that the holding forks will stay in place during the Rotisserie cooking session.
3. Insert the pointed end of the Rotisserie fork into the Rotisserie Socket on the inside right side of the Toaster Oven.
4. Lift the Rotisserie fork on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the oven.
5. Set the Temperature knob and the Timer knob to begin operating the Toaster Oven.
6. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie fork with the Rotisserie Helper Handle.
7. Hold the handle in your right hand and support handle in your left hand.
8. Place the hooks on the Helper Hander underneath the Rotisserie fork.
9. Lift the left side of the Rotisserie Forks out of the Bracket first and pull slightly toward you.
10. Gently remove the right pointed side of the Rotisserie fork from the Rotisserie Socket and remove the food on the fork out of the oven.
11. Place the food on a heat-safe plate or dish when you have removed it from the Toaster Oven. Let food cool slightly before attempting to remove the holding forks and Rotisserie fork from the food
12. To remove the Holding Forks, turn the screws counter-clockwise and pull the Holding Forks.

#### **CARE AND CLEANING**

1. Before cleaning, unplug the Toaster Oven and allow it to cool completely.
2. Wash all the attachments with mild, soapy water including the rack and the Baking tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of the Baking tray.
4. Using a damp cloth to wipe the interior of the Toaster Oven.
5. To clean the door, use a damp cloth and detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

CAUTION : hot surface

Warning: Hot Surface !  
Avertissement: Surface Chaude!

#### 1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8



**AC25CEW**