




# Digital Fan Heater

Product No. 043-5119-8

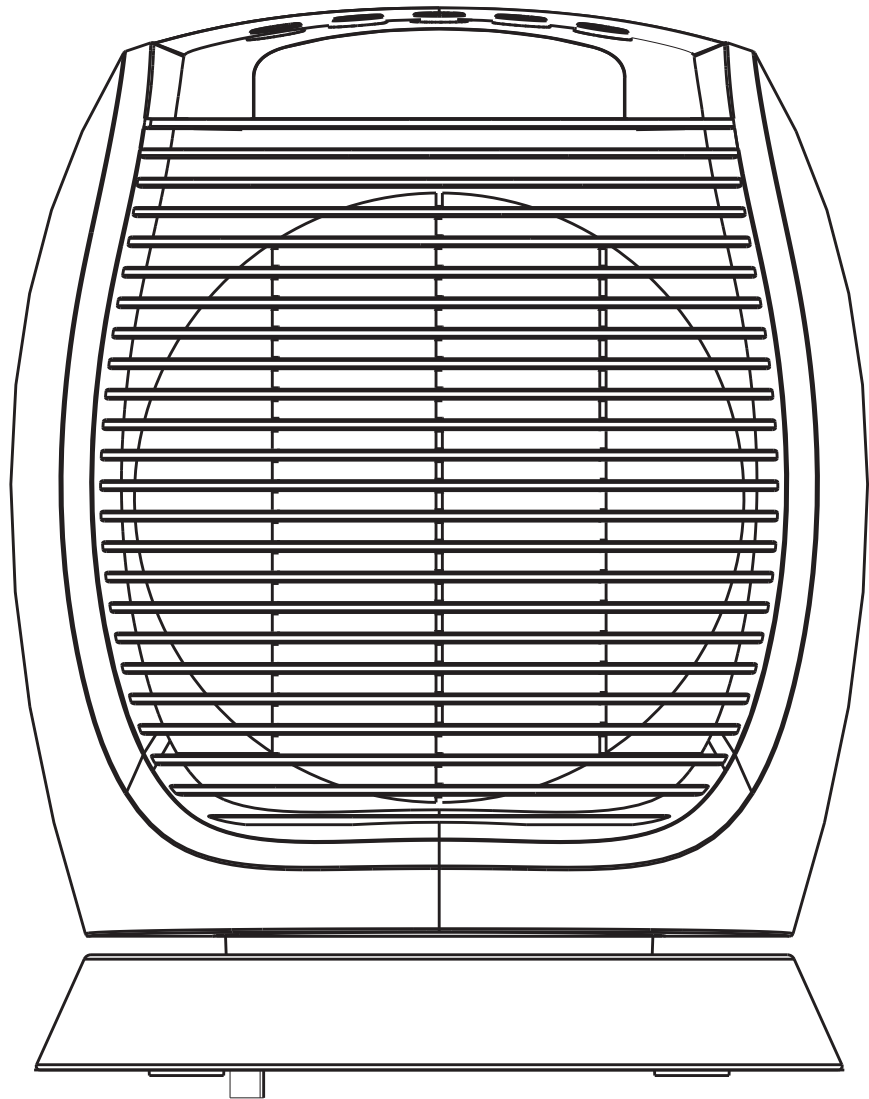

## Instruction Manual

**Toll-free: 1-877-483-6759**

**IMPORTANT:** Please read this manual carefully before beginning assembly of this product.  
Keep this manual for future reference.



Technical Data	3
Important Safety Instructions	4
Fan Operation	6
Safety Features	8
Cleaning and Maintenance	8
Storage	9
Warranty	9

Product No.	043-5119-8
Control Style	Digital control without remote
Rated	120 V AC 60 Hz
Power Consumption	1500 W (high), 900 W (low)
Dimensions (L x W x H)	9 1/16 x 6 1/2 x 11 3/8"
	23.1 x 16.5 x 28.9 cm



**Warning!** When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock and injury to persons or property, including the following:

**Caution!** To prevent electric shock, match wide blade of plug to wide slot and fully insert.

When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on if for the first time.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles (if provided) when moving the unit. Keep flammable materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3' (0.9 m) from the front and top of the heater and away from the sides and rear. Keep the rear grille away from walls or drapes to prevent blocking the air intake.
- Extreme caution and supervision is necessary when any heater is used near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return it to an authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the heater, turn controls to OFF, then unplug the power cord from the outlet.
- Connect to properly polarized outlets only.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
- To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.

**PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER.**


- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, personal injury or property damage.
- To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet, or into another outlet wired into the same circuit.
- It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes very hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
- Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Be sure that the plug is fully inserted into appropriate outlet. Remember that receptacles may deteriorate due to aging and continuous use. Check periodically for signs of overheating or deformations evidenced by the plug. If such overheating occurs, do not use the outlet and CALL your electrician.
- Check that neither the appliance nor the power cable has been damaged in any way during transportation.
- Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner prior to initial use.

**Danger:** High temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.


**SAVE THESE INSTRUCTIONS.**

Plug the heater into a functional 120 V AC, 60 Hz outlet; make sure that the plug is fully inserted in the outlet. Once plugged in, your heater is on standby mode. The LED screen displays the current room temperature. The heater can be controlled through the control panel or the remote.

Control Panel:

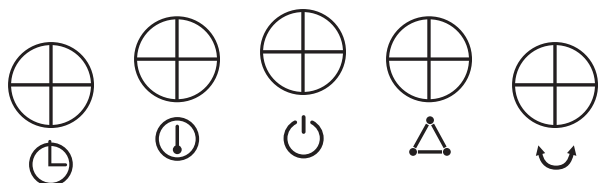

LED Screen:

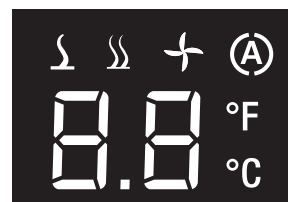

### 1. Turning unit ON/OFF

- Press the POWER button once to turn on heater at the HIGH output setting; LED screen displays. At this setting, the heater output is 1500 W.
- Press the POWER button again; the heater will be turned off. The fan will continue operating for 30 seconds to dissipate residual heat.

### 2. Selecting heating power

- Press MODE button to select mode: High|Low|FAN. Every press of the button selects a different mode. LED screen will display selected mode accordingly.
- High: 1500 W (High setting is selected upon startup)
  - Low: 900 W (Low setting)
  - FAN: 15 W (FAN output only)

### 3. Oscillation

- Press OSC button once. The heater will begin oscillating for better heat dispersion.
- Press the button again to turn the oscillation off.


### 4. Auto-off timer



- When the heater is operating, you can set the timer to turn it off automatically at a specific time. Press TIMER button to set the timer between 0 and 12 hours, in 1-hour increments.
- To cancel timer setting, select time 0 H. The heater will turn off. Turn heater on again to make it work continuously.

**Note:** While the timer is set, the LED display will show the set time. When the timer is not set, the LED display shows the room temperature.

## 5. Temperature setting



When the heater is working at the “low” or “high” setting, you can set the temperature by pressing the TEMP  button.

After pressing the TEMP  button, the LED screen will show (A) and the default temperature (75°F), or the last set value, will be displayed. To change the setting, keep pressing the TEMP  button; the temperature will increase in 1°F (1°C) increments, between 41°F (5°C) and 90°F (32°C). The temperature will set and stop flashing within 5 seconds once you finish pressing the button.

Once the temperature has been set, the heater will cycle on and off to maintain this temperature. If room temperature is higher than the set value, heater will not turn on; if room temperature is lower than the set value, heater will operate until the set value has been reached.

**Note:** Once a temperature has been set, the heater will remain in auto mode to maintain this temperature. To return to high / low / fan mode, turn off and unplug the heater, then turn it on again. It is normal for the fan to work for 30 seconds after the heater has been turned off; this is a safety feature.

## 6. Temperature display (°F / °C)

To switch temperature setting from °F to °C, press the TIMER  and TEMP  buttons at the same time for two seconds.

## 7. Excessive heat alarm

If the room temperature exceeds 122°F (50°C), the heater’s alarm will start buzzing until the heater is turned off and unplugged. In such case, turn off heater and unplug immediately, then let the heater cool off and the room temperature go down. Once the room temperature is back to normal levels, the heater can be turned on again.

**Thermal Cut-Off:** heater includes a thermal cut-off feature that shuts the unit off when parts of the heater overheat. If this occurs, turn the heater off, unplug it, and remove any objects on or adjacent to the heater that may cause high temperatures. Wait five to ten minutes for the unit to cool down. Then plug it back in, and resume its normal operation.

**Tip-over switch:** Your heater is equipped with a “tip-over switch” that is designed to automatically shut the heater off if it tips forward or backward. When the heater is returned to its normal upright position, it will automatically come on again. This is a safety feature to avoid risks of fire.

Before carrying out any cleaning or maintenance, make sure that the heater is turned off and unplugged from the power source. Let the heater cool off completely before cleaning.

**Cleaning:**

- a. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
- b. Do not spray cleaning liquids or other chemicals directly on the unit
- c. To clean enclosure, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Don't allow any water to drip into the heater or in the switches. Make sure the heater is completely dry before turning it on again.

**Caution!** Do not allow water to run inside the heater as this could create a fire or electric shock hazard.



**Warning!** This heater contains no user-serviceable parts. Any servicing or repairs should be performed by an authorized technician.



1. Clean the heater as described in “Cleaning/Maintenance” section.
2. Wipe all parts to dry.
3. Pack the heater and the power cord in the original carton and store it in a cool, dry place.

---

This For Living product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.