 


MASTER
ChefTM

PROGRAMMABLE COFFEE MAKER

Model no. 043-5757-8

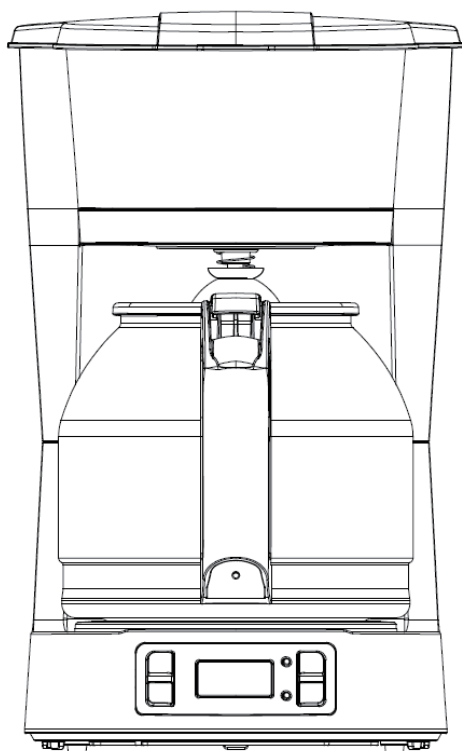

INSTRUCTION MANUAL

Read this manual thoroughly before using this product and save it for future reference.

Model no.043-5757- 8 | Contact us: 1-855-803-9313

IMPORTANT SAFEGUARDS	2-3
KNOW YOUR COFFEE MAKER	4
SAVE THESE INSTRUCTIONS	4
CONTROL PANEL	5
BEFORE FIRST USE	5
USING YOUR COFFEE MAKER	5
DELAY FUNCTION	6
CLEANING AND MAINTENANCE	6
REMOVAL OF MINERAL DEPOSITS	7
HINTS FOR GREAT-TASTING COFFEE	7
WARRANTY	8

IMPORTANT SAFEGUARDS


Before using the electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow appliance to cool before attaching or removing components and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let the power cord hang over the edge of tables or counters, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

MASTER
Chef™

11. Do not use appliance for other than its intended use.
12. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug when removing from outlet. Never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of appliance are hot when it is in operation. Avoid touching with your hands. Use handles or knobs only.
16. Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
17. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe that comes with this appliance. Use carefully as the carafe is very fragile.
18. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. Do not set a hot carafe on a hot or cold surface.
21. Do not let the coffee maker operate without water.



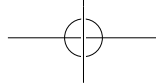


4

5


Model no.043-5757- 8 | Contact us: 1-855-803-9313

MASTER
Chef™

  Know Your Coffee Maker

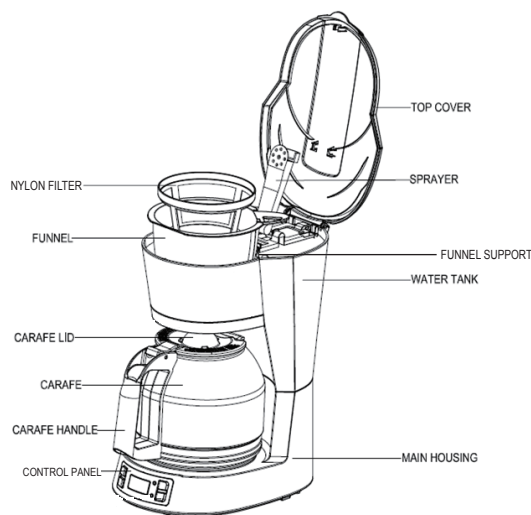

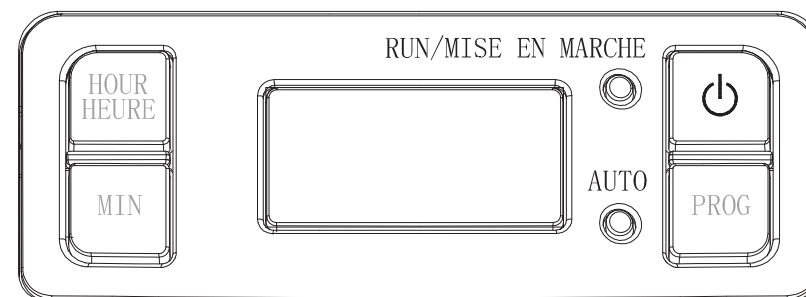


CONTROL PANEL

**BEFORE FIRST USE**

Check that all accessories are complete and the unit is not damaged. Add water into the water tank to the MAX level of water gauge and brew water for several times without ground coffee, then discard the water. Clean all detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with water. The water level should not exceed the MAX level as indicated on the water tank.
2. Place the funnel into the funnel support, make sure it is positioned correctly, otherwise the top cover will not close properly. Place the nylon filter or a paper filter in the funnel.
3. Add ground coffee into filter. Usually one cup of coffee requires one level spoon of ground coffee, but adjust according to desired brew strength. Close the top cover completely.
4. Insert the carafe on the warming plate.
5. Plug the power cord into the power outlet. The LCD will display "AM12:00" together with the ":" flickers.
6. Press  button, the indicator of RUN/MISE EN MARCHÉ will be illuminated. The appliance will begin brewing.
7. The brewing process can be interrupted by pressing the  button at any time, and the indicator of RUN/MISE EN MARCHÉ will turn off. The appliance will continue brewing once  is pressed again.



NOTE: The carafe can be removed to pour and serve at any time. The appliance will stop brewing automatically. The carafe should be put back into position on the warming plate within 30 seconds.

8. Remove carafe to serve when brewing is finished.



NOTE: The coffee you get will be less than the water you have added, as some water is absorbed by the coffee grounds.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**Notes on the cord plug**

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Notes on the cord

- a) A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

9. When the process is finished, if you do not want to serve immediately, keep the coffee maker on, and the coffee will be kept warm on the warming plate. The appliance will be turn off automatically after two hours if no further action is taken. For best results, serve just after brewing.
10. Always turn the coffee maker off and disconnect the power supply when not in use.



NOTE: Use caution when pouring the coffee. Coffee will be hot and may cause injury.

DELAY FUNCTION

If you do not want the coffee maker to start brewing immediately, for example the time is 8:10 a.m. and you would like the coffee maker to automatically start brewing at 1:00 p.m., follow steps 1 to 5 in previous section, and then you can set the automatic start function as follows:

- 1) Press PROG button once, the word CLOCK is shown at the top right corner on display.
- 2) Press the HOUR/HEURE and MIN button continuously to set the present time (real clock), to AM 8:10 (See fig. 1).

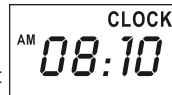



Fig.1




Fig.2



NOTE: The time cycle is 12 hours.

- 3) Press PROG button once again and the word TIMER shows on top left corner of display.
- 4) Set the delayed starting time by pressing HOUR/HEURE and MIN button repetitively, to PM 01:00 (see Fig. 2).
- 5) Press the  twice, the indicator of AUTO is illuminated. After a while, the LCD will display the current clock. You may see the automatic start time by pressing PROG.



Note: You may cancel the automatic start function by pressing . If you want to change the automatic start time, follow steps 1–4 above.

- 6) When the time is due to brew, the indicator AUTO will be off, and the indicator RUN/MISE EN MARCHE will turn on and coffee maker will start brewing. The appliance will turn off automatically after two hours if coffee maker has not be unplugged at end of brewing cycle.

CLEANING AND MAINTENANCE



CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquids. After each use, always make sure plug is removed from power outlet.

- 1) Clean all detachable parts after each use in hot water with soap.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may build up in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the warming plate. Never use an abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water. Follow these directions:

1. Fill the water tank with water and descaler to the MAX level as indicated in the water tank. (The scale of water and descaler is 4 to 1. Use a "household descaler", and refer to the instructions on the package of the descaler. Citric acid can also be used in place of a descaler.)
2. Put the carafe on the warming plate and ensure it is placed in position.
3. Press the ON/OFF button once and the indicator of RUN will be illuminated. The appliance will begin working.
4. Brew approximately one cup and then switch off the appliance by pressing the ON/OFF button again.
5. Leave the solution in appliance for 15 minutes. Repeat the steps of 3–5 again.
6. Turn the appliance on by pressing the ON/OFF button once and run off the water until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse ground coffee since this will greatly reduce the coffee's flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the ground coffee.
6. Oiliness may occur more frequently if heavily roasted coffees are used.



8

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Warranty



Customer service hotline:
Masterchef Tel: 1-855-803-9313