 


MASTER  
**Chef™**


## CORDLESS GLASS KETTLE

 Model no. 043-5765-8

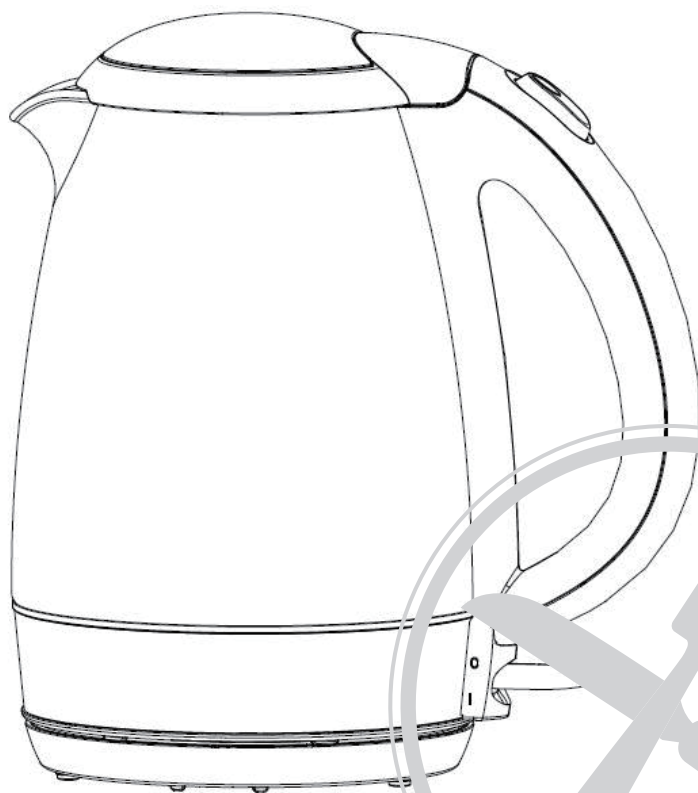

### INSTRUCTION MANUAL

Read this booklet thoroughly before using this product and save it for future reference.




Important Safeguards	2-3
Know Your Electric Kettle	4
Using Your Electric Kettle	5
Boil-Dry Protection	6
Cleaning and Maintenance	6
Removal of Mineral Deposits	7
Warranty	7


## IMPORTANT SAFEGUARDS

  When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without water to avoid damaging the heating elements.
6. Ensure that the kettle is placed on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid any damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plug or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
9. Always take care when pouring boiling water. Pour slowly and carefully without tipping the kettle too fast.
10. Be careful of refilling when the kettle is hot.


11. Close supervision is necessary when any appliance is used by or near children.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Do not touch the hot surface. Use the handle or the button.
14. The attached base must not be used for other than its intended use.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play with it.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool before cleaning the appliance.
20. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
21. To disconnect, turn control to "off", then remove plug from power outlet.
22. Do not use the appliance for other than its intended use.
23. The kettle can only be used with the base provided.
24. If the kettle is overfilled, boiling water may spill out.
25. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed when boiling.

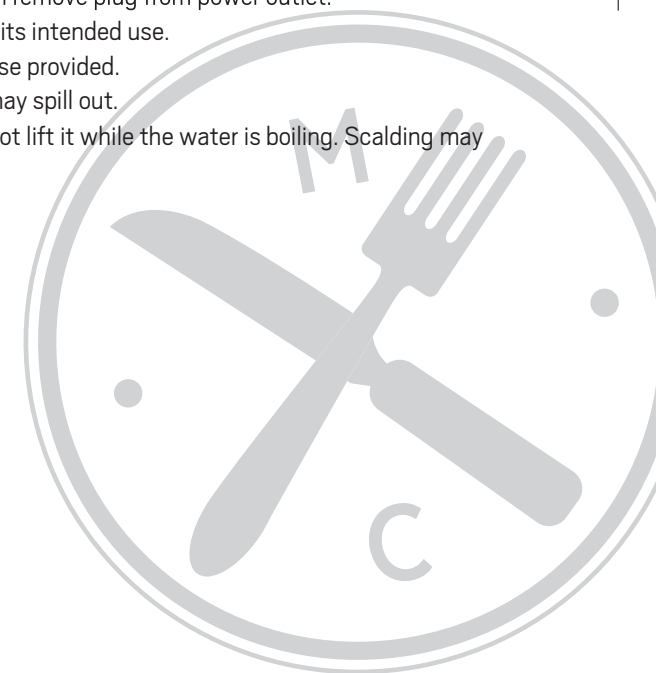



Model no.043-5765-8 | Contact us: 1-855-803-9313

MASTER  
**Chef**<sup>TM</sup>

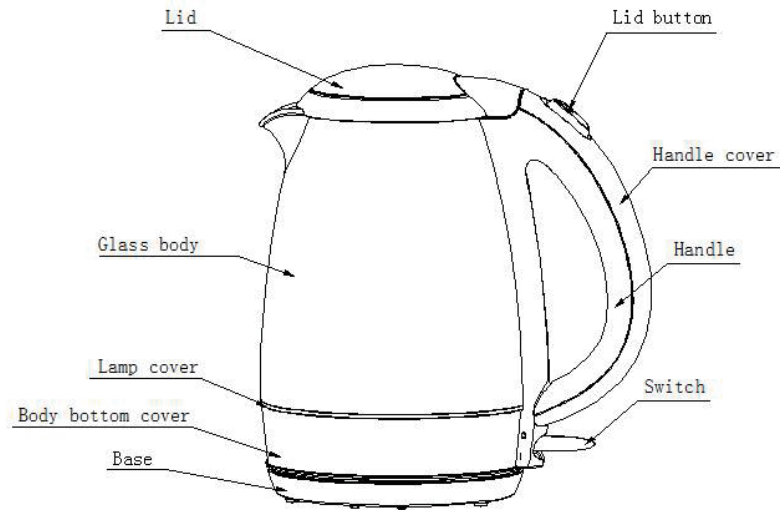

## SAVE THESE INSTRUCTIONS

### HOUSEHOLD USE ONLY



#### Notes on the cord plug:

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

#### Notes on the cord

- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cords or extension cord is used,
  - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
  - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

### BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water and then discarding the water. Wipe the surface with a damp cloth.



**NOTE:** The max capacity of kettle is 1.7 L.

### USING YOUR ELECTRIC KETTLE

- Place the kettle on a flat surface.
- To fill the kettle, remove it from the power base and open the lid. Fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle to switch off before the water has boiled.



**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging into the power outlet.

- Position the kettle on the power base.
- Plug the power cord into a power outlet. Press the power switch and the indicator will light up. The kettle will start boiling. The kettle will switch off automatically and the indicator will turn off once the water has boiled. Wait 30 seconds before pressing the power switch again to re-boil the water. You may shut off the power by directly lifting the kettle from the power base at any moment to stop the boiling process.



**NOTE:** Ensure that the switch is free of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is obstructed or if the lid is open.

- Lift the kettle from the power base and then pour the water.




**NOTE:** Use caution when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid as water in the kettle is hot.

- The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.



**NOTE:** Always disconnect the power supply when not in use.

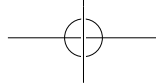

6

7

MASTER  
**Chef™**

Model no.043-5765-8 | Contact us: 1-855-803-9313

## Boil-Dry Protection

**BOIL-DRY PROTECTION**

Should the kettle be operated without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before boiling.

**REMOVAL OF MINERAL DEPOSITS**

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle resulting in longer boiling times. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow instructions below using white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add water to the Max amount. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle, then fill the kettle with clean water to the Max level, boil again and then discard the water. Repeat several times until the odour of vinegar is no longer noticeable. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

## Removal of Mineral Deposits

## Cleaning and Maintenance

**CLEANING AND MAINTENANCE**

Always disconnect the appliance from the power outlet and let cool completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come into contact with these parts.
2. Wipe the surface of body with a damp cloth or cleaner, never use an abrasive cleaner.



**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle as this will damage the finish.

3. When not in use or in storage, the power cord may be wrapped under the power base.

**1-Year Limited Warranty**

This product carries a **one (1) year** warranty against defects in workmanship and materials.

 
Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.

This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

## Warranty



Customer service hotline:  
Masterchef Tel: 1-855-803-9313