


simplicite™

INSTRUCTION MANUAL

IMMERSION BLENDER

043-5772-0

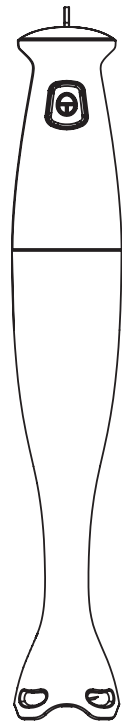

Read this manual thoroughly before using this product and save it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Before using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer, an authorized service agent or a qualified technician to avoid any hazards.
5. Always disconnect the blender from the power supply and before assembling, disassembling or cleaning.
6. Do not let cord hang over the edge of a table or touch hot surfaces.
7. Do not immerse upper part of blender into water as this may result in electric shock.
8. Close supervision is necessary when any appliance is being used by or near children.
9. Avoid contact with moving parts.
10. Keep hands and utensils out of bowl while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not in operation.
11. The appliance cannot be used for chopping ice or blending hard and dry substances, otherwise the blade could be damaged and/or become dull.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Do not operate the appliance for other than its intended use.
14. Children should be supervised to ensure that they do not play with the appliance.
15. The metal blades are extremely sharp, please handle carefully.
16. Always hold the blade stem instead of cutting edge when handling and cleaning the blade.
17. Injury may occur from misuse.
18. Use caution when handling the sharp cutting blades, emptying the bowl and during cleaning.
19. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

20. Children should not play with the appliance.
21. Be careful if hot liquid is poured into the bowl as it can be ejected out of the bowl due to sudden steaming.
22. This appliance is intended for household use and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
23. Do not use outdoors.
24. Do not place on or near a hot gas or electric burner or in a heated oven.


HOUSEHOLD USE ONLY

Notes on the cord plug:
This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS

Know your blender

Suitable for blending vegetables and fruits

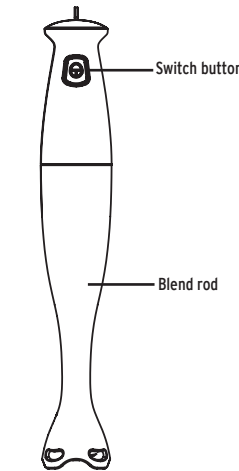

Before using your blender

Before the first use, clean the blender as per the 'Cleaning and Maintenance' section.
Do not run blender for more than 1 minute when not blending.
Important: Blades are very sharp, handle with care.

Using your blender

Max operation cannot exceed 1 minute at a time. A 1 minute rest period must be maintained between two consecutive cycles.

1. Simply plug the hand blender to power outlet.
2. Lower the hand blender into food. Then press and hold the switch button to start operating.
3. Stop the hand blender by releasing the switch button.

Cleaning and maintenance

1. Wash the blend rod under running water, without the use of abrasive cleaners or detergents. Place upright so that any water which may have entered unit, can drain out.
2. Wipe the blender with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.
3. Dry thoroughly.
Caution: Blades are very sharp, handle with care.

Quick cleaning

Between processing tasks, hold the hand blender in a cup half filled with water and turn on for a few seconds.

1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: dispose of as per the requirements of your local municipality.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8