 



MASTER
Chef™
HAND BLENDER
WITH 3 ATTACHMENTS

Model no. 043-5773-8

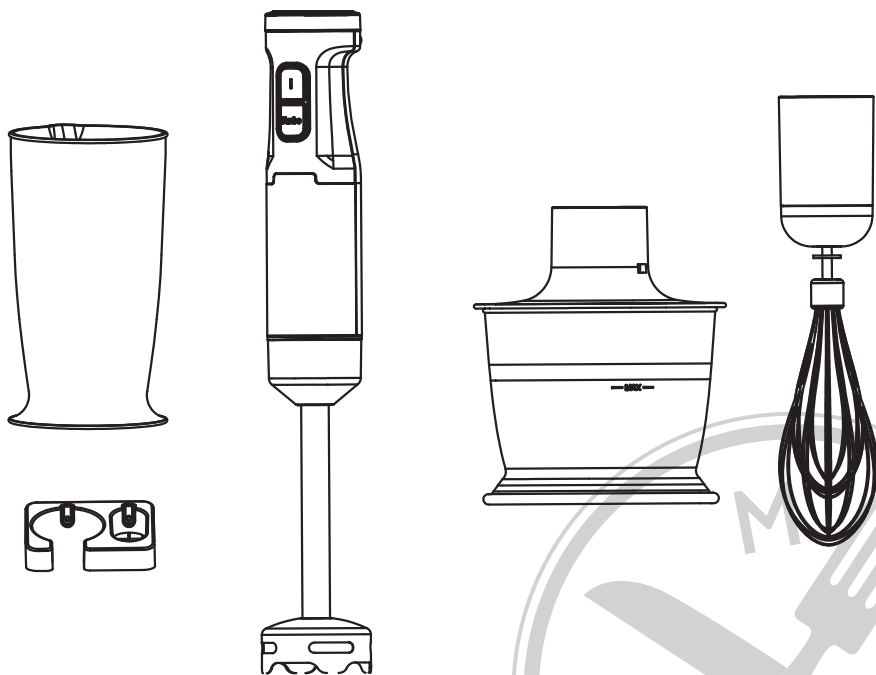

INSTRUCTION MANUAL

 Read this booklet thoroughly before using the product, and save it for future reference.



Model no. 043-5773-8 | Contact us: 1-855-803-9313


Important Safeguards	2-3
Know Your Hand Blender	4
Know Your Chopper Accessory	4
Know Your Whisk Accessory	5
Using Your Hand Blender	6-7
Cleaning and Maintenance	8
Warranty	9

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:


1. Read all instructions. Save these instructions for future reference.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the power cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
5. Turn the appliance OFF, then unplug from the power outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the power outlet. Never pull from the power cord.
6. Do not let cord hang over the edge of a table or touch hot surfaces.
7. To protect against the risk of electric shock, do not immerse upper part of blender in water or other liquids.

 8. Close supervision is necessary when your appliance is being used near children.
9. Avoid contact with moving parts.
10. Keep hands and utensils out of container while blending or chopping food to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
11. The appliance cannot be used for chopping ice or blending hard and dry substances, otherwise the blade could be damaged or become dull.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Be sure chopper lid is securely locked in place before operating appliance. Do not open chopper lid until the blade stops.
14. The use of accessory attachments not recommended by the manufacturer may cause personal injury or damage the appliance.
15. Do not operate the appliance for other than its intended use.
16. This appliance should not be used by children and care should be taken when used near children.
17. Do not let cord contact hot surfaces, including the stove.
18. Do not use outdoors.
19. Blades are sharp. Handle carefully.
20. Do not attempt to access the interlock mechanism.
21. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
22. The maximum rating is based on the blending blades that draws the greatest power and that other attachments may draw significantly less power.

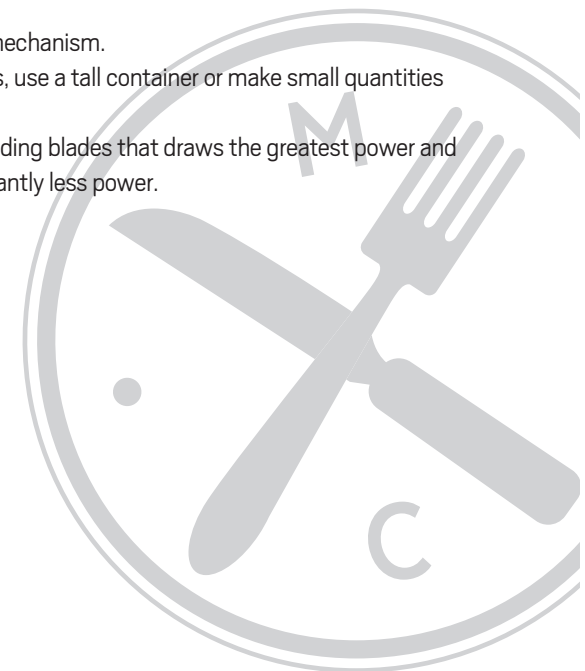


Model no. 043-5773-8 | Contact us: 1-855-803-9313

 Blending vegetables and fruits

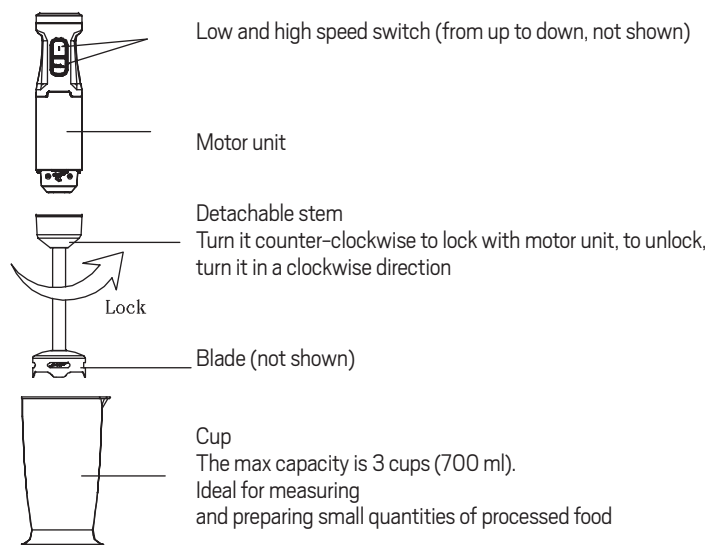


Chopping meat and making garlic paste

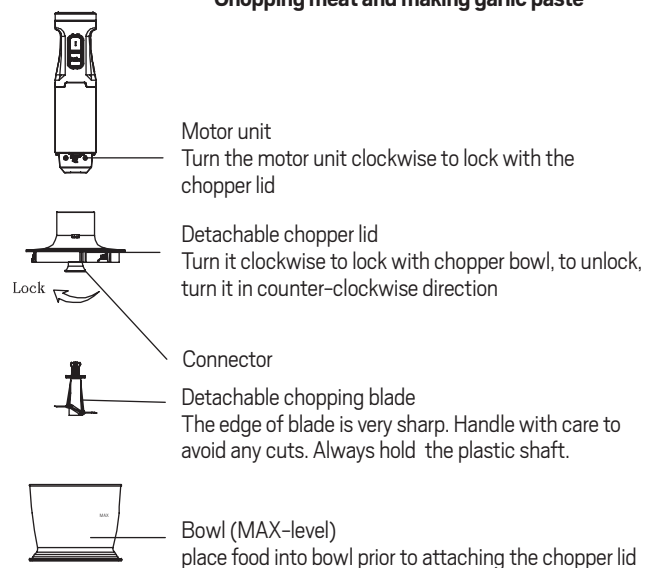 

MASTER
Chef™

 Whisking foods such as egg whites

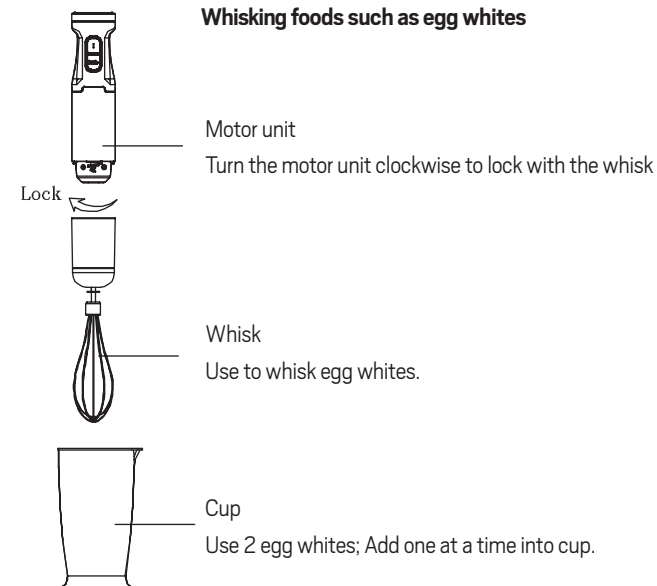


SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Model no. 043-5773-8 | Contact us: 1-855-803-9313

 

Wall bracket
Hook the blender or detachable shaft in larger opening after using.

Using your blender

Before the first use, clean the blender according to the section of "quick cleaning". The running time of the unit without food or liquids should not exceed 15 seconds. Important: Blades are very sharp, handle with care. Ensure that the hand blender is unplugged from the power outlet before attaching or removing parts.

Instructions for blender

Maximum operation time should not exceed 60 seconds. Rest 1 minute between two consecutive blending cycles.

1. To assemble the detachable shaft with the motor unit, turn the shaft in a counter-clockwise direction until tightened. To disassemble, turn in clockwise direction.
2. Plug the hand blender in to a power outlet.
3. Lower the hand blender into food and depress the switch at the top of the motor unit.
4. To stop the hand blender, release the switch at the top of the motor unit.

Instructions for chopper

Maximum operation time should not exceed 30 seconds. Rest 1 minute between two consecutive blending cycles.

1. Place the chopper bowl on a clean, level surface.
2. Assemble the stainless steel chopping blade into the chopper bowl (see Fig.1).
3. Attach the connector on the chopping blade (see Fig.2).
4. Place food into the chopper bowl.



NOTE: When chopping meat, remove all bones and cut meat into small pieces. Place meat into chopper bowl. Max quantity of meat is 200 g (7 1/2 oz).

5. Attach the lid onto the chopper bowl and turn it in a clockwise direction until it locks into position. (See Fig.2.) To detach the lid, turn in a counter-clockwise direction.
6. Insert the top part of the chopper into the hole of the chopper lid, and turn it in a clockwise direction to lock. (See Fig.3)
7. Plug the appliance into a power outlet and depress the switch to begin operation.
8. To stop the appliance release the switch at the top of the motor unit.



Caution: To reduce the risk of injury, never place cutting blade on base without first placing bowl properly in place.



Caution: Ensure the chopper lid is securely locked in place before operating appliance.

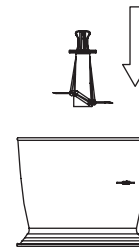 


Fig.1

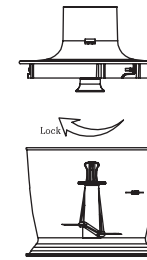 


Fig.2

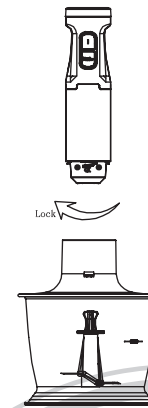 


Fig.3

Instructions for whisk

Maximum operation time should not exceed 1 minute. Rest 1 minute between two consecutive blending cycles.

1. To assemble whisk to the motor unit, turn the whisk in a counter-clockwise direction until tightened. To disassemble, turn in a clockwise direction.
2. Plug the hand blender into a power outlet.
3. Place egg white into the cup. Generally, 2 eggs whites is sufficient.
4. Lower the hand blender into food and depress the switch at the top of the motor unit.
5. To stop the hand blender release the switch at the top of the motor unit.

Model no. 043-5773-8 | Contact us: 1-855-803-9313



NOTE: Do not immerse the detachable stem of the blender in water as the lubrication on the bearings may wash away.

1. Unplug the appliance and remove the detachable stem.
2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. Place upright so that any water that may have entered the unit, can drain out. The stem is dishwasher safe.
3. Wash the cup, bowl, whisk and blade in warm, soapy water. It is recommended that the bowl and whisk not be placed in dishwasher as the plastic component may deteriorate after prolonged use.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
5. Dry thoroughly.



CAUTION: Blades are very sharp, handle with care.

6. Reassemble the blender shaft to motor unit then place it upright in wall bracket (see Fig.4) or hang it up for saving space.

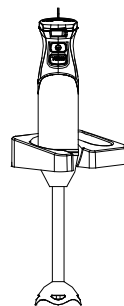 


Fig. 4

Quick cleaning

Between processing tasks, hold the hand blender in a cup half filled with water and turn on for a few seconds.

Attaching wall bracket to the wall:

- 1) Drill two same holes in wall and strictly follow the dimension as indicated (see Fig.5).
- 2) Insert anchors into holes and tap with hammer until flush with wall.
- 3) Secure the bracket on wall with two other screws.

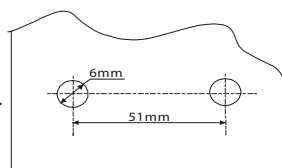 


Fig. 5

MASTER
Chef™

 
1-Year Limited Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8





Customer service hotline:
Masterchef Tel: 1-855-803-9313