 


MASTER **Chef**TM

 
ELECTRIC KNIFE

Model no. 043-5784-2

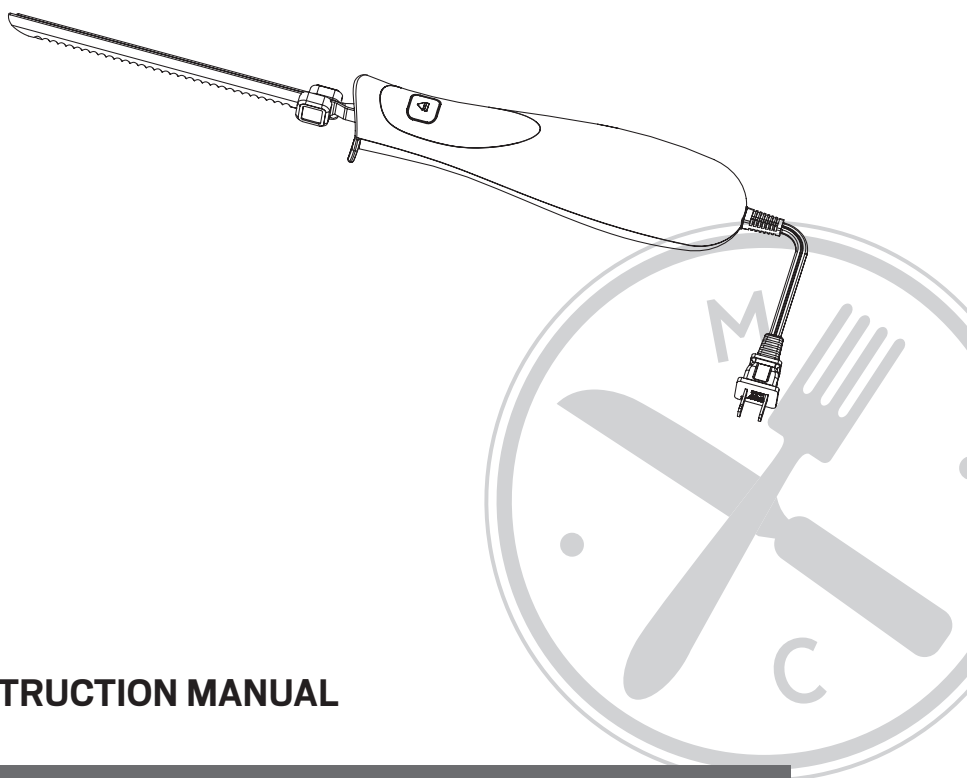

INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.



Model no.043-5784-2 | Contact us: 1-855-803-9313

Important Safeguards	2-3
Know Your Electric Knife	4
Using Your Electric Knife	5
Slicing hints	6
Cleaning and Maintenance	6
Warranty	7

IMPORTANT SAFEGUARDS


When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including the following:

1. Caution is necessary when handling the blades.
2. Read carefully and save all the instructions provided with this appliance.
3. Always turn the power off at the power outlet before you insert or remove the plug. Remove by grasping the plug – do not pull on the cord.
4. Turn the power off and remove the plug when the appliance is not in use and before cleaning.
5. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
6. Always use your appliance from a power outlet of the voltage (AC only) marked on the appliance.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

8. Children should be supervised to ensure that they do not play with the appliance.
9. The temperature of accessible surfaces may be high when the appliance is operating.
10. Never leave an appliance unattended while in use.
11. The serrated edges of the blades are very sharp.
12. Do not allow children to play with blades.
13. Do not operate this appliance for any purpose other than its intended use.
14. Do not place the appliance on or near a hot gas flame, electric element or on a heated oven.
15. Do not place on top of any other appliance.
16. Do not let the power cord of the appliance hang over the edge of a table or bench top or touch any hot surfaces.
17. Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
18. Do not immerse the appliance in water or any other liquids.
19. Appliances are not intended to be operated by means of an external timer or separate remote control system.
20. This appliance is intended for household use **use and similar** applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other and residential type environments; bed and breakfast type environments.
21. Disconnect when changing blades.
22. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
23. Do not use outdoors.
24. Avoid contacting moving parts.



Model no. 043-5784-2 | Contact us: 1-855-803-9313

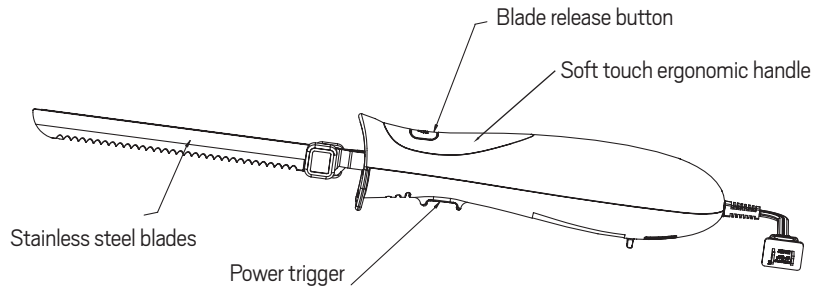

Micro serrated stainless steel blades

Serrated stainless steel blades are durable and sharp for efficient slicing and carving.

Safety guards

For safe fitting and removal of blades.

Blade release button

Conveniently located at the front of handle.

Power trigger

Located under the handle for ease of operation, the index-finger trigger action, allowing the most comfortable position for carving.

Handle

Convenient and simple to operate. The ergonomic design provides comfort, versatility and control when carving both vertically and horizontally.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



Notes on the cord

- A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used,
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
 - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

MASTER
Chef™



NOTE: For cleaning before first use, follow this process:

When using the product for the first time, remove the blades and wipe the surface of the blades with a sponge and cleaning solution. Clean the front and back of the blades and rinse it off with water.

NOTE: The blades are sharp and can easily scratch or cut hands. Be careful when cleaning. To avoid electric shock, the blades should be removed from the main housing when cleaning.

- Interlock blades together before inserting into the appliance. To assemble blades, grasp shaft ends below the safety guards and slip the rivet on the tip of the other blade. See Figure 1. Bring blades together ensuring tips remain together.



NOTE: Always use both blades when operating appliance.

- Hold assembled blades by the safety guards and slide shafts gently into the blade slot until clipped into position. See Figure 2.



Warning: Only when blades are attached should the cord be plugged into the power outlet.

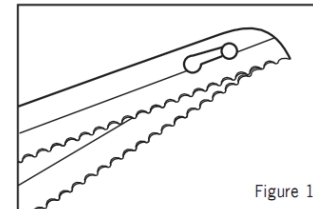


Figure 1

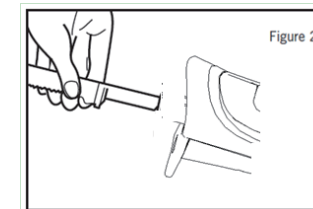


Figure 2

- Insert the plug into a 120 volt (AC only) power outlet and ensure the cord is well away from the blades. Holding the knife with one hand, slide and press the double movement power trigger positioned under the handle to activate the motor. Releasing the switch will automatically stop the motor.




WARNING: Avoid contact with moving parts. Keep hands, hair, clothing and other utensils away from moving blades during operation to prevent personal injury and/or damage to the knife.

- When slicing is completed, turn the power off by releasing the power trigger switch and removing plug from power outlet. While holding the blades by the safety guards and cutting edge facing down, push the blade release button to release blades. Pull blades out of the slots.



WARNING: The blades are sharp! Handle with extreme care. We recommend using the guard sleeve provided when handling the blades. Do not fit or remove blades while the knife is plugged into the power outlet. Do not allow children to operate the appliance.

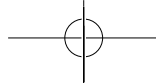

6

7

MASTER
Chef™

Model no. 043-5784-2 | Contact us: 1-855-803-9313

Slicing hints

1. Always place food to be sliced on a wooden or plastic cutting board.
2. Do not slice food on china, metal or bench tops, as scratching may occur.
3. Guide blades through food.
4. A sawing action is not necessary.
5. Do not force blades through food.
6. To maintain the sharpness of blades, do not cut through bones, fruit pits or stones or any other hard substances.
7. For best results when carving meat and chicken, allow cooked meat to stand for 10-15 minutes before slicing. This allows the juices to set and makes carving easier and neater.
8. Before carving meat or chicken, remove skewers.
9. If desired, string may be left around the meat when carving.
10. The use of a carving fork to steady the meat helps to carve straight and even slices.
11. Do not attempt to sharpen blades.
12. We recommend when slicing foods like bread, a light coating of cooking oil, margarine or similar product be rubbed on the inside of the blades as this will reduce the friction.

Cleaning And Maintenance**WARNING :** Ensure the unit is switched off and the plug removed from the power outlet before removing the blades and/or cleaning.




Unlock the blades by sliding apart. Always hold blades by the shaft end, behind the safety guard, when handling and cleaning. Wash the blades in hot soapy water with a soft cloth or sponge. Rinse thoroughly and dry completely. Do not use abrasive scouring pads or powders on blades. After cleaning, always store blades in plastic sleeves. To clean motor housing, wipe with a soft damp cloth. Before storing your knife, a light coating of cooking oil or similar product on the inside of the blades is suggested.

1-Year Limited Warranty

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear, misuse and/or abuse.

Made in China
Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Warranty

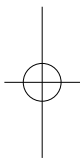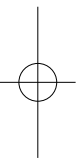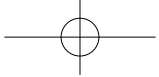

Customer service hotline:
Masterchef Tel: 1-855-803-9313

