 


Installation and User Manual

FAN HEATER

043-5866-8

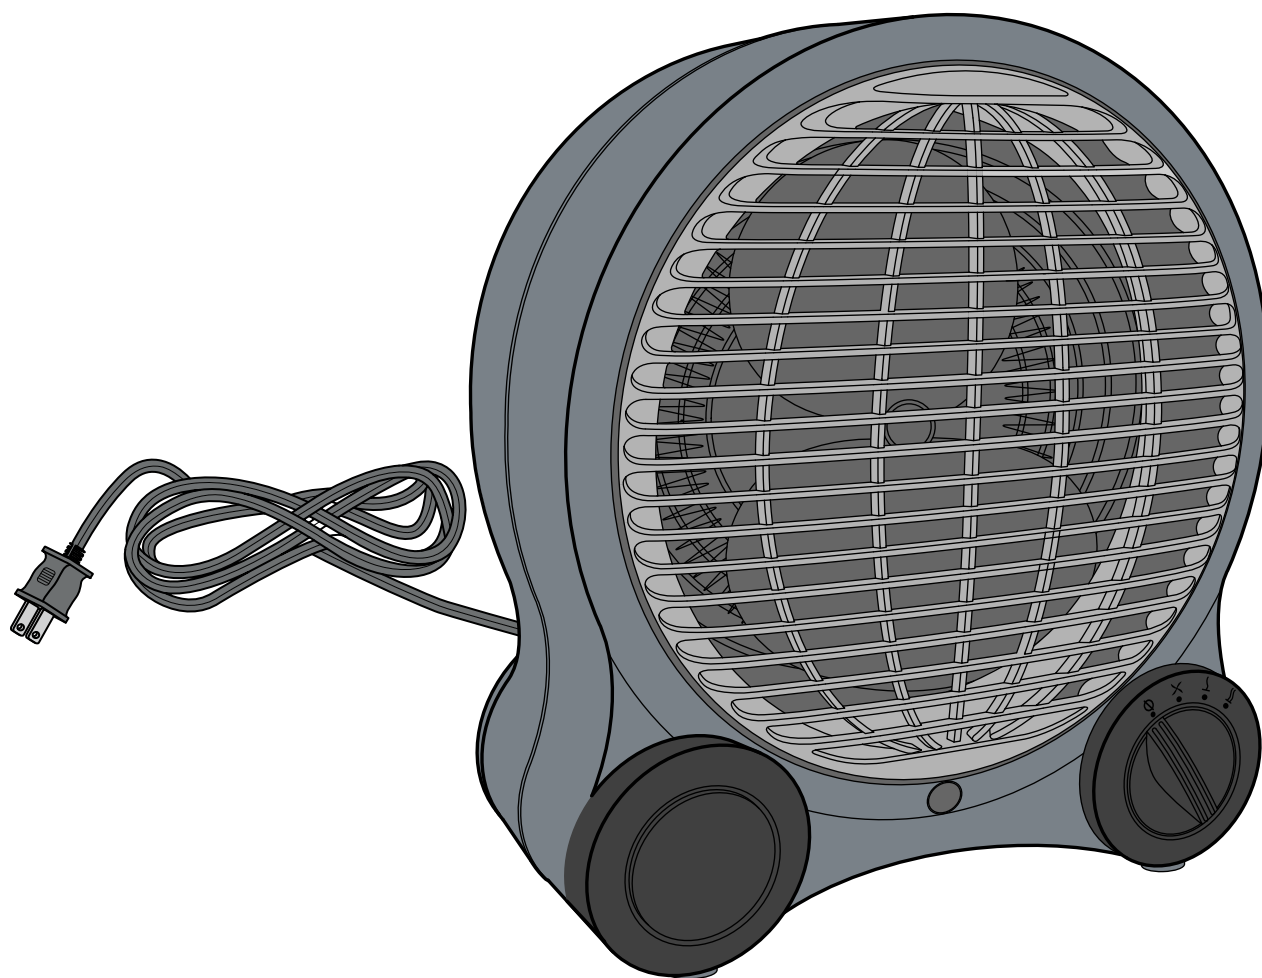

Stop



Please read and understand this manual before any assembly or use of this product.

Before beginning assembly of product, make sure all parts are present. Questions?

If you have any questions or need replacement parts, please call our toll-free helpline at 1-866-788-7389.

Table of Contents

Technical Data 2

Important Safety Instructions..... 3

Key Parts Diagram 5

Important Information..... 6

Operation..... 7


Care and Maintenance 10

Warranty 11

Technical Data

Model Number	:	043-5866-8
Operating Voltage	:	120 V
Operating Frequency	:	60 Hz
Power	:	1500 W (high), 900 W (low)

 Dimensions

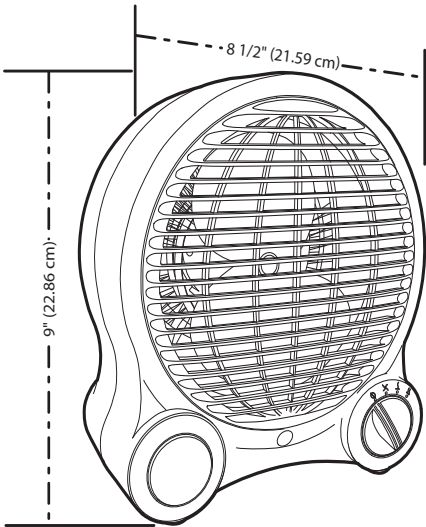

Important Safety Instructions

IMPORTANT! READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE!



WARNING! To avoid possible electric shock, switch off the power supply at the main fuse or circuit breaker box before installing, servicing, or cleaning.

- Read all the instructions carefully and use the heater only as directed in the manual. Usage of the heater in other ways may cause electrical shock, fire, or damage to persons or property.
- This heater is hot when in use. Do not let bare skin touch hot surfaces. Always wait until the heater has cooled to move the unit.
- Make sure combustible materials, such as furniture, pillows, bedding, papers, cloths, and curtains, are at least 3' (0.9 m) away from all sides of the heater. Do not block the rear grille (air inlet) with walls, drapes, or similar items.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- Always unplug heater when not in use.
- Keep pets away from heater to avoid injury.
- DO NOT operate the heater with a damaged power cord or if the heater has been dropped, damaged, or has malfunctioned. Return the heater to an authorized service facility for inspection, electrical or mechanical adjustment, or repair.
- DO NOT use heater outdoors.
- DO NOT use heater in any area where there is standing water. Do not locate heater where it may fall into a bathtub, pool, or other water container.
- DO NOT run power cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Make sure the cord is kept away from highly traveled areas so that it will not be tripped over.
- To disconnect the heater, turn controls to OFF, then remove the plug from the outlet.
- Connect power cord to properly polarized electrical outlets only.
- DO NOT allow foreign objects to enter any ventilation or exhaust opening in the heater as this may cause electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- The heater has hot, arcing, or sparking pads inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- To prevent overload and blown fuses, do not plug in or use another appliance on the same electrical circuit as the heater.
- It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch may be a result of a worn electrical outlet. Worn outlets should be replaced prior to further use of the heater. Plugging the heater into a worn outlet may result in the power cord overheating or fire.
- Ensure the heater is placed on a stable, secure surface to avoid risk of tipping it over.
- DO NOT use an extension cord or relocatable power tap (outlet/power strip). Always plug the power cord directly into a wall outlet/receptacle.
- Make sure the power cable has not been damaged in any way during transportation.
- Make sure that no pieces of polystyrene or other packaging material have been left between elements in the appliance. If necessary, use a vacuum cleaner to remove small pieces of packaging.

 
SAVE THESE INSTRUCTIONS.

Important Safety Instructions

- Make sure the plug is fully inserted in the electrical outlet. Electrical outlets can deteriorate with use. Check periodically for signs of overheating or deformation of the plug. If damage is found, do not use the outlet and contact a certified electrician.
- In the event of overheating, the heater will automatically shut off due to a Thermal Cut-Off. To reset, turn off or unplug the heater for five (5) minutes so components can cool down. The most common cause of overheating is the collection of dust. Refer to the Care and Maintenance section in this manual for cleaning instructions.
- **CAUTION:** TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

SAVE THESE INSTRUCTIONS.

Key Parts Diagram

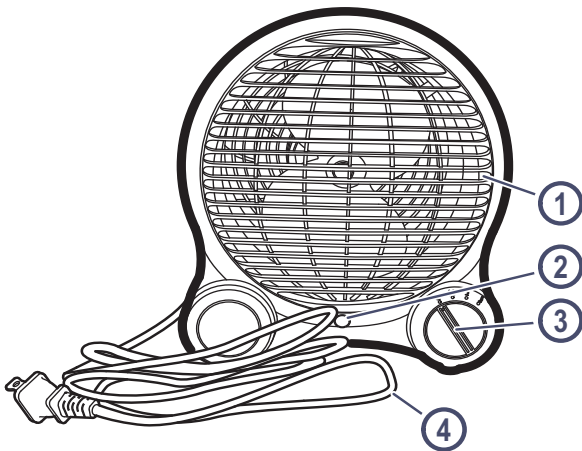

No.	Name
1	Safety Grill
2	Pilot Light
3	Power Control Knob
4	Power Cord

Important Information

1. Features

1.1. Power Indicator

This indicator glows to indicate that the heater/fan is ON.

1.2. Power Level Switch

 
The power level switch is used to turn the heater on or off. The heater will operate at different power ratings when setting the power level switch at Fan, LO and HI positions.

At the Power OFF position (1) the heater is OFF.

At the Fan position (2) the heater is in Fan Mode (15 W).

At LO Heat Setting position (3) the heater is operating in LO Mode (900 W).

At HI Heat Setting position (4) the heater is operating in HI Mode (1500 W).

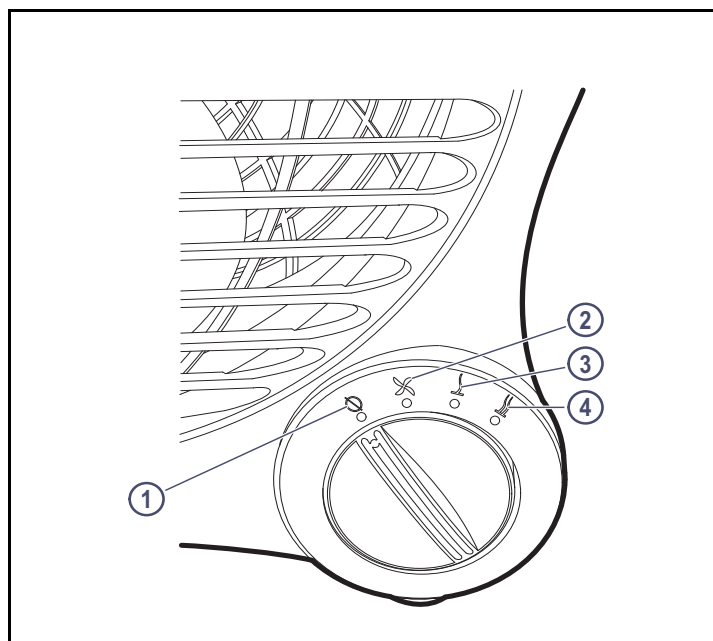

2. Safety Features

2.1. Polarized Plug

The heater power cord is equipped with a polarized plug to prevent electric shocks. In a polarized plug one of the blades is wider than the other. The wider blade can be plugged into a socket with a wider slot in only one way, thus preventing an electric shock. Contact a qualified electrician if the plug does not fit into the socket.

2.2. Thermal Fuse

In the event that the unit reaches extremely high temperatures, the heater's fuse will shut off permanently. Should this occur, the heater should be inspected and repair by a certified electrician only.

2.2. Tip-Over Switch

As an additional safety measure, the heater will shut off in the event of it being knocked over. Should this occur, turn the heater OFF and stand it back up to a correct position. Locate the heater so that it cannot be tipped over. Turn the heater back ON.

Operation - Heater mode

 


WARNING!

- Read each step carefully before beginning any installation and make sure you understand each step.
- Keep children and pets away during heater operation.
- During first use, the heater may emit an odor and/or a trace of smoke. This is normal. Oil from the manufacturing process is evaporating and should not re-occur. Make sure that the room the appliance is operating in is well ventilated during operation. It is normal for the appliance to make small cracking sounds when you turn it on for the first time.


1. Locating the heater

- Place the heater on a firm, level surface free from obstructions, and at least 3' (0.9 m) away from any wall and any other combustible materials such as furniture, pillows, papers, clothes and curtains. The heater should be in an upright position during operation.

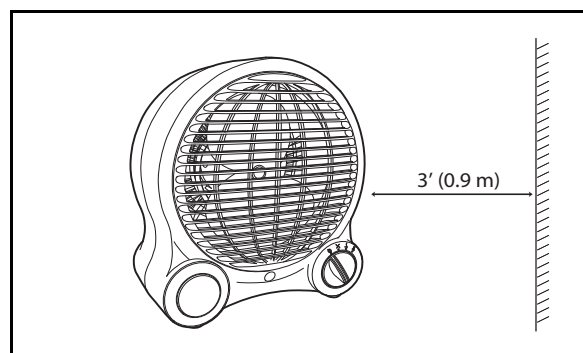

2. Connecting the heater to the power supply

 - Make sure the power level switch is in the (OFF) position. Connect the power cord of the heater into a grounded 120 V AC, 60 Hz outlet.

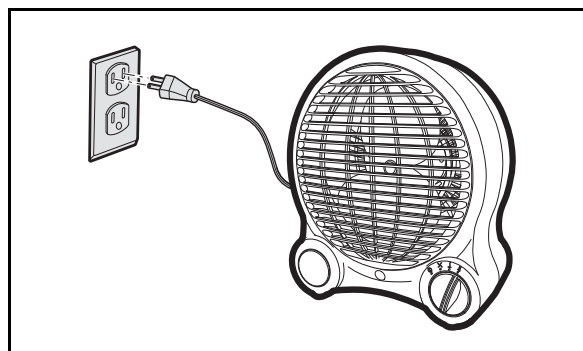


WARNING!

- Make sure the plug fits tightly in the outlet. A loose connection may cause overheating and damage to the plug or heater.
- Disconnect the heater from the power supply when the heater is not in use.

Operation - Heater mode

3. Turning ON the heater

 - Turn the power level switch from the OFF position (1) to the Fan (2), LO (3), or HI (4) setting. The pilot light will come on, indicating the heater is operating.
- Turn the switch to the HI (4) setting to heat up a room quickly, then turn down to LO (3) to reduce electrical consumption and prevent the room from becoming too warm.

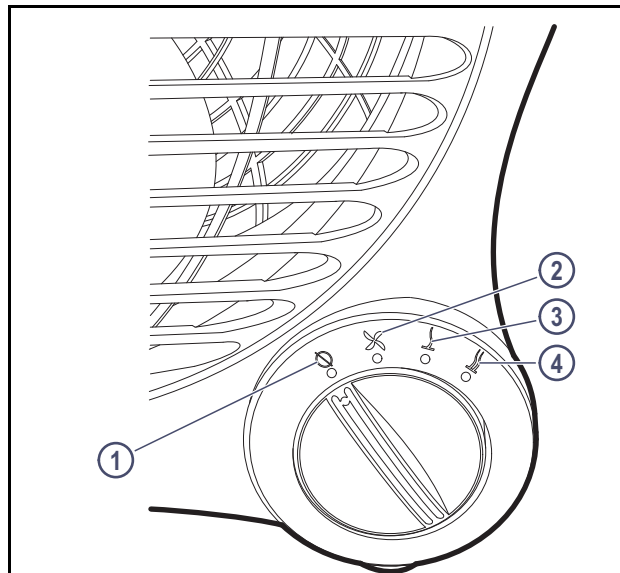

4. Turning OFF the heater

- Turn the power level switch to the OFF position (1) and unplug the power cord from the outlet after using the heater.

Care and Maintenance



WARNING!

- Before cleaning the heater, always turn off the power switch and unplug the heater.
- Do not allow water to enter the interior of the heater. Doing so may cause electric shock or fire.

It is recommended to clean the heater at least once a month and also before off-season storage.

- After use, always turn off the heater and allow the heater to cool.
- Use a soft, damp cloth to gently wipe off dirt from the heater surface. Do not use any detergents or abrasives or immerse the heater in water. Allow the heater to dry completely before use.
- Use a vacuum cleaner with a crevice tool attachment to clean the interior and remove dust.
- If the heater is not in use for a certain period, store the heater in a dry place.

Storage

- Clean the heater as described in this manual.
- Dry the heater with a clean, dry cloth.
- Store the heater in a plastic bag and store it in a cool, dry place.



WARNING!

- Do not attempt to open or repair the heater. Doing so may void the warranty and could cause damage or personal injury.

Troubleshooting

Problem	Probable Cause	Solution
Heater will not power ON	Heater's fuse has been permanently shut off due to extreme heat.	Do not attempt to fix heater yourself. Contact a certified electrician to service the heater.
Unit is not heating	Thermal Cut-Off has been activated due to an overheating event.	Turn the heater OFF. Unplug heater and allow it to completely cool down. Inspect and remove an objects on or adjacent to the heater. Wait 5 to 10 minutes before plugging unit back in.

Warranty

Limited 1-year Warranty

This product carries a **one (1) year** warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with **proof of purchase**. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Imported by Trileaf Distribution Trifeuil
Toronto, Canada M4S 2B8



Warranty
