


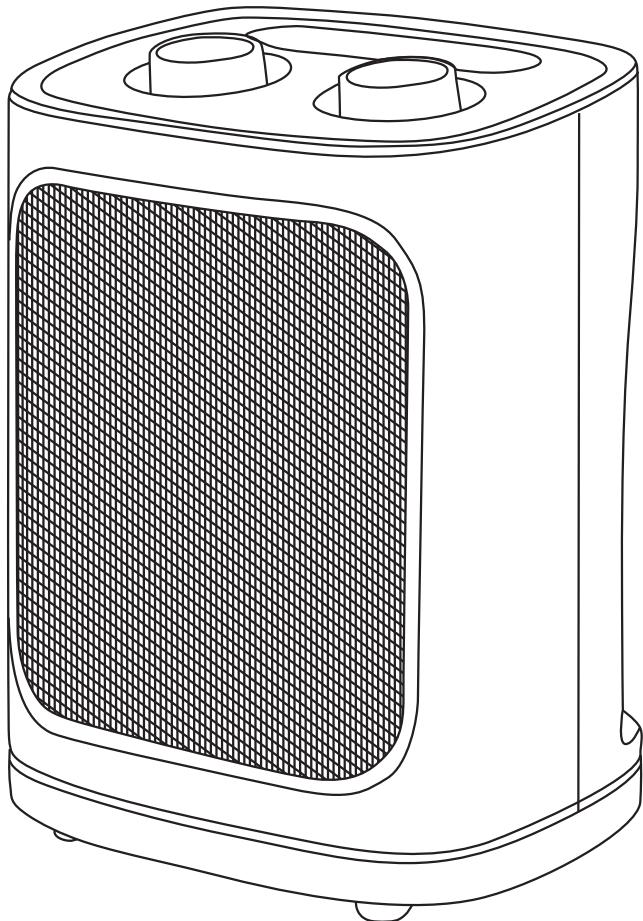

Oscillating Ceramic Heater

Product No. ZFH006-OS (SKU: 043-7083-8)

Instruction Manual



**NEED HELP? GIVE US A CALL!
WE'RE HERE FOR YOU.**



**TOLL-FREE:
1-877-483-6759**

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.



From your first apartment to
downsizing your family home,
For LIVING® is a great place to start.

Uncomplicate your life with timeless
style and reliable quality that delivers
everyday solutions for your home.

Let us know how our products
work for you. Rate and review at
canadiantire.ca

Table of Contents



Important Instructions	4	Troubleshooting	8
Technical Data	6	Caring for Your Item	9
Operating Instructions	7	Warranty	10

Important Instructions

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, the following basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3' (0.9 m) from the heater.
3. Extreme caution is necessary when any heater is used near children, pets, or the disabled. NEVER leave the heater unattended while operating.
4. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water containers. Do not use your heater outdoors. Do not use near sinks, swimming pools, or other damp areas, such as flooded basements, garages, or any place where the heater could come in contact with water.
5. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
6. To disconnect the heater, turn off the controls first, then remove the plug from the outlet.
7. Always unplug the heater by removing the plug end from the outlet when not in use. Never unplug by pulling on the cord as this can damage the power cord.
8. Do not use the heater under the following circumstances: the power cord or plug has been damaged; the machine has been defective; the machine has been dropped or damaged in any manner. Return the heater to the authorized service facility for examination, electrical or mechanical adjustment, or repair.
9. Always plug heaters directly into a wall outlet/receptacle. Never use an extension cord or relocatable power tap (outlet/power strip).
10. Do not run cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from the high-traffic areas to avoid a tripping hazard.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion. Contact a qualified electrician to replace the loose or worn outlet.

Important Instructions




12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhausts in any manner. Do not use the heater on soft surfaces, like a bed, where openings may become blocked.
14. Do not operate the heater with any safety guards removed.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. This heater draws 12.5 A during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
17. The heater's output may vary, and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
18. Do not locate the device against walls or behind drapes or furniture when it is used as a free-standing heater.
19. CAUTION: To prevent electric shock, match wide blade of plug to wide slot of receptacle and fully insert. Ensure the plug fits snugly in the socket.

SAVE THESE INSTRUCTIONS

Technical Data

Parts List

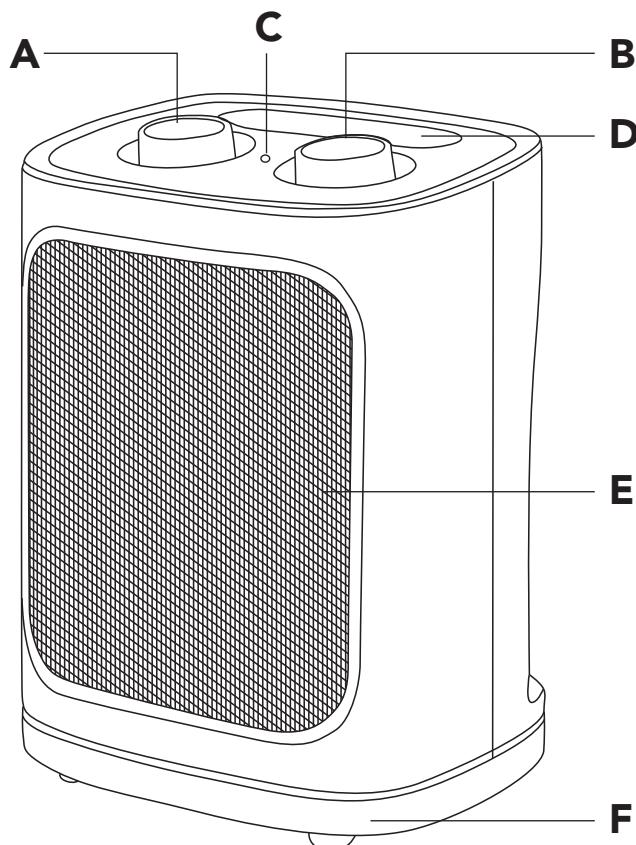

Ref Description

A Thermostat control dial

B Power selection dial

C Power indicator

D Carry handle

E Safety grille

F Base


Specifications

Voltage	120 V AC
Frequency	60 Hz
Power Consumption	1500 W (High)
Unit Assembled Dimensions (W x D x H)	7 x 5 1/2 x 9 3/8" (17.8 x 14 x 24 cm)
Unit Weight	3 lb 9.5 oz (1.63 kg)

Operating Instructions



1. Before using the heater make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline.
2. Turn off all the controls of the heater, and then plug directly into a standard polarized AC outlet. Be sure plug fits tightly into outlet.
3. Rotate the thermostat control dial clockwise fully.
4. Turn the power and setting control dial to the desired power setting:

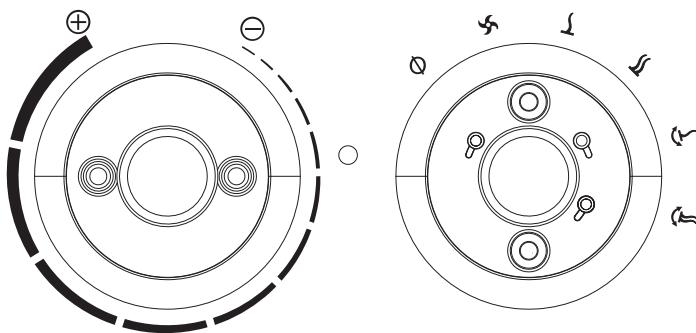

Symbol	Function
Q	Power off
☴	Fan only
↳	Low heat
☲	High heat
☲ ↳	Oscillation and low heat
☲ ↴	Oscillation and high heat

5. To completely shut the heater off, turn all the switches to off, and remove plug from the outlet when not in use.

NOTE: Do not force knob beyond its normal stop position.

Safety Features

Tip-over protection

The heater is provided with an anti-tilt switch that turns off the heater if it is overturned. It switches itself on again automatically when it is restored to its upright position.

Overheat protection

This heater is equipped with overheat protection that switches off the appliance automatically in case of severe overheating. In this case, unplug the appliance, wait about 30 minutes for it to cool down, remove any possible cause of overheating, and ensure nothing covers the heater. Check for damage to the appliance, the cord, and the plug. If there is no damage, plug the unit back in and switch it on as described above. If the heater still does not turn on, please contact Customer Service for assistance.

Troubleshooting

Need help?

Give us a call! We're here for you.

Toll-free: 1-877-483-6759



Before returning your product to store



Call us first!

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

Troubleshooting

Problem	Possible Causes	Solution
Your heater shuts off unexpectedly or fails to operate.	<p>Heater is not plugged into a 120 V polarized outlet/receptacle.</p> <p>Thermostat control dial does not turn ON.</p> <p>Breaker/fuse has been tripped.</p>	<p>Ensure unit is in OFF position. Plug in unit and attempt to turn on again.</p> <p>Rotate the power control dial from the OFF position. Then turn the thermostat control dial clockwise fully.</p> <p>Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit into another independent output in the house.</p>
Unit is not heating.	Room temperature has been warmed up to thermostat setting.	To resume heating, adjust thermostat to a higher setting.
The heater is creating a burning smell.	<p>A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.</p> <p>Check and ensure there are no combustible materials within 3' (0.9 m) of the heater.</p>	<p>Ensure room in which heater is situated is well ventilated.</p> <p>Remove the combustible materials preventing air intake into the heater.</p>

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO WILL VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

Caring for Your Item



Before Any Cleaning

The appliance should be regularly cleaned when in use in accordance with the following instructions:

- 1** Unplug and let the appliance cool down before cleaning.
- 2** Gently clean the outside surface and the appliance's control panel with a damp, lint-free, soft cloth.
- 3** If dust is present within the slits of the device, it is recommended to blow clean through the use of a vacuum cleaner or a blower.
- 4** Do not use chemical cleaners, solvents or harsh detergents as they may damage the appliance.

Storage

- 1** Keep the original packaging to store the heater.
- 2** Keep the appliance in a dry and clean place.
- 3** Store the unit out of reach of children.

Warranty



1-Year Limited Warranty

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Model No. ZFH006-OS (SKU: 043-7083-8)

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8