



POWERCLEAN® POWERLIFTER®

STICK VACUUM

4172, 4173 SERIES

Important Safety Instructions	2
Warranty	3
Assembly	4
Charging the Battery.....	5
Using Your Vacuum.....	6
Above-Floor Cleaning.....	6
Emptying the Dirt Tank.....	7
Cleaning and Replacing the Filters.....	8
Maintaining the Brush Roll	10
Troubleshooting.....	11

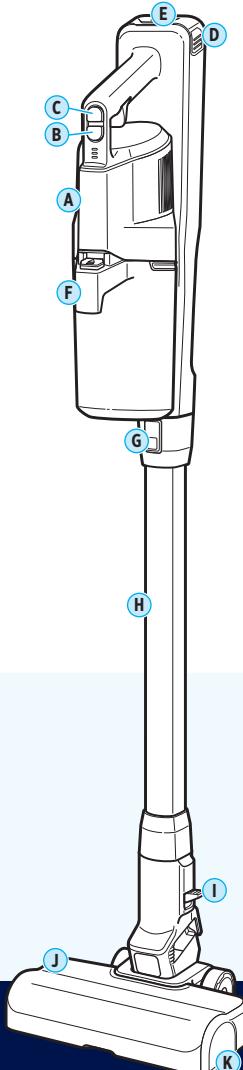
Product Overview

- | | |
|-----------------------------|----------------------------|
| A. Hand Vacuum | G. Hand Vac Release Button |
| B. Power Button | H. Extension Wand |
| C. Mode Button | I. Wand Release Lever |
| D. Battery Release Button | J. Motorized Foot |
| E. Battery | K. Brush Roll Release |
| F. Dirt Tank Release Button | |



Meet your new BISSELL® product!

Go to support.BISSELL.ca for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...



IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

⚠️ 🔥 ⚡️ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Unplug charger from electrical socket when not in use, before cleaning maintaining or servicing the appliance.
- Do not use outdoors or on wet surfaces.
- Do not use motorized nozzle on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not charge with damaged charger or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, have it repaired by a qualified technician.
- Do not pull or carry charger by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep PowerClean cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug, grasp the charger plug, not the cord.
- Do not handle charger, including charger plug and charger terminals with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- If the appliance has a hand-held accessory like pet brush, motor driven head, etc. the user shall avoid entrapment.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Risk of injury from moving parts. Brush may start unexpectedly. Turn OFF before cleaning or servicing.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use only with E-TEK charger Model ZD024M300100US or ZD024A300075US
- Do not use any battery pack which is not designed for use with the vacuum. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects,

like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range 4-40°C/40-104°F. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the battery pack except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-40°C/40-104°F when charging battery, storing unit or during use.
- Do not charge the machine outdoors.
- For use only with battery pack 1644207, 1643449, 4141 or 1644206, 1643447, 4143 or 1646404, 1644545, 4169.
- Do not turn your Vacuum ON until you are familiar with all instructions and operating procedures.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- Seek medical advice immediately if battery pack or parts of the battery pack has been swallowed.
- Do not remove battery from its original packaging until required for use.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire. Do not dismantle, open or shred battery pack. Do not subject battery pack to mechanical shock. Dispose of used batteries promptly and properly.
- Keep batteries out of reach of children
- The battery must be removed from the appliance before it is scrapped.
- Dispose of used batteries promptly.
- The battery is to be disposed of safely.
- Keep appliance on a level surface.
- Always turn off this appliance before connecting or disconnecting motorized foot.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

IMPORTANT INFORMATION

- Brush roll continues to turn while product is turned on and rotating brush tools are attached. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

SUPPLIER'S DECLARATION OF CONFORMITY 47 CFR SECTION 2.1077 COMPLIANCE INFORMATION Charger adapter for BISSELL product. CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

⚠️WARNING

This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.



Warranty

Limited 5-year warranty. Visit support.BISSELL.ca or call 1-800-263-2535 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.ca/terms-of-use or call 1-800-263-2535.

TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

To see what's included with your purchase,
check the "Carton Contents" list on the top flap of the box.



Hand Vacuum



Extension Wand



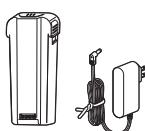
Motorized Foot



 
Upholstery Tool



Crevice Tool

 


Battery and Charger



Wall Mount (select models)

Assembly

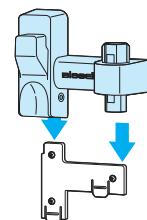
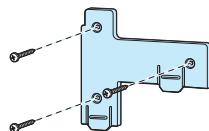
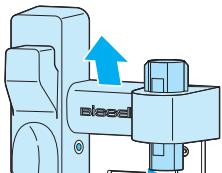


1. Connect the extension wand to the motorized foot until it clicks.

2. Connect hand vacuum to extension wand until it clicks.

3. Charge before first use.

 
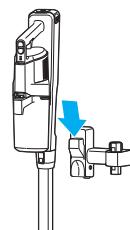
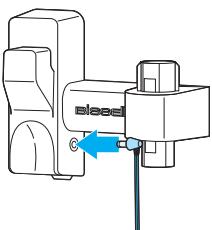
Assembling the Wall Mount (select models)



1. Pull and remove wall mount from plate.

2. Secure plate to the wall with the three screws, making sure the charging cable reaches from wall mount to outlet.
Note: Use provided dry wall anchors unless drilling directly into a stud.

3. Slide mount onto plate until it clicks.



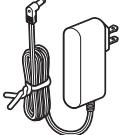
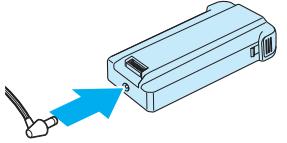
4. Connect charger to side of mount, then plug into wall.

5. Place vacuum on mount.

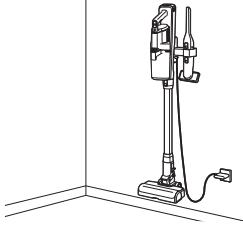
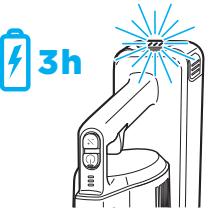
6. Attach tools to mount. They will click into place.

Charging the Battery

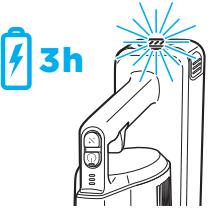
Charging Without Wall Mount

		
1. Power OFF. Press and hold battery release button, then pull battery out of vacuum.	2. Plug charger into wall.	3. Plug charger into battery.

Charging With Wall Mount (select models)

		
1. Power OFF. Place vacuum on wall mount. Machine should start charging automatically when properly mounted. Battery indicator lights flash when charging.		2. Machine will take up to 3 hours to charge. Battery lights will turn off when fully charged.

Charging on Unit Separate from Wall Mount

		
1. Power OFF. Plug charger into back of hand vacuum. Battery indicator lights flash when charging.		2. Machine will take up to 3 hours to charge. Battery lights will turn off when fully charged.

 
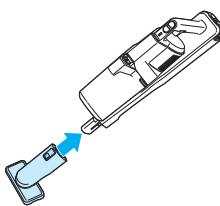
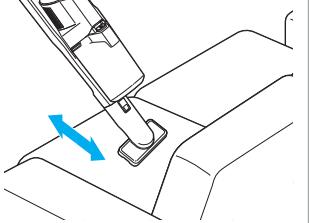
Using Your Vacuum

This vacuum can be used as a stick vacuum, hand vacuum, or extended reach with a hand vacuum and wand. For best results, use Eco mode for carpet cleaning.

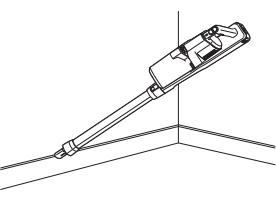
 	 
1. Press power button to turn machine ON. It will start in Medium mode.	2. Choose your cleaning mode for your task and surface type. Press mode button to switch between three modes: Eco: For smaller light messes. RUNTIME Up to 40 mins. Medium: Optimal balance of power and runtime. For most regular household messes. RUNTIME Up to 20 mins. Turbo: For heavy messes that require maximum suction power. Use sparingly to preserve battery life. RUNTIME Up to 12 mins.

Above-Floor Cleaning

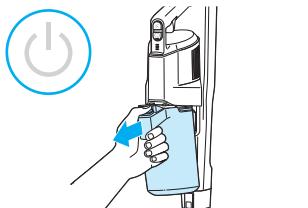
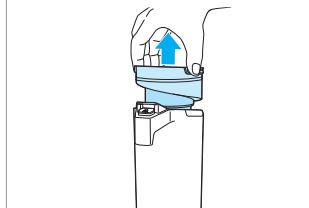
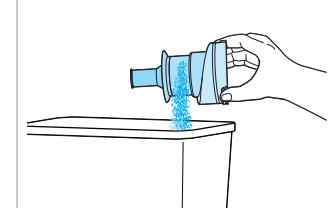
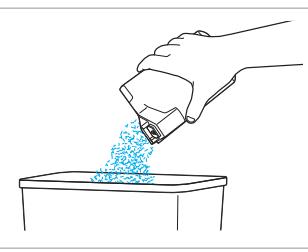
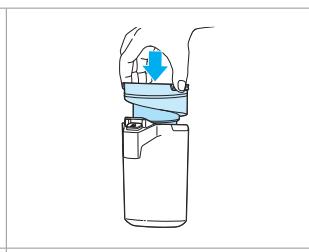
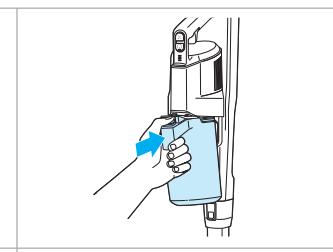
Using the Hand Vacuum

 		
1. Power OFF. Press release button to remove extension wand or tools.	2. Attach your desired tool. Note: The hand vacuum has a built-in crevice tool.	3. Use tool to clean furniture, stairs or other surfaces.

Using the Extension Wand

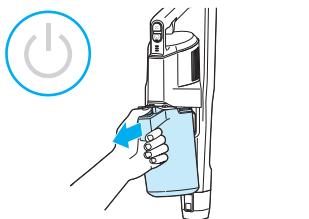
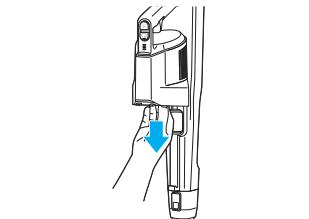
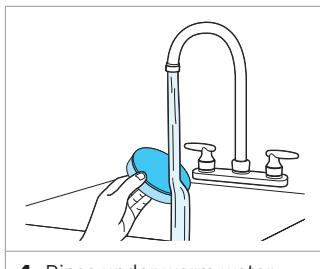
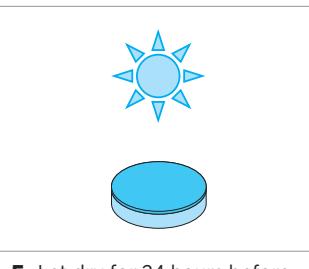
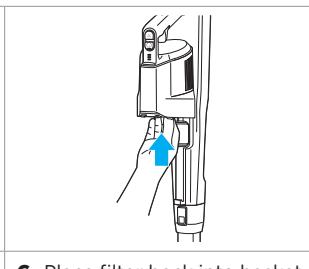
 	
1. Power OFF. Use your foot to gently press the wand release lever. Pull up on hand vacuum to remove.	2. Attach your desired tool. Note: The hand vacuum has a built-in crevice tool.

Emptying the Dirt Tank

 <p>1. Power OFF. Press release button on dirt tank and pull outward to remove.</p>	 <p>2. Pull separator out of dirt tank.</p>	 <p>3. Tap separator on waste bin to remove debris.</p>
 <p>4. Empty debris into waste bin.</p>	 <p>5. Reinstall separator.</p>	 <p>6. Reinstall dirt tank by aligning the bottom of the tank with the notch on the hand vacuum. Rotate the tank inward until it clicks into place.</p>

Cleaning and Replacing the Filters

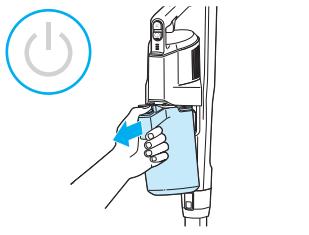
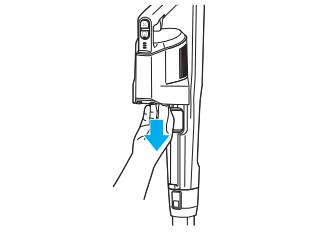
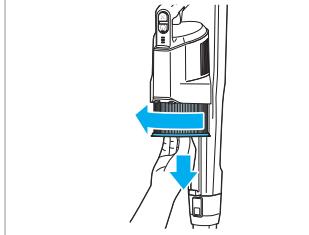
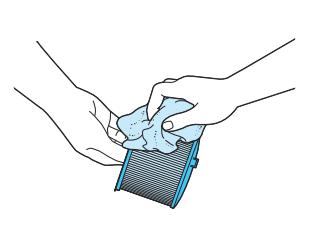
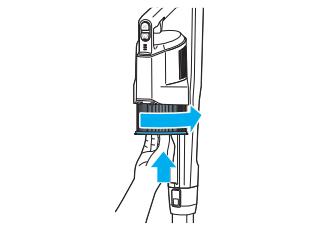
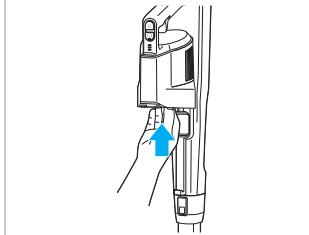
Pre-Motor Filter

		
1. Power OFF. Remove dirt tank.	2. Pull pre-motor filter down to remove.	3. Remove pre-motor filter from filter basket.
		
4. Rinse under warm water.	5. Let dry for 24 hours before reinstalling. Note: A wet or damp filter will affect suction performance.	6. Place filter back into basket with the foam filter on the bottom. Insert the filter basket into the hand vacuum, aligning the basket clip with the groove. Push the back upward until it clicks into place.

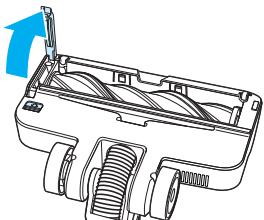
Cleaning and Replacing the Filters (continued)

Post-Motor Filter

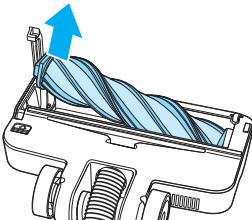
For optimal performance, replace the filter every 3 months.

 1. Power OFF. Remove dirt tank.	 2. Remove pre-motor filter basket.	 3. Post motor filter is located inside the hand vacuum. Twist the post-motor filter clockwise to unlock and remove.
 4. Wipe post-motor filter with a cloth to clean off any debris.	 5. Reinstall by twisting counterclockwise back into machine.	 6. Reinstall pre-motor filter.

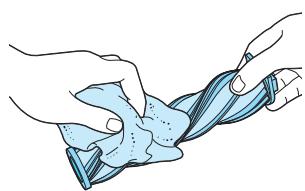
Maintaining the Brush Roll



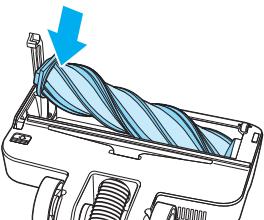
1. Power OFF. Remove foot from extension wand. Press brush roll release button.



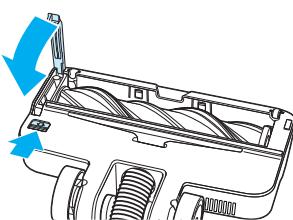
2. Remove brush roll and clear debris.



3. Wipe brush roll and chamber with a dry cloth.



4. Insert brush roll into foot, ensuring flat surface faces out.



5. Lower the brush roll latch until it clicks into place, securing the brush roll.

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.ca.

Problem	Possible Cause	Remedies
Machine won't turn ON	Battery power is low.	Fully charge battery.
Dust discharges from the exhaust	Filter is damaged.	Replace filter.
	Filter is incorrectly installed.	Remove and reinstall filter.
	Filter is dirty.	Clean or replace filter.
Loss of suction	Filter is clogged.	Clean or replace filter.
	Dirt tank is full.	Empty tank.
The middle LED of the power mode lights flashes three times, and the motor turns OFF	Complete air blockage.	Check for clogs in extension wand and filter.
Foot or upholstery tool lights blinking	Clogged brush roll.	Power OFF. Remove the foot/tool and check for debris or obstructions.
	Stalled brush roll.	Check cleaning surface. Use a lower mode setting to avoid small rugs/carpet from stalling brush roll.
Blinking error lights	Various reasons.	Turn machine OFF and allow to cool before turning back on. If this does not work, contact BISSELL Consumer Care.

**Every
Purchase
Saves
Pets™**

WE PROUDLY
SUPPORT
NOUS SOUTENONS
FIÈREMENT LA



BISSELL PET
FOUNDATION®

Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation.

When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **BISSELLsavespets.ca** to learn more.

Need more support?

Head to **support.BISSELL.ca** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2025 BISSELL Inc. All rights reserved.
Part Number 1647628 03/25

RENSIGNEMENTS INSCRIPITION PIÈCES VIDÉOS SOUTIEN



consulter votre garantie, et plus encore,
enregistrer votre produit, commander des pièces de rechange,
rendez-vous à support.BISSELL.ca pour accéder à des conseils de dépannage,

Besoin d'un soutien supplémentaire?

Visitez le site BISSELLsavescats.ca pour en savoir plus.

plissent rester à la maison et ne pas se retrouver dans des refuges.
les salissures les plus tenaces afin que les animaux de compagnie
à sauver des animaux. Nos produits sont conçus pour nettoyer
lorsque vous achetez un produit BISSELL, vous contribuez aussi
26 millions de dollars à la BISSELL Pet Foundation.

dans le besoin. Depuis 2011, BISSELL a fait don de plus de
Pet Foundation et sa mission de sauver les animaux de compagnie
Chaque achat permet à BISSELL de continuer à soutenir la BISSELL

WE PROUDLY SUPPORT OUR SOUTENONS LA PET FOUNDATION BISSELL PET FOUNDATION FONDATION POUR LES ANIMAUX DE COMPAGNIE



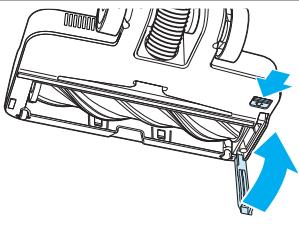
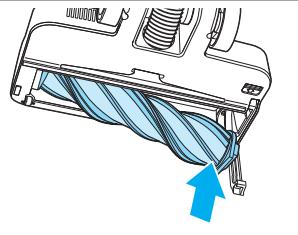
Problème	Cause(s) possibles	Solutions
L'appareil ne se met pas en marche	La puissance de la batterie est faible.	Chargez complètement la batterie.
Posséder des réflecteurs par lechappement	Le filtre est endommagé.	Changez le filtre.
Perde de puissance	Le filtre est sale.	Nettoyez le filtre ou remplacez-le au besoin.
La lumière à puissance	Verifiez que le tube rallonge et le filtre ne sont pas obstrués.	Verifiez que le tube rallonge et le filtre ne sont pas obstrués.
Les voyageants du pied ou de l'accessoire pour meubles	Éteignez l'appareil. Retirez le pied ou l'accessoire et vérifiez qu'il n'y a pas de débris ou d'obstructions.	Éteignez l'appareil. Retirez le pied ou l'accessoire et vérifiez qu'il n'y a pas de débris ou d'obstructions.
Voyageants d'errure qui cliquent	Éteignez l'appareil et le laissez refroidir avant de le remettre en marche. Si cela ne fonctionne pas, contactez le Service à la clientèle de BISSELL.	Divisez raisons.

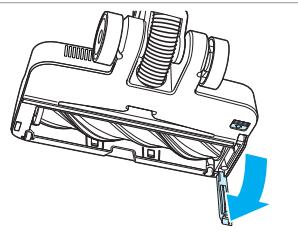
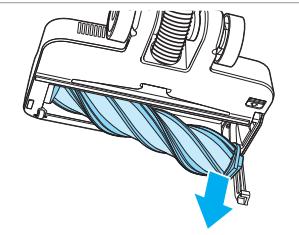
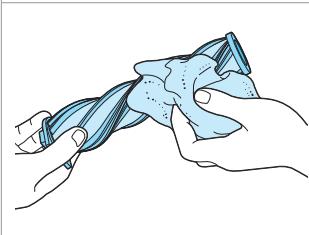
Si vous avez rencontré un problème que vous n'avez pas trouvé ci-dessous, visitez support.BISSELL.ca.
Pour résoudre certains problèmes qui pourraient survenir, Si vous ne voyez pas le problème que vous

Diagnostics de panne

Entretien du rouleau de brosse

Remarque : Toute opération d'entretien ou de réparation autre que celles qui sont indiquées dans ce manuel doit être effectuée par un représentant d'entretien autorisé.

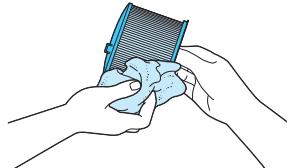
 
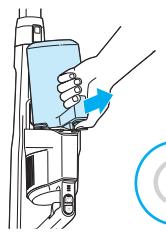
4. Insérez le rouleau de brosse orienté vers l'extérieur. 	5. Pour fixer le rouleau de brosse dans le pied, en veillant à ce qu'il s'enclenche. 
--	--

1. Éteignez l'appareil. Retirez le pied du tube-talonne. Appuyez sur le bouton de dégagement du rouleau de brosse. 	2. Retirez le rouleau de brosse et éliminez les débris. 	3. Nettoyez le rouleau de brosse avec un chiffon sec. 
---	---	--

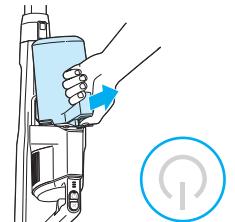
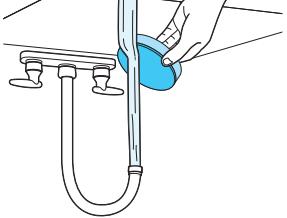
Pour une performance optimale, remplacez le filtre tous les trois mois.

Filtre Postmoteur

Nettoyage et remplacement des filtres (suite)

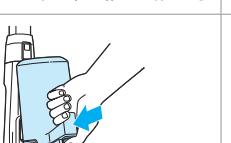
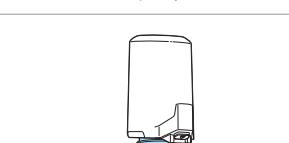
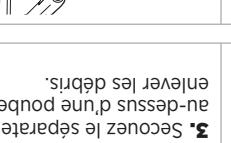
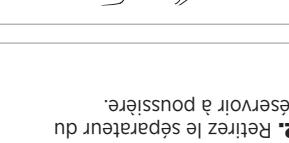
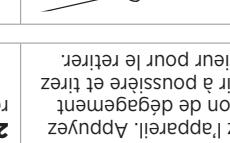
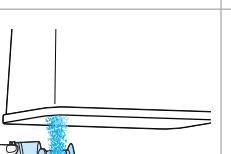
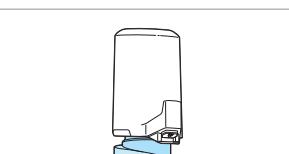
 <p>1. Éteignez l'appareil. Retirez le réservoir à poussière.</p>	 <p>2. Retirez le panier du filtre premoteur. Siège à l'intérieur de l'aspirateur à main. Tournez le filtre postmoteur dans le sens horaire pour le déverrouiller et le retirer.</p>	 <p>4. Essuyez le filtre postmoteur avec un chiffon pour éliminer les débris.</p>
 <p>3. Le filtre postmoteur est siège à l'intérieur de l'aspirateur à main. Tournez le filtre postmoteur dans le sens horaire pour le déverrouiller et le retirer.</p>	 <p>5. Remettez-le en place en le tournant dans le sens antihoraire dans l'appareil.</p>	 <p>6. Remettez-le en place en place.</p>

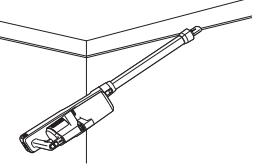
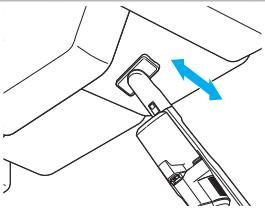
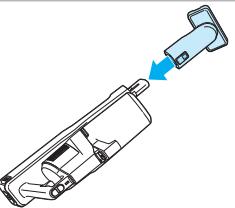


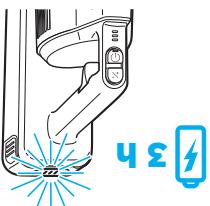
<p>1. Éteignez l'appareil. Retirez le réservoir à poussière.</p> 	<p>2. Tirez le filtre prémotorisé vers le bas pour le retirer.</p> 	<p>3. Retirez le filtre prémotorisé du réservoir à poussière.</p> 
<p>4. Rincez sous un jet d'eau tiède.</p> 	<p>5. Laissez-le sécher pendant 24 heures avant de le réinstaller.</p> <p>6. Remplacez le filtre dans le panier en s'assurant que le filtre en mousse est au fond.</p> 	<p>7. Remarque : Un filtre humide ou mouillé affectera la performance d'aspiration.</p> <p>8. Poussez-le vers le haut jusqu'à ce qu'il se loge en place en crochétant du panier sur la ramure. Aspirateur à main en alignant le bouton de déclenchement avec la fente de la ramure.</p> 

Nettoyage et remplacement des filtres

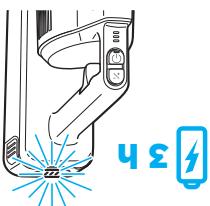
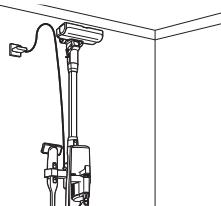
Vidange du réservoir à poussière

<p>4. Videz les débris dans la poubelle.</p> 	<p>5. Remettez le séparateur en place.</p> 	<p>6. Réinstallez le réservoir à eau et enfonnez l'écouche du réservoir en alignnant le fond de l'aspirateur à main. Faites tourner le réservoir jusqu'à ce qu'il s'enclenche.</p> 
<p>2. Retirez le séparateur du réservoir à poussière.</p> 	<p>3. Scoudez le séparateur au-dessus d'une poubelle pour enlever les débris.</p> 	<p>1. Éteignez l'appareil. Appuyez sur le bouton de dégagement vers l'arrière pour le retirer.</p> 
		

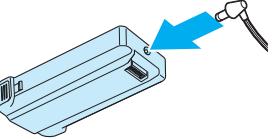
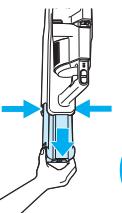
<p>2. Fixez l'accessoire de votre choix. Remarque : L'aspirateur à main est équipé d'un sucur plat intégré.</p> 	<p>1. Éteignez l'appareil. Utilisez votre pied pour appuyer sur le levier de dégagement du tube-rail longe. Tirez l'aspipatateur à main vers le haut pour le retirer.</p> 				
<p>Utilisation du tube-rail longe</p>					
<p>3. Utilisez l'accessoire pour nettoyer les meubles, les escaliers ou d'autres surfaces.</p> 	<p>2. Fixez l'accessoire de votre choix. Remarque : L'aspirateur à main est équipé d'un sucur plat intégré.</p> 				
<p>Utilisation de l'aspirateur à main</p>					
<p>Nettoyage de surfaces au-dessus des planchers</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td data-bbox="65 954 722 1071"> <p>Turbo : pour les gros dégâts domestiques courants. Pour maximiser l'efficacité de la batterie. AUTONOME jusqu'à 12 minutes.</p> </td> <td data-bbox="722 954 1033 1071"> <p>Moyen : équilibre optimal entre la puissance et l'autonomie. Pour la plupart des dégâts domestiques courants. AUTONOME jusqu'à 20 minutes.</p> </td> </tr> <tr> <td data-bbox="65 1071 722 1226"> <p>Eco : pour les petits dégâts légers. AUTONOME jusqu'à 40 minutes.</p> </td> <td data-bbox="722 1071 1033 1226"> <p>1. Appuyez sur le bouton d'allumage pour mettre l'appareil en marche. Cela-ci démarera en mode moyen.</p> </td> </tr> </table>	<p>Turbo : pour les gros dégâts domestiques courants. Pour maximiser l'efficacité de la batterie. AUTONOME jusqu'à 12 minutes.</p>	<p>Moyen : équilibre optimal entre la puissance et l'autonomie. Pour la plupart des dégâts domestiques courants. AUTONOME jusqu'à 20 minutes.</p>	<p>Eco : pour les petits dégâts légers. AUTONOME jusqu'à 40 minutes.</p>	<p>1. Appuyez sur le bouton d'allumage pour mettre l'appareil en marche. Cela-ci démarera en mode moyen.</p>	<p>Cet aspirateur peut être utilisé comme aspirateur vertical, aspirateur à main ou aspirateur à grande portée en renouissant l'aspirateur à main et le tube-rail longe. Pour de meilleurs résultats, utilisez le mode ECO pour le nettoyage des tapis.</p>  
<p>Turbo : pour les gros dégâts domestiques courants. Pour maximiser l'efficacité de la batterie. AUTONOME jusqu'à 12 minutes.</p>	<p>Moyen : équilibre optimal entre la puissance et l'autonomie. Pour la plupart des dégâts domestiques courants. AUTONOME jusqu'à 20 minutes.</p>				
<p>Eco : pour les petits dégâts légers. AUTONOME jusqu'à 40 minutes.</p>	<p>1. Appuyez sur le bouton d'allumage pour mettre l'appareil en marche. Cela-ci démarera en mode moyen.</p>				

<p>2. Le chargement de l'appareil prend jusqu'à 3 heures. Les témoins indiquent que la batterie s'est complètement chargée.</p> 	<p>1. Éteignez l'appareil. Branchez le chargeur à l'arrière de l'aspirateur à main. Les témoins indiquent qu'il faut de la batterie clignotent pendant la charge.</p> 
--	---

Chargement d'un appareil séparé du support de fixation murale

 
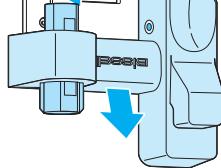
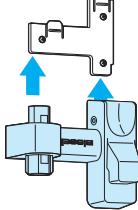
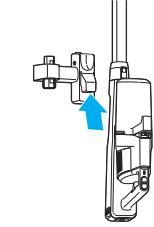
 
<p>2. Éteignez l'appareil. Placez l'aspirateur sur le support de fixation murale. L'appareil doit commencer à se charger automatiquement lorsqu'il est correctement mis en place. Les témoins indiquent que la batterie s'est complètement chargée.</p> 	
---	--

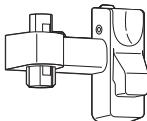
Chargement avec support de fixation murale (certains modèles)

<p>1. Éteignez l'appareil. Appuyez sur le bouton de dégagement et enfoncez, puis retirez la batterie de l'aspirateur.</p> 	<p>2. Branchez le chargeur dans une prise électrique murale.</p> 	<p>3. Branchez le chargeur à la batterie.</p> 
--	---	--

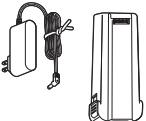
Chargement sans support de fixation murale

Chargement de la batterie

Assemblage du support mural de fixation (certains modèles)		
1. Connectez le tube-rallonge au pied motorisé jusqu'à ce qu'il s'enclenche.	2. Connectez l'aspirateur à main au tube-rallonge jusqu'à ce qu'il s'enclenche.	
3. Chargez l'aspirateur à main au tube-rallonge jusqu'à ce qu'il s'enclenche.	2. Connectez l'aspirateur à main au tube-rallonge jusqu'à ce qu'il s'enclenche.	
1. Tirez sur le support de fixation mural pour le retirer de la plaque.	2. Fixez la plaque sur un mur à l'aide des trois vis, en veillant à ce que le câble de chargement ne gêne pas le support mural à la prise de courant.	
3. Faites glisser le support sur la plaque jusqu'à ce qu'il s'enclenche.	Remarque : Utilisez les emplacements pour collisions séches directement dans un montant, fournis si vous ne prenez pas au risque de couper.	
1. Tirez sur le support de fixation mural pour le retirer de la plaque.	2. Fixez la plaque sur un mur à l'aide des trois vis, en veillant à ce que le câble de chargement ne gêne pas le support mural à la prise de courant.	
3. Placez l'aspirateur sur le support du support, puis connectez-le dans le mur.	6. Fixez les accessoires sur le support. Vous entendrez un déclic lorsqu'ils seront bien placés.	



Support de fixation murale (certains modèles)



Batterie et socle de chargement



SucEUR Plat



Accessoire pour meuble



Pied motorise



Tube-railogue



Aspirateur à main

Pour savoir ce qui est inclus dans votre achat, vérifiez la liste du « Contenu de la boîte » sur le rabat supérieur de la boîte.

LES ACCESSOIRES INCLUS DANS LA BOÎTE VONT DIFFÉRER SELON LE MODÈLE

Votre accord est soumis aux conditions générales de BISELL, qui comprennent la résolution des litiges par voie arbitrale et la renonciation aux recours collectifs. Pour connaître les conditions complètes ou pour vous appeler au 1-800-263-2535.

Conditions générales

Garniture intérieure de 5 ans. Visitez SUPPORTBRISELL.CA ou téléphonez au 1-800-263-2533 pour obtenir des renseignements complets sur la garantie.

Garantie

AVERTISSEMENT (e) Produit contenant des batteries rechargeables au lithium-ion.
NE JETEZ PAS les batteries au lithium-ion avec des ordures ménagères. Les batteries au lithium-ion doivent être
enlevées de toutes batteries contenant aussi des batteries au lithium-ion avec des batteries rechargeables au lithium-ion.
des batteries, communiquer avec CallZerrecycle au 877 777-2979 ou visitez le www.CallZerrecycle.org. Pour obtenir des
instructions complètes sur le recyclage des batteries au lithium-ion, visitez le site de leur fabricant BISSELL.

équipement en temps réel pour la surveillance et la sécurité dans les zones industrielles et commerciales. Il fonctionne avec une caméra de surveillance et une carte SIM pour envoyer des alertes en temps réel aux utilisateurs via leur smartphone ou ordinateur. L'application offre également une interface conviviale pour configurer les paramètres et gérer les notifications.

DECLARATION DE CONFORMITE DU FONCTIONNEUR (Article 4/ Directive 2014/53/UE) / COMPLAISANCE INFORMATION (Article 27(1)/ Directive 2014/53/UE) / ADAPTABLE A LA DIRECTIVE 2014/53/UE / MISE EN CONFORMITE / ADAPTABLE A LA DIRECTIVE 2014/53/UE

CONSERVER CES INSTRUCTIONS
CE MODÈLE D'APPAREIL EST DESTINÉ À UN USAGE DOMESTIQUE SEULEMENT. LA GARANTIE EST ANNULÉE
RENSEIGNEMENTS IMPORTANTS

CE MODÈLE D'APPAREIL EST DESTINÉ A UN USAGE DOMESTIQUE SEULEMENT. LA GARANTIE EST ANNULÉE SI L'APPAREIL EST UTILISÉ A DES FINS COMMERCIALES.

Lors de l'utilisation d'un appareil électrique, des précautions de base doivent être prises, y compris ce qui suit :

AVERTISSEMENT

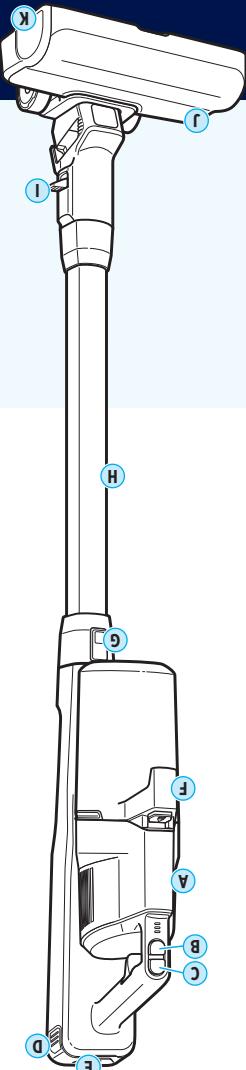
INSTRUCTIONS DE SÉCURITÉ IMPORTANTES



Configurez votre nouveau produit. Jetons-y un coup d'œil...
guide contient toutes les informations dont vous avez besoin pour plus encore. Vous pouvez commander tout de suite ! Le présent achat, y compris des vidéos, des conseils, de l'assistance et bien plus encore.

Visitez support.BISSELL.ca pour un tour d'horizon de votre nouvel

Découvrez votre nouveau produit BISSELL !



Présentation du produit

Instructions de sécurité importantes	2
Garantie	3
Assemblage	4
Chargement de la batterie	5
Utilisation de votre aspirateur	6
Nettoyage des surfaces au-dessus des planchers	6
Vidange du réservoir à poussière	7
Nettoyage et remplacement des filtres	8
Entretien du rouleau de brosse	10
Diagnostics de panne	11

SÉRIES 4172 ET 4173
ASPIRATEUR VERTICAL

POWERCLEAN® POWERLIFTER®

