


NOMA[®] MD

OSCILLATING PERSONAL HEATER AND ULTRASONIC HUMIDIFIER

model no. 043-8417-0

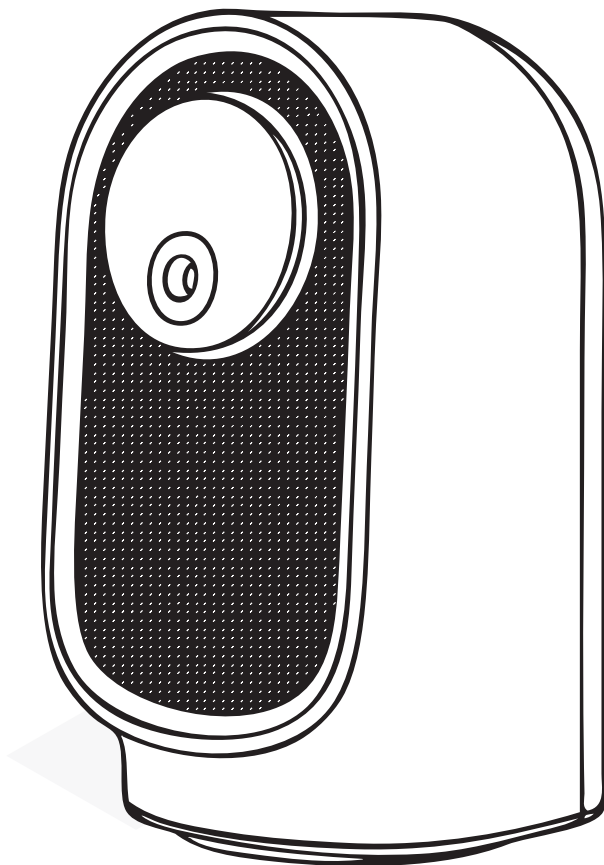

Toll free: 1-866-827-4985

IMPORTANT: Please read this manual carefully
before running this heater and save it for reference.

Instruction Manual

Table of Contents

Specifications	2
Safety Instructions	3
Operating Instructions	6
Protection Systems	7
Cleaning and Maintenance	8
Storage	8
Troubleshooting	9
Warranty	9

Specifications

Model	043-8417-0
Voltage	120 V AC
Frequency	60 Hz
Watt	800 Watts (High)
Coverage Area	up to 100 sq. ft. (9 m ²)
Dimension (L x W x H)	5 3/16 x 5 3/16 x 9 13/16" (13.2 x 13.2 x 24.9 cm)

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND PERSONAL INJURY, INCLUDING THE FOLLOWING:

When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time.

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving the unit. Keep flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3' (0.9 m) from the front and top of the heater and keep them away from the sides and rear of the heater. Keep the rear grille away from walls or drapes so as not to block the air intake.
3. Extreme caution and supervision are necessary when any heater is used near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not use any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and place it where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.

10. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if not adhered to!
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter ventilation or exhaust openings, as this may cause an electric shock, fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.
16. This heater must be plugged into a 120 V, 10 A (or more) circuit of its own. Nothing else can be plugged into the same circuit. If you are unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if not adhered to!
17. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
18. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
19. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping over.

20. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet /power strip).
21. Be sure that the plug is fully inserted into appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL your electrician.
22. Check that neither the appliance nor the power cable has been damaged in any way during transportation.
23. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
25. Only use tap water in the humidifier. Do not used untreated water from any other source.
26. Before inserting the water tank into the humidifier, ensure that the cover is tight and the outside of the tank is dry.




CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

PET OWNERS WARNING: The health of some small pets, including birds, is extremely sensitive to the fumes produced during the first-time use of many appliances. These fumes are not harmful to humans, but we recommended that you do not use your heater around birds and small pets during its initial use until the manufacturing corrosion (anti-corrosion) coatings burn off.

SAVE THESE INSTRUCTIONS

model no. 043-8417-0 | contact us 1-866-827-4985

Be sure to plug into a 120 V AC, 60 Hz outlet. Check that the plug and the socket fit well before operating the appliance.

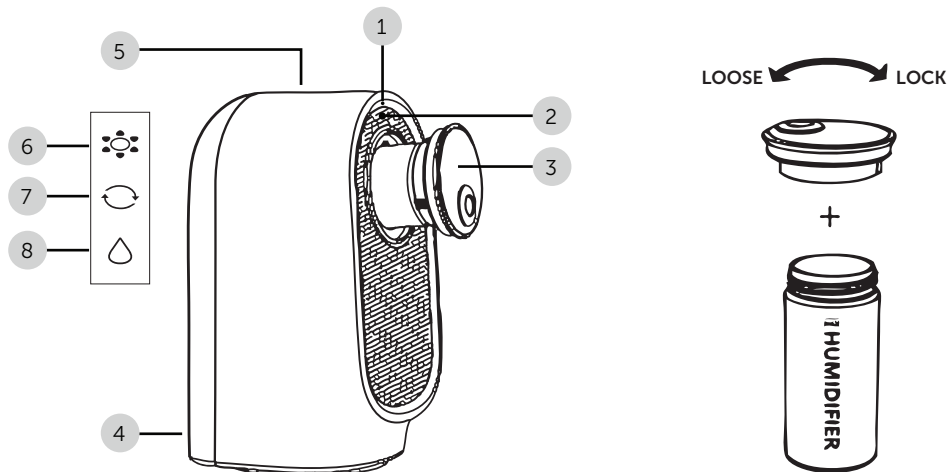

No. Description

1. Power Light
2. Heat Indicator
3. Water Tank
4. Power Switch

No. Description

5. Mode Buttons
6. HEAT Button
7. OSC Button
8. HUMIDIFIER Button

When the power switch is turned on, the heater beeps and the red power light turns on. Choose different operating modes by pressing the corresponding mode button:

1. The HEAT button (☼) turns on the heat function, and the orange Heat Indicator light will turn on. Press the HEAT button a second time to turn off the heat. The fan will continue to run for 30 seconds to vent the residual heat inside the heater.
2. The OSC button (↻) causes the heater to swing from side to side. Press the OSC button again to stop the oscillation.
3. The HUMIDIFIER button (💧) turns on the humidifier option, and water will spray from the water tank. Please ensure the water tank has been filled with tap water, the cover is tight, and no water remains on the outside of the water tank before inserting the tank into the heater. Do not fill the tank above the MAX line. Press the HUMIDIFIER button again to turn off the humidifier option.

Overheat Protection

This heater includes an overheat protection system that shuts the unit off when parts of the heater overheat. If this occurs, turn the heater off, unplug it, and inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait 10 to 20 minutes for the unit to cool down then plug it back in and resume normal operation.

Tip-over Switch

Your heater is equipped with a tip-over switch which is designed to automatically shut off unit when tipped forward or backwards. When returned to normal upright position, the heater will automatically come on again. This is a safety to avoid possibility of fire should the unit be accidentally tipped over.

Power Indicator Light

This heater is equipped with a power indicator light. The power light will illuminate when the heater is plugged in. This feature is to prevent you from being unaware the heater is in operation.

Automatic Shut-off Timer

This heater is equipped with an automatic shut-off timer. This timer will shut off the heat function 8 hours after it has been turned on and turn off the humidifier function 5 ½ hours after it has been turned on.



1. Before any cleaning:
 - a. Make sure the heater is turned OFF.
 - b. Disconnect power supply at source by removing plug from power outlet.
2. Regular cleaning:
 - a. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
 - b. Do not use cleaning spray-on liquids or other chemicals on the unit.
 - c. To clean enclosure, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the heating element or the switches. Allow the unit to dry completely before further use.



CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.

1. Perform the cleaning procedures described in "CLEANING AND MAINTENANCE" section.
2. Wipe all parts to dry.
3. Pack the heater in a plastic bag, and store it in a cool, dry place.

If your heater fails to operate, please follow these procedures prior to contacting Customer Service.

Problem	Probable Cause	Solution
Heater will not power on and shuts off unexpectedly.	Heater is not plugged into a 120 V polarized outlet/receptacle.	Ensure unit is in OFF position. Plug in unit and attempt to turn on again.
	The heater's overheat protection has been activated.	Turn off the heater, unplug it, and wait at least 10 to 20 minutes for the unit to cool down. Plug the heater back in and turn it on again.
Humidifier does not spray water.	Water tank is empty.	Fill the water tank with water.
	The water tank is improperly installed.	Take out the water tank and put it back again.
	The spray nozzle is clogged.	Use a tissue to unclog the spray nozzle.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

This NOMA product carries a one (1) year repair warranty against defects in workmanship and materials. At its discretion, NOMA Canada agrees to have any defective part(s) repaired or replaced free of charge within the stated warranty period, when returned with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.



Made in China
Imported by NOMA Canada, Toronto, Canada M4S 2B8