


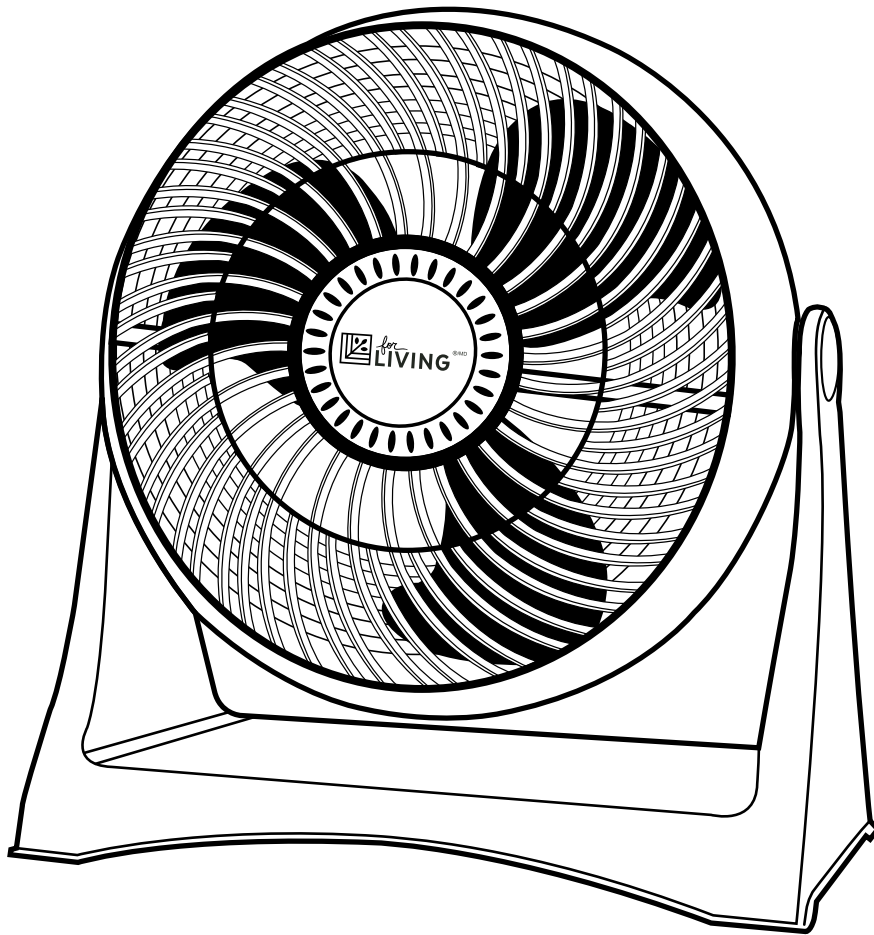

8" (20.3 cm) Turbo Fan

Product No. 043-8604-4



Installation and User Manual

IMPORTANT: Please read this manual carefully before beginning assembly of this product.

Before beginning assembly of product, make sure all parts are present.

Questions? If you have any questions or need replacement parts, please call our toll-free helpline at **1-877-483-6759**.

Keep this manual for future reference.

Table of Contents

Technical Data	2
Important Safety Instructions	3
Important Information	6
Operation	7
Care and Maintenance	8
Warranty	9

Operating voltage	120 V
Operating frequency	60 Hz
Power	35 W
Maximum current	0.5 A

Intended Use

- This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.
- While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: WARNING indicates a hazard which, if not avoided, could result in injury or death.



Warning! As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven surface, or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- There is an option for wall-mounting.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments not recommended or sold by the manufacturer may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause an electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 W.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

**Warning!** Shock Hazard

- Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

**Warning!** Hot Surfaces

- Do not touch fan motor when in use. This motor is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

**Warning!** Fire Hazard

- Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

**Warning!** Electric Shock Hazard

- Do not use with damaged cord or plug. Use with an adequate electrical system that is up to code.

**Warning!** To Prevent Electric Shock

- The product has a polarized two-prong plug (one blade is wider than the other) that must be fully inserted in to a matching, properly grounded outlet. This plug is designed to fit a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**Warning!** To Reduce the Risk of Fire or Electric Shock

- Do not use this product with any solid state speed control device.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact For LIVING® Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 W. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

1. Features**1.1. ON/OFF Switch with Speed Settings****1.2. Adjustable Tilt****1.3. Quiet Vibration-free Performance****1.4. Wall Mountable****1.5. Safety Grille****1.6. 120 V A.C. / 60 Hz**

Fan Operation

- Always operate the fan in an upright position following all instructions and recommendations listed in this manual.

Fan Location

- Place the fan in the area of the room that will provide proper fan cooling.

Fan Connection

- Plug fan directly into 120 V A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.

NOTE:

To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.



Turning Fan On/Off

- To start the fan, rotate Control Dial from OFF position to desired fan speed (LOW, MEDIUM or HIGH). Rotate dial to OFF to discontinue use. Unplug fan when not in use.

Wall Mounting:

- This fan comes with an optional wall mounting bracket.

- Use the wall mounting bracket as a template to mark your mounting location before you attach the bracket to the fan. NOTE: Fan should be level when mounted and at least one of the two mounting screw locations should be a wall stud.
- Place wall mounting bracket on the bottom of the fan and attach it to the fan using the three enclosed screws as shown in Fig. 1.
- Place appropriate fastener into wall. Fasteners can be purchased at your local hardware store or home centre. The fastener head must fit properly into mounting holes located on wall mounting bracket. Please leave about 3/8" (10 mm) of space between the fastener head and the wall surface for the fastener to properly slot into the wall mounting bracket holes.
- Mount fan with attached wall mounting bracket to fasteners on the wall. Check to be sure that the fan is secure on the wall as shown in Fig. 2.

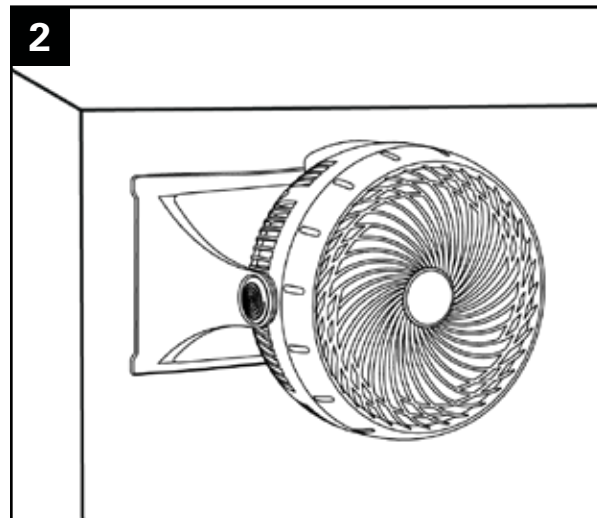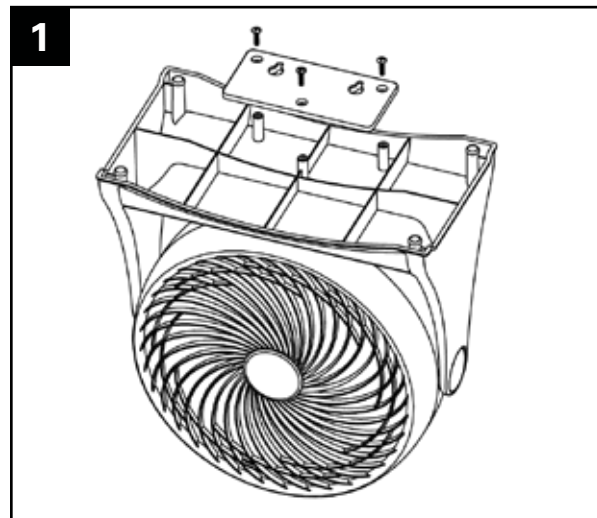

**Warning!**

- Before cleaning the fan be sure to disconnect power cord from the plug.

Cleaning

Clean the grille surface with a clean, damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Replace front grille before fan use. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust buildup. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance

The internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair

DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage

Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

This product is guaranteed for 12 months from the date of original retail purchase against defects in materials and workmanship.

Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at our option. We will bear the cost of any repair or replacement and any costs of labour relating thereto.

This warranty is subject to the following conditions and limitations:

- a bill of sale verifying the purchase and purchase date must be provided;
- this warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect, or lack of proper installation, operation, or maintenance (as outlined in the applicable owner's manual or operating instructions) or which is being used for industrial, professional, commercial, or rental purposes;
- this warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product which are expected to become inoperative or unusable after a reasonable period of use, including but not limited to finish, glass coverings, and remote controls;
- this warranty will not apply to routine maintenance;
- this warranty will not apply where damage is caused by repairs made or attempted by others (i.e., persons not authorized by the manufacturer);
- this warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing);
- this warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alternations have been made or attempted by unauthorized persons;
- this warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to scratches, dents, paint chips, or to any corrosion or discolouring by heat, abrasive and chemical cleaners; and
- this warranty will not apply to any component part sold by and identified as the product of another company, which shall be covered under the product manufacturer's warranty, if applicable.

Additional Limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any expense, loss, or damage, including, without limitation, any indirect, incidental, consequential, or exemplary damages arising in connection with the sale, use, or inability to use this product.

Notice to Consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

Imported by

Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

For any help, please contact the customer service at:

1-877-483-6759

(Monday-Friday 8:00-7:00pm EST, Saturday 9:00-7:00pm EST)