

AEROSLIM™ HAND VACUUM 2986 Series


What's in the Box?	4
Charging the Battery	4
Using Your Hand Vacuum	5
Using the Accessory Tools	5
Emptying the Dirt Tank	6
Warranty	6

Product Overview

- 1. Power Button
- 2. Power Lights
- 3. Vacuum Body
- 4. Dirt Bin



This guide features everything you need to get ready for first use, including setting up, using and maintaining your machine, but join us online for a comprehensive walkthrough. For additional support, go to [BISELL.ca/support](#).

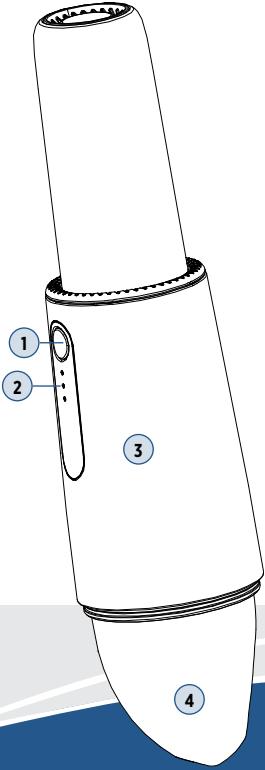

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR HAND VAC. When using an electrical appliance, basic precautions should be observed, including the following:

 **WARNING** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use outdoors or on wet surfaces.
 - Do not allow to be used as a toy. Close attention is necessary when used by or near children.
 - Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
 - Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
 - Do not put any object into opening.
 - Do not use with any opening blocked.
 - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - Do not handle charger, including charger plug and charger terminal, with wet hands.
 - Do not charge the machine outdoors.
 - Use only the charger supplied by the manufacturer to recharge.
 - Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
 - Keep openings free of dust, lint, hair and anything that may reduce airflow.
 - Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
 - Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
 - Use extra care when cleaning stairs.
 - Do not use without Dirt Bin or filters in place.
 - Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
 - Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
 - Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
 - Use only on dry, indoor surfaces.
 - Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
 - Prevent unintentional starting. Ensure the power is OFF before picking up or carrying the appliance. Carrying the appliance with your finger on the power button or energizing appliance that have the power on invites accidents.
 - Keep the temperature range between 40–104°F when charging battery, storing machine or during use.
 - Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
 - Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
 - Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.


INSTITUTIONS DE SÉCURITÉ IMPORTANTES

LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR A MAIN. Lors de l'utilisation d'un appareil électrique, des précautions de base doivent être prises, y compris ce qui suit :




What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

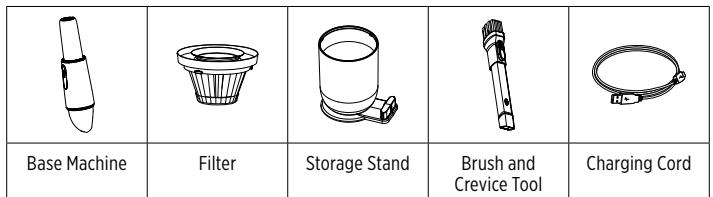


Charging the Battery

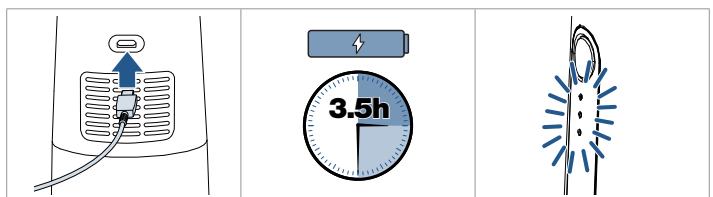

IMPORTANT: Always turn machine OFF before charging. Failing to do so may result in battery not fully charging.

IMPORTANT: Toujours éteindre l'appareil avant de le charger. Omettre de le faire peut entraîner un chargement incomplet de la batterie.

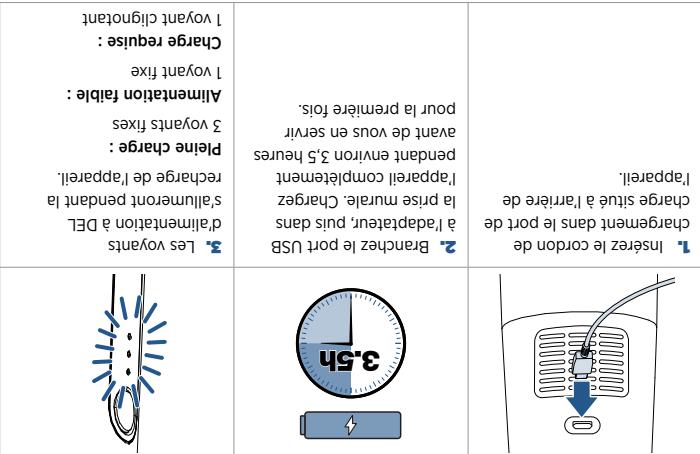

Chargement de la pile




Quel contient la boîte?

Les accessoires standards varient d'un modèle à l'autre. Afin d'identifier ce que devrait contenir votre boîte, veillez consulter la liste du « Contenu de la boîte » qui se trouve sur le rabat supérieur de la boîte.

AVERTISSEMENT

Ne branchez pas votre aspirateur AVANT de vous être familiarisé avec toutes les instructions et toutes les procédures d'utilisation.

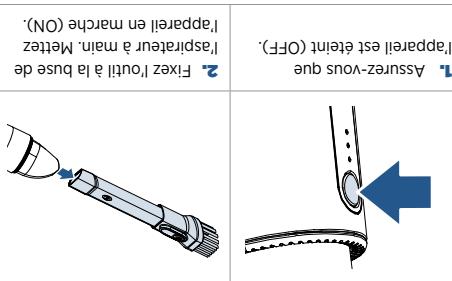


Utilisation des accessoires




Utilisation de votre aspirateur à main

Using Your Hand Vacuum

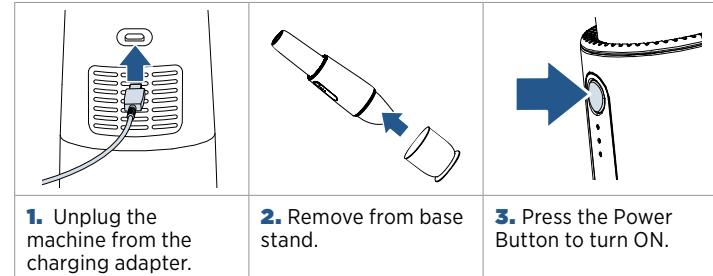



Using the Accessory Tools

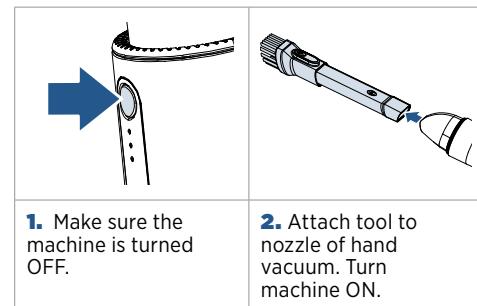

WARNING Do not plug in your vacuum until you are familiar with all instructions and operating procedures.

Emptying the Dirt Tank



Find replacement filters at BISELL.ca.

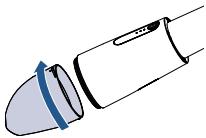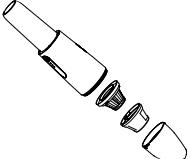		
1. Twist Dirt Bin to remove from base.	2. Remove Filter by pulling up from Dirt Bin. Empty dirt into waste container.	3. Separate Filters by turning clockwise and pulling up. Tap filters on side of waste container to clean out dust.
		4. When finished emptying the dirt, reassemble machine as shown above. 5. After heavy use, clean the filter and filter cup by washing gently by hand in warm water and mild dish detergent. Rinse thoroughly and make certain it is completely dry before reinserting it.

Warranty

1-Year limited warranty. Visit BISELL.ca/support or call 1-800-263-2535 for complete warranty information.

1 800 263-2535 pour obtenir des renseignements complets au sujet de la garantie.
Garantie limitée de 1 an. Visitez le BISELL.ca/support ou téléphonez au

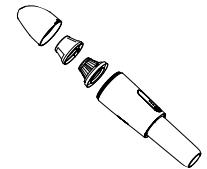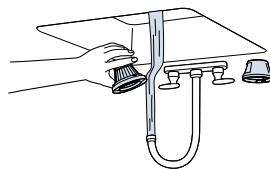		
1. Tournez le contenant à poussière pour le rétrécir de la base.	2. Retirez le filtre du contenant à poussière en le tirant vers le haut. Videz le tout dans un seau.	3. Séparez les filtres en les tournant dans le sens horaire et en les tirant vers le haut. Tenez les filtres sur les côtés de la poche.
4. Lorsque vous avez terminé d'enlever la saleté, remontez l'appareil comme indiqué ci-dessus.	5. Après une utilisation prolongée, nettoyez le filtre et le goutte à goutte à la main à l'eau chaude en utilisant un détergent à vaisselle doux. Rincez le filtre complètement sec avant de le réinsérer.	6. Garantie limitée de 1 an. Visitez le BISELL.ca/support ou téléphonez au 1 800 263-2535 pour obtenir des renseignements complets au sujet de la garantie.

Notes

Remarques



We're Waggin' Our Tails!

BISSELL® proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL product, you help save pets, too. We're proud to design products that help make pet messes, odours and pet homelessness disappear.

Visit BISSELLsavespets.ca to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more. [Go to BISSELL.ca/support](https://BISSELL.ca/support).



REGISTER



INFO



VIDEOS



PARTS



SUPPORT

INSCRIPITION INFO VIDÉOS PIÈCES SOUTIEN



Visitez-nous en ligne pour consulter le guide complet de votre nouveau produit, les pièces et plus. [Allez au BISSELL.ca/support.](https://BISSELL.ca/support)
Produit qui comprend les diagnostics de panne. L'enregistrement du produit qui aide à faire

Attendez, ce n'est pas tout!

Visitez le BISSELLsavespets.ca pour en savoir plus.

d'animaux sans foyer

dispenser les salées et les œufs laissés par les animaux et ainsi à réduire le nombre à sauver des animaux. Nous sommes fiers de concevoir des produits qui aident à faire animaux sans foyer. Lorsque vous achetez un produit BISSELL, vous contribuez aussi BISSELL® appuie fièrement la BISSELL Pet Foundation® et sa mission de sauver des

Nous fretilions de joie!

