Have a Ouestion? Please do not return this product to the retailer

Call Us First! Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer ser-

vice number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

 
Instruction Booklet For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.



MODEL HCT94C


SPECIAL OIL

To maintain the blades of your Conair® clipper in peak condition, oil them before and after formulated specifically for the Conair® highother product: there is no substitute for Conair oil. Keep oil away from children.



clipper was designed for household use.)

 screw counterclockwise until arm strikes the coil, making a clacking noise, (FIG. 1)



stops, and then turn about 45 degrees more. This is the maximum power setting. (FIG. 2)

IMPORTANT SAFETY INSTRUCTIONS 2. This appliance is not intended for use

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS **BEFORE USING** FOR HOUSEHOLD **USE ONLY** KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Unplug this appliance before cleaning.

- 2. Do not place or store appliance where it can fall or be pulled into a tub or sink. 3. Do not use while bathing or in the shower.
- 4. Do not place in, or drop into water or other
- 5. Do not reach for an appliance that has fallen into water. Unplug immediately.
- 6. Always unplug this appliance from electrical outlet immediately after using.
- WARNING To reduce risk of burns, electrocution, fire, or injury to persons:

When not in use, your clipper should be

disconnected, allowed to cool and stored in a

safe, dry location, out of reach of children.

Any other servicing should be performed by

appliance has no serviceable parts. This product

an authorized service representative. This

is for household use.

SAVE THESE

BEARD TRIMMER

the trimmer.

bend the clips

INSTRUCTIONS

OPERATING INSTRUCTIONS

1. Remove the battery compartment cover by

2. Align two AAA batteries (not included), with

the positive and negative positions indicated

inside the battery compartment. Insert the

negative end of each battery first so it will

slip easily into position, being careful not to

3. Return the battery cover to its original

position by pushing it in and up until you

hear a small click as it locks into place.

pushing in and down toward the bottom of

manufacturer. Do not use an extension cord to operate this appliance. 4. Never operate appliance if it has a

the appliance

by persons(including children) with reduced

of experience and knowledge, unless they

3. Use this appliance only for its intended

purpose as described in this manual. Do not

use attachments not recommended by the

have been given supervision or instruction

physical sensory or mental capabilities or lack

concerning the use of the appliance by a person

responsible for their safety. Children should be

supervised to ensure that they do not play with

- damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return appliance to an authorized service center for examination and repair.
- 5. Keep cord away from heated surfaces. 6. Never drop or insert any object into any
- opening on this appliance. 7. Do not place appliance on any surface while it is operating.
- 8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See "Care
- of Your Clippers.") 9. Do not operate outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Never operate the appliance with the air

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.

> lint, hair, and the like. 11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF: remove plug from outlet.

openings blocked or while on a soft surface,

such as a bed or couch, where the air openings

may be blocked. Keep the air openings free of

- 12. Avoid skin contact with moving blades.
- 13. Check for tangles or kinks in the cord. If the cord does become tangled during use, turn unit off and straighten cord before operating.
- 14. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS **OPERATING** INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current120V/60Hz only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.

Your new ConairMan® Haircut Kit has everything you need to achieve professional haircuts at home. It features a powerful magnetic motor with stainless steel blades for long-lasting cutting precision, 6 attachment combs for different hair lengths, a barber comb with straight teeth, styling comb, scissors and 2

styling clips. It also includes lubricating oil. a cleaning brush and a blade guard for easy maintenance and protection of the clipper

Never use cord to pull clipper. Never twist or otherwise obstruct cord. To store, coil cord loosely and secure with a twist tie.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

- 1. Inspect your clipper. Make sure it's free of hair and dirt, is properly oiled, and running smoothly.
- 2. Place a cape around the neck of the person getting a haircut.
- 3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control
- 4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment comb and put the taper control in the highest setting. If you want a shorter cut, vou can then use shorter combs.

- Short attachment comb (number 1) cuts hair to 1/8".
- Medium-Short attachment comb (number 2) cuts hair to 1/4"
- Medium-Long attachment comb (number 3) cuts hair to 3/8" Long attachment comb (number 4) cuts hair
- to 1/2". Attach combs by



blade. To remove comb attachments, place index finger and thumb as illustrated: then pull out and up.

holding them teeth

them onto the

up, then snapping

bottom of the clipper

NOTE: Never push or shove the


clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed



in its natural direction 2. Using the longest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, vet flat against the head. Gradually lift the clipper upward and outward through the hair,

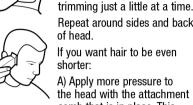

comb that is in place. This takes a little practice, of course. B) Just switch to a shorter

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb, or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands and to get rid of trimmed hair.

attachment comb.

OUTLINING

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see below). making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over. around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see below) and, holding it against the skin at the length desired, move the clipper downward



For best results, do as the professionals do:

Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

Barber scissor

SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the

crown, using the longest comb setting. Hold

the comb attachment flat against the head and

slowly move the clipper up through the hair. Use

the same technique for the sides, cutting from

For the front to the crown, cut the hair against

with the sides

(see "Outlining").

the direction in which it grows, then even it up

For a flattop, use the flat, barber comb, not the

attachment comb. Just cut hair on top of the

attachment comb #1. Comb hair and check for

uneven spots. Outline sideburns and neck areas

head over flat, barber comb (see above).

To taper hair down to the neckline, use

the bottom to the upper side of the head.

MAINTENANCE CARE OF YOUR CLIPPERS


USER

MAINTENANCE OF THE BLADE

Always apply oil to the blades before and after use. This will ensure maximum cutting performance. Hold clipper away from your body in a downward position and apply oil on the front and sides of the cutter blade. Wipe excess oil off with a soft, dry cloth. IF YOU DETERMINE THAT BLADE

ALIGNMENT IS INCORRECT:

ConairMan® hair clippers are carefully inspected to ensure that the blades are in perfect alignment. You will need to realign the blades after removing them for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if the blades need realigning? Simply match them up, point for point, to conform with the drawing below.

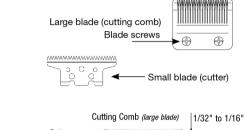

removal for cleaning, replacement or because they are out of alignment, slide the cutter back onto the black plastic oscillating head. Next, you must make sure that the cutter (small blade) and the cutting comb (large blade) are properly aligned. Line up the new or existing cutting comb with the two screw holes. Place the original screws, one in each hole, and lightly tighten with a Phillips-head screwdriver.

To replace cutting comb and cutter after

Then, match the two blades up, point to point, conforming with the illustration (Fig. 1). *The top edge of the cutting comb should be

1/32" to 1/16" (.79mm to 1.59mm) higher than the top edge of the cutter. This is important so that the clipper does not cut too close, or come in contact with the skin *The extreme left-hand tooth of the cutting

comb must cover or be to the extreme left of the first small tooth of the cutter. *Be sure that the extreme right-hand big tooth

of the cutter touches the extreme right tooth of the cutting comb.

Any other servicing should be performed by an authorized service representative. The appliance has no user-serviceable parts. The product is for household use. Do not pull, twist, or wrap line cord around appliance.

appliance free of charge for 24 months from the date of purchase if the appliance is To obtain service under this warranty, return the the absence of a purchase receipt, the warranty

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSE-

period shall be 24 months from the date of manufacture.

 
THIS WARRANTY

and you may also have other rights which vary from province to province.

100 Conair Parkway Woodbridge Ontario, L4H 0L2 ©2021 CONAIR CONSUMER PRODUCTS ULC

1-855-926-6247 Visit our Web site: www.conaircanada.ca Consumer Call Centre E-mail


every use. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was speed clipper. Because it is the right oil to use, it will not slow down the blades. Never use any



POWER SCREW

The power screw permits you to adjust the power of your clipper. You may need to adjust it if the power in your house is low. (The Conair®

 L. With screwdriver or dime, turn the power



2. Then turn the screw clockwise, until the noise

OIL BLADES BEFORE USE grade of battery most suitable for the

- intended use. 5. Replace all batteries at the same time.
- 6. Clean the battery contacts and also those of the device prior to battery installation.
- 7. Ensure the batteries are installed correctly with regard to polarity (+ and -). 8. Remove batteries from equipment that is
- not to be used for an extended period of time. Remove used batteries promptly.
- 10. Do not mix old and new batteries.
- 11. Do not mix alkaline, standard (carbonzinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.

USER **MAINTENANCE INSTRUCTIONS**

TAKING CARE OF YOUR TRIMMER **OILING THE BLADES (OIL INCLUDED)**

- Oil the trimmer once a month. 2. Turn the trimmer on.
- 3. Hold and point the blades downward. 4. Spread one drop of oil across the blades.
- 5. Turn the trimmer off and wipe away any excess oil. NOTE:
- 1. Do not over-oil the blades, as this can
- damage the motor. 2. Do not oil the motor bearing, as it is

- 4. Always purchase the correct size and permanently lubricated. 3. KEEP OIL AWAY FROM CHILDREN
 - 1. Brush away any loose hair that collects in the

BLADE CARE

- 2. Store the trimmer in a safe location. 3. Sharpen or replace both blades at the same
- time when servicing your trimmer. 4. Only use Conair® blades with this trimmer (see Parts and Accessories form).

REMOVING BLADE SET

5. Use trimmer for facial hair only.

This trimmer comes with a detachable blade set, which makes maintenance and replacement easy.

. Make sure the trimmer is in the OFF position.

To remove the blade set:

 With the power switch facing you, press the blade on the teeth and push in the direction away from you until they pop out of the housing.

TO REPLACE THE BLADE SET

opposite the blades.


• Looking at the trimmer from above, you will see a notch at the back of the trimmer. • There is a tab on the blade set on the bottom.

Position that tab so that it fits into the notch inside the trimmer head.

Push the blade set down onto the trimmer head until it snaps into place.

OUTLINING YOUR BEARD

1. Start with a clean, slightly damp beard (NOT WET).

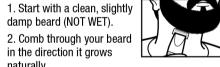

naturally. Begin under your jawline.

TRIMMING YOUR BEARD

4. Trim from your chin upward toward your ears. 5. Finish upper outline across cheeks.

1. On the longest setting, begin trimming your beard using smooth, even strokes. Start with vour sideburns and work

downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short)

 
2. If you decide you want a closer trim, adjust the 5-position comb attachment to a shorter setting and go over your beard until you achieve the desired length.

BLENDING THE JAWLINE Attach a jawline comb to the trimmer, hold

the trimmer in an upright position and begin trimming under your jawline, using short, even

TRIMMING YOUR MUSTACHE 1. Start with a clean.

slightly damp mustache (NOT WET).



3. Trim your mustache from the top down: finish by outlining the bottom of vour mustache.

4. Start with the 5-position attachment comb on the longest setting, as you can always go back and shorten the length as desired.

5. Use the detailing blade for final touches and

facial sculpting. NOSE & EAR TRIMMER

1. Make sure the trimmer is in the OFF position.

2. To attach the nose and ear trimmer: Hold the back of the trimmer facing you, insert the bottom pin of the trimmer attachment into the open space located inside the trimmer handle. Press and snap attachment into place. 3. Use trimmer in a circular motion.

4. To detach the nose and ear trimmer: Hold the Blade guard trimmer facing you, press your thumb on the Clipper top, front part of the trimmer head, and snap it

Trimmer 4. Nose/Ear trimmer

7. Barber comb

- 9. Cleaning brush
- 5. 3 jawline attachments
- 6. Styling Comb
- 8. Lubricating oil
- 10. 5-position attachment comb
- 11. 6 Comb guide attachments

MODEL HCT94C

3-IN-1 COMBO

 
HOME HAIR CUTTING KIT

THE POWER IS OFF WHEN THE SWITCH YOU'RE WRONG.

WARNING:

IF YOU THINK

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

Conair will repair or replace, at our option, your

OUENTIAL DAMAGES FOR BREACH OF THIS IMPLIED. WHATSOEVER.

> SERVICE CENTRE: CONAIR CONSUMER PRODUCTS ULC

Consumer Canada@Conair.com

13. 2 Styling clips 14. Camo print soft case ALWAYS UNPLUG SMALL APPLIANCES

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

> defective in workmanship or materials. defective product to the service centre listed below, together with your purchase receipt. In

ANY IMPLIED WARRANTIES. OBLIGATIONS. OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN **DURATION TO THE 24 MONTH DURATION OF**

OR ANY OTHER WARRANTY, EXPRESS OR This warranty gives you specific legal rights,

For more information on any Conair product call:

21CN077613 IB-17183