

 
Westclox® INSTRUCTIONS & WARRANTY

Model# 70028 / 70028CN

Printed in China

GETTING STARTED

Plug the power cord into a standard outlet; the digital display will flash.

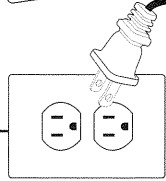

ADJUSTING DISPLAY BRIGHTNESS

Slide the switch left (HI) for a brighter display.

Slide the switch right (LO) for a normal display brightness.

TIME SET

While pressing and holding the TIME SET button, the HOUR & MINUTE buttons are needed to change the time.

Note: When setting the time, make sure you are in the correct AM or PM period as indicated by PM indicator on the display.

ALARM SET

While pressing and holding the ALARM set button, press the HOUR & MINUTES button as needed to change the Alarm time.

Note: When setting the alarm, make sure you are in the correct AM or PM period as indicated by PM indicator on the display.

 
ALARM ON / OFF (ALARM VOLUME CONTROL)

To turn the alarm on, slide the alarm switch to either the HI or LO position as indicated above the switch. On the front of the clock, the **ALARM ON** indicator dot will be lit.

Note: When turning alarm on, choose between HI and LO for volume.

SNOOZE

Press down on the SNOOZE bar when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 9 minutes.

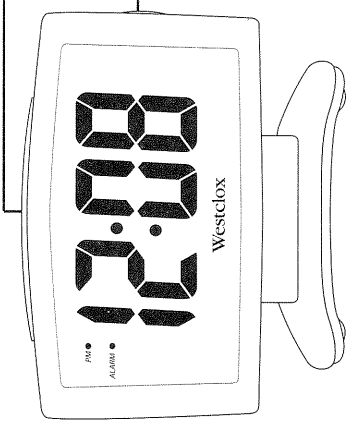


OPTIONAL: INSTALLING or REPLACING THE BACKUP BATTERIES

#1 Remove battery cover, located on the back of the clock.
 
#2 Insert 1 fresh alkaline "9 Volt" battery. Make sure the battery snaps in firmly.

#3 Replace battery cover.

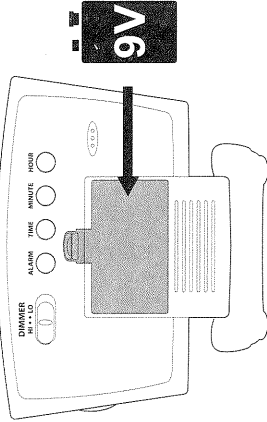

NOTE: The battery backup feature is not necessary to operate your digital alarm clock. It is optional to have the battery backup in case of a power outage.

IMPORTANT: Extended storage can cause batteries to leak and damage the unit. Leaky batteries should be discarded immediately. Skin burns or other personal injury can result. Always dispose of batteries according to federal, state and local regulations.

IMPORTANT:
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove battery from equipment which is not to be used for an extended period of time.
- Remove used battery promptly.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

ⓘ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING : Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to the following address:

Attn: Repair center
NYL Holdings LLC
99 West Hawthorne Ave. (Suite 202)
Valley Stream, NY 11580
(516) 256-3240

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$8.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind, from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.