

GETTING STARTED

Plug the power cord into a standard outlet. The digital display will flash.

PM INDICATOR

TIME SET

While pressing and holding TIME set button, press the HOUR & MINUTE button as needed to change the time.

Note: When setting the time, make sure you are in the correct AM or PM period as indicated by PM indicator on the front of the display.

ALARM SET

While pressing and holding ALARM set button, press the HOUR & MINUTE button as needed to change the Alarm time.

Note: When setting the alarm, make sure you are in the correct AM or PM period as indicated by PM indicator on the display.

Note: Any time you wish to check the alarm time, press the ALARM set button.

BATTERY BACKUP (OPTIONAL)

Remove the battery cover.

Insert 2 fresh AAA batteries.
Make sure to follow the +/- symbols.

Replace the battery cover.



Note: The battery backup feature is not necessary to operate your digital alarm clock. It is optional to have the battery backup in case of a power outage. In the event of a power failure, the battery backup will automatically continue to operate the clock and maintain time and alarm time. However to prolong battery life the time will not be displayed. When the electrical power is restored the time will be displayed. When the clock runs on the battery backup the clock may lose or gain a few minutes per hour. This may require resetting the time for precise timekeeping.

IMPORTANT: Extended storage can cause batteries to leak and damage the unit. Leaky batteries should be discarded immediately. Skin burns or other personal injury can result. Always dispose of batteries according to federal, state and local regulations.

IMPORTANT:

- Do not mix old and new batteries
- Clean the battery contacts and also those of the device prior to battery installation.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, nimh, etc) batteries.
- Remove the battery from the equipment which is not to be used for an extended period of time.
- Remove used battery promptly

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. SHALL BE MARKED CLOSE TO THE BATTERY COMPARTMENT OR A STATEMENT IN THE USER MANUAL.

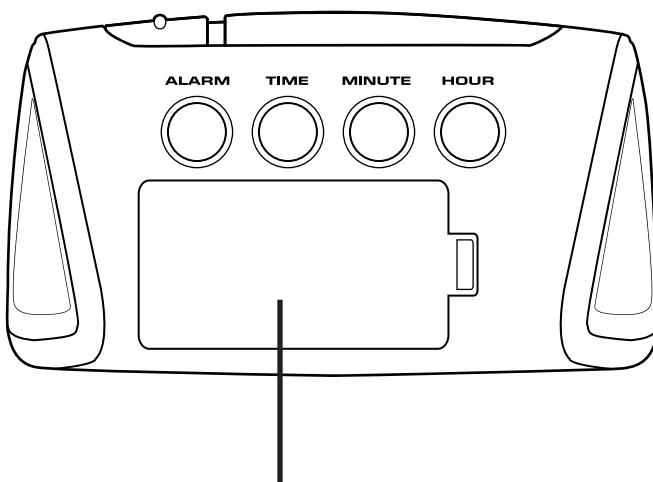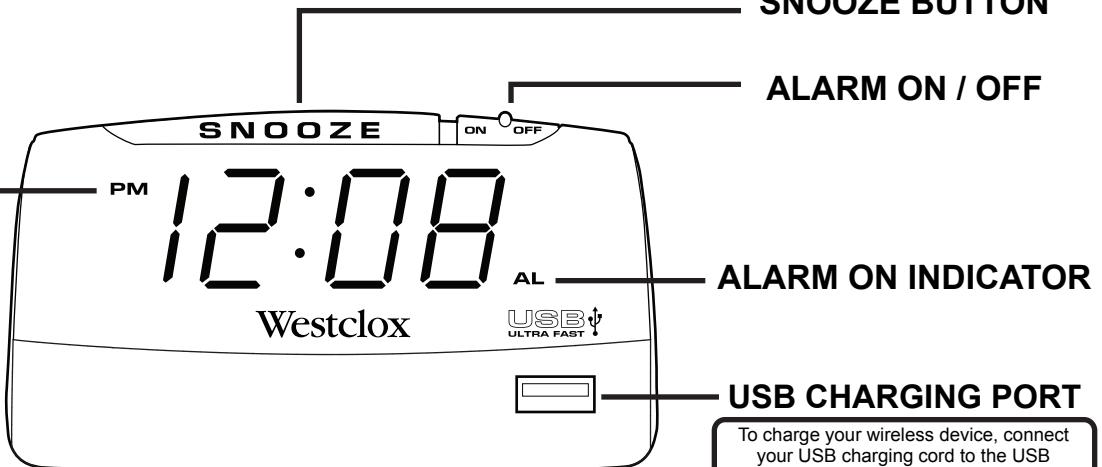

SNOOZE BUTTON

ALARM ON / OFF

ALARM ON INDICATOR

USB CHARGING PORT

To charge your wireless device, connect your USB charging cord to the USB charging port on the back of the clock.

Note:

- May not support all phones, tablets or devices.
- During a power outage, when battery backup is in use, the USB will not charge.
- USB power rating (5V 2A)

ALARM ON / OFF

To turn the alarm on, slide the alarm switch to ON. The ALARM ON indicator on the display will be illuminated.

To turn alarm Off, slide the switch to Off.

SNOOZE

Press down on the SNOOZE bar when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 8 minutes.

ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to:

Att: Repair center / NYL Holdings LLC
99 West Hawthorne Ave. Suite 202
Valley Stream, NY 11580
(516) 256-3240

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$5.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

FCC Remarks

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

□ This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

ATTENTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR

For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES A FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.