

## GETTING STARTED


 
Connect the POWER ADAPTER into the back of the clock, and the other end into a standard electrical outlet.

## NIGHT LIGHT

To turn on, Press the LIGHT button.

Press the LIGHT button again to increase the light brightness. There are 3 levels of brightness.

To turn OFF, Press the light button again.

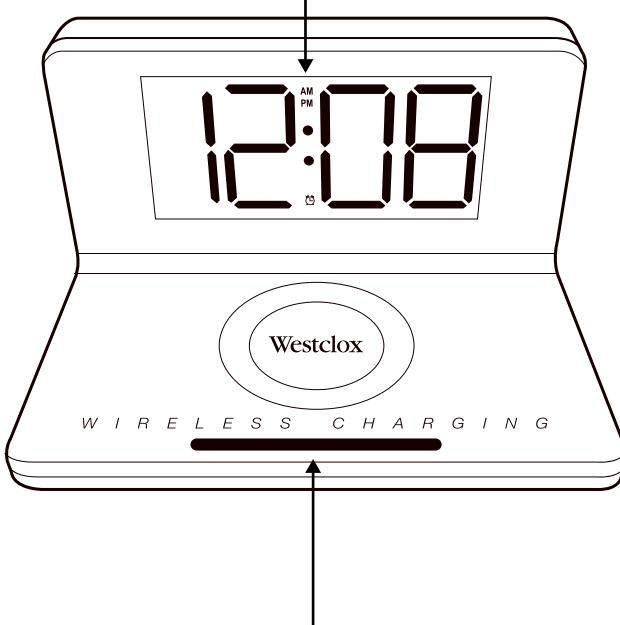

## AM / PM INDICATORS

## USB CHARGING

To charge your device, connect your USB charging cord to the USB charging port on the side of the clock.

## Note:

- May not support all phones, tablets or devices.
- During a power outage, the USB ports will NOT charge.

Note: If no settings are made within 10 seconds, the clock will automatically return to display the normal time. If this happens, you will need to start the setting procedure again from step 1.

## 12 / 24 HOUR

To switch between 12 and 24 Hour time formats, Double tap the M button.

## TIME SETTING

Note: Before setting the time, be sure the alarm is turned OFF. If the ALARM ON indicator shows on the display, Press and hold the - button for 3 seconds to turn the alarm off.

- Press the M button once, the minute digits will flash.
- Set the MINUTES using + / - buttons.
- Press the M button.
- Set the HOUR using + / - buttons.

Note: Be sure to set the hour with the correct AM or PM time period indicated on the display.

- Press the M button to save and exit.

## ALARM TIME SETTING

Note: The alarm MUST be turned ON before the alarm time can be set. To turn the alarm ON, Press and hold the + button for 3 seconds to turn the alarm on. Check for the ALARM ON indicator.


- With the alarm turned ON, Press and hold the M button for 3 seconds, the minute digits will flash.
- Set the MINUTES using + / - buttons.
- Press the M button.
- Set the HOUR using + / - buttons.

Note: Be sure to set the hour with the correct AM or PM time period indicated on the display.

- Press the M button to save and exit.

## ALARM ON/OFF

- To turn the alarm ON, Hold the + button for 3 seconds.
- The ALARM ON indicator will show on the display.
- To turn the alarm OFF, Hold the - button for 3 seconds.

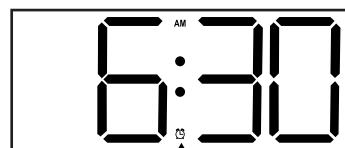

## ALARM ON INDICATOR

## USING THE SNOOZE

Tap anywhere on the clock to activate the snooze. The alarm will temporarily silence, and will sound again after 5 minutes.

Note: The alarm ON icon will flash during the 5 minutes of snooze


Note: The snooze can be used up to two times for 10 minutes of extra sleep. The alarm will automatically be ON for the next day.

To stop the alarm, Press any button once. The alarm will stay ON for the next day.

## ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to:

Att: Repair center / NYL Holdings LLC  
99 West Hawthorne Ave. (Suite 202)  
Valley Stream, NY 11580  
(516) 256-3240

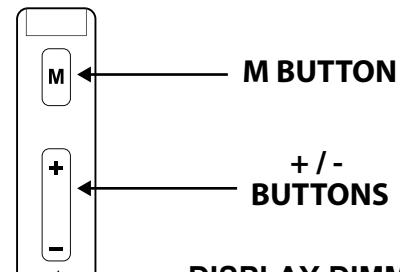

## DISPLAY DIMMER


Press the + / - buttons to adjust the display brightness. There are 4 levels of display brightness.

(BRIGHT - MEDIUM - DIM - OFF)  
The display brightness automatically dims between Midnight and 7am.

## Qi WIRELESS CHARGING INDICATOR

## Qi WIRELESS CHARGING

Place your phone on the center of the wireless charging area. The charging indicator will illuminate while your phone is charging.

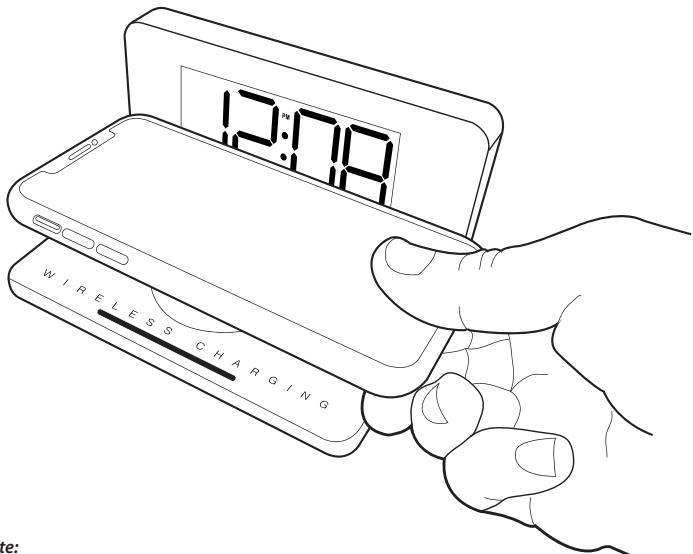

## Note:

- May not work with all 3rd party phone cases.
- When the phone is being charged your phones charging indicator will show as normal.
- For maximum charging efficiency, the phone must be aligned with the center of the charging area
- Non-wireless smartphones can be used with an Qi approved wireless charging adapter (not included).

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$7.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.