



### USB CHARGING PORT

To charge your wireless device, connect your USB charging cord to the USB charging port on the back of the clock.

#### Note:

- May not support all phones, tablets or devices.

- During a power outage, when battery backup is in use, the USB ports will NOT charge.

### OPTIONAL - BATTERY BACKUP

**#1** Remove battery cover on the back of the clock.

**#2** Insert 2 fresh alkaline “AAA” batteries. Make sure to insert the batteries matching the + / - symbols inside.

**#3** Replace battery cover.

**Note:** The battery backup feature is not necessary to operate your digital alarm clock. It is optional to have the battery backup in case of a power outage. In the event of a power failure, the battery backup will automatically continue to operate the clock and maintain time and alarm time. However to prolong battery life the time will not be displayed. When the electrical power is restored the time will be displayed. When the clock runs on the battery backup the clock may lose or gain a few minutes per hour. This may require resetting the time for precise timekeeping.

**IMPORTANT:** Extended storage can cause batteries to leak and damage the unit. Leaky batteries should be discarded immediately. Skin burns or other personal injury can result. Always dispose of batteries according to federal, state and local regulations.

#### IMPORTANT:

- Do not mix old and new batteries
- Clean the battery contacts and also those of the device prior to battery installation.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, nimh, etc) batteries.
- Remove the battery from the equipment which is not to be used for an extended period of time.
- Remove used battery promptly

**Note:** If no settings are made within 10 seconds, the clock will automatically return to display the normal time. If this happens, you will need to start the setting procedure again from step 1.

### TIME SETTING

**#1** Press the TIME button for 5 seconds, until the HOUR & MINUTES start to flash.



**#2** Press the HOUR & MINUTE buttons as needed to set the TIME



**Note:** Be sure to set the hour with the correct AM or PM time period.

**#3** Press the TIME button once, to SAVE and EXIT the time setting.



### ALARM SETTING

**#1** Press either ALARM 1 or ALARM 2 for 5 seconds until the HOUR & MINUTE digits start to flash.



**#2** Press the HOUR & MINUTE buttons as needed to set the ALARM TIME.



**Note:** Be sure to set the hour with the correct AM or PM time period.

**#3** Press the same ALARM 1 or ALARM 2 button once, to SAVE and EXIT the alarm time setting.



### ALARM ON / OFF

**#1** To turn the alarm ON, Press either ALARM 1 or ALARM 2. Press Once to Wake with Radio Press Twice to Wake to Nature Sounds. Check the Alarm ON indicators.

**Note:** The display will show the set alarm time and the ALARM ON indicator will flash next to the RADIO ON or NATURE SOUNDS indicator.

**Note:** The radio will wake you with the last used radio settings (Station and Volume).  
**When selecting Nature Sounds, the display will show 01 - 06. Press < or > to select the desired Nature sounds. Refer to Nature Sounds section.**



**#2** To turn the alarm off, press the ALARM 1 or ALARM 2 buttons as needed until the indicators turn off.

### USING THE SNOOZE

Press SNOOZE when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 9 minutes.



To stop the alarm, Press the button to stop the alarm.

**Note:** The alarm will be turned off, but will remain on to sound the next day.



### NATURE SOUNDS

**#1** Press the SOUND button once to turn on Nature Sounds.



**#2** To select a nature sound use < or > buttons to select 1 - 6 (Bird, Frogs, White Noise, Water, Thunderstorm, Rain)



**#3** Press the button once to turn OFF.



### USING THE RADIO

**Note:** The FM radio antenna is a thin black cord on the back of the clock. For best performance make sure this cord is fully extended and is not twisted.

**#1** Press the POWER ON button. The radio station frequency will show on the display.



**Note:** Pressing the POWER button will turn the radio on to the last used radio station.

**#2** Press the < or > button to select a radio station frequency.



**Tip:** Press and HOLD the TUNING < or > to quickly advance the radio station frequency.

**#3** To turn off the radio, press the POWER button.



### ADJUSTING THE VOLUME

Press VOLUME + / - to adjust the volume.



### STORE RADIO STATIONS PRESETS

**Note:** You can store up to 10 FM radio stations.

**#1** Tune to the desired radio station by pressing either TUNING < or > to select a radio station.



**#2** Press the MEMORY button for 3 seconds, the preset stations will be shown on the display.



**#3** Press either TUNING < or > to select a preset number (P01 - P10)



**#4** Press the MEMORY button once to save the radio station preset.



**Note:** To remove an already saved radio station, Another station must be stored in its place.

### LISTENING TO A PRESET RADIO STATION

With the radio turned ON, press the MEMORY button intermittently to select a radio preset (P01 - P10).



### SLEEP TO RADIO or NATURE SOUNDS

**Note:** This function allows you to listen to the radio or nature sounds while you fall asleep and will automatically shut off after the timer expires.

**#1** The Radio or Nature Sounds must be turned on to use the sleep timer.

**#2** Press the SNOOZE / SLEEP button. The display will show 90. This means the radio will turn off automatically after 90 minutes.



**#3** To reduce the sleep timer, press the SNOOZE / SLEEP to reduce the timer: 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes or OFF.

**#4** To cancel the SLEEP timer before the end of the set time, Press the button once.



### ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty.

If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to:

Att: Repair center / NYL Holdings LLC  
 99 West Hawthorne Ave. (Suite 202)  
 Valley Stream, NY 11580

(516) 256-3240

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$7.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.