SYLVANIA

Bluetooth Speaker MODEL NO: SPA962 INSTRUCTION MANUAL



The picture is only provided for reference. Please refer to the actual unit! SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license

Instructions for use

Please read all instructions carefully

Getting started

Remove the unit from the box

Remove any packaging from the product.

Place the packaging inside the box and store for safekeeping

In the box

Bluetooth Speaker USB charging cable 3.5mm audio cable Instruction Manual

Features

- -Bluetooth wireless connection functionality
- -Built-in rechargeable battery
- -Volume adjustment
- -Support USB/TF card
- -Karaoke Function
- -FM radio ,search and record
- -Aux in jack

Safety Instructions

 Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids

•Do not use the unit if it has been dropped or damaged in any

- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serous risk.
- Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use Keep the unit out of reach of children
- This product is not a toy
- Do not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
- Do not operate around water (e.g. bathroom, swimming poo
- Do not expose to excessive heat such as sunshine, fire etc
- Never immerse the unit in water or any other liquid for cleaning

Produce Diagram



- 1. DC 5V: Plug the Micro USB cable to the speaker and connect other end USB port to the power source.
- 2. Aux: Audio input jack when connect. Enable the sound source connection active devices (PC, digital media player, mobile phones and other audio-visual products).
- 3. USB slot: Used to read the Mp3 files in FAT32 format with maximum size of 32GB
- 4. TF slot: Used to read the Mp3 files in FAT32 format with maximum size of 32GB
- 5. Play/Pause: Under USB/TF/Bluetooth mode, short press for play and pause:
- 6. M: To change mode during USB/TF, Bluetooth, FM and Aux-in mode. Press and hold to switch on and
- 7. **PREV:** USB/TF/Bluetooth/FM mode: short press to move previous FM channel / track, long press to decrease the volume.
- 8. NEXT: USB/TF/Bluetooth/FM mode: short press to move next FM channel / track.long press to increase
- 9. MIC-IN: Connect with the MIC when you need. 3

INSTRUCTION FOR USE

Charging the speaker

This unit has a built in rechargeable battery. Before using it for the first time we recommend you use the USB cable to charge the battery fully Connect USB charging cable to the USB port or USB wall charger(Not included.)And connect other side to the USB charging slot of the speaker. The battery charging LED indicator illuminates while the speaker is being charged When the battery is fully charged, the red LED indicator will be OFF.

Pairing your device with Bluetooth speaker Pairing the Bluetooth with Bluetooth devices (phone or music device)

Turn the speaker ON and the Bluetooth mode will be on automatically, you will hear a tone.

Place the speaker and Bluetooth device (phone or music device) so that they are no further than 20 feet apart:

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the pairing name "Sylvania SP962" from the list of available Bluetooth devices.

If required, enter the password 0000 to confirm to

Once paired successfully, you will hear a voice indicating pairing successful. You can now start to use the speaker.

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the devices Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turns on. If you want to pair it with a new device, please turn off your last Bluetooth device(phone or music device) then use your new device to search and select the pairing name.

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your devices user manual for further information.

11

Function Summary

Listening to Music

Once the speakers are paired with your device you can stream music wirelessly through the portable speaker, Select the track you wish to listen to and it will be streamed to your Bluetooth speaker, and you can use your dévice to control the Volume and skip tracks.

USB/ TF card playback

After the speaker is turned on, insert the USB/TF card to the slot will start to play the music automatically, and the Bluetooth mode will be disconnect

After the speaker is turned on, pressing the M button can switch to Aux mode and connect one end of the 3.5mm audio cable into AUX in jack, the other end of the cable to connect MP3/Smart phone / iPhone to play music.

After pressing M button to change to FM radio status, press I button to search channel automatically. This operation will scan all FM stations and pre-record them to memory. The scan procedure will take several minutes to complete and should not be interrupted.

Once completes, short time press the "◄◄" or the "▶ı" button to switch to previous or next record frequency.

KARAOKE function

Inserting the microphone into speaker MIC port Note: It's not available in FM mode.

Please Note

- Not all mobile phones support all the functions listed above Please refer to your cell phones user's manual for further information
- Certain functions and indication tones may vary depending on your mobile phone.

Cleaning & Maintenance

Turn OFF the speaker if it is left unattended and before cleaning

Never immerse the speaker into water and please use a dry cloth for Cleaning.

•Turn OFF the power when you not in use, clean and store safety.

Specifications

Bluetooth specification	Bluetooth V4.2
Operating distance	10 meters(max.)
Speaker drive size	2*4 inch
Speaker power	2*5W
Frequency response	100Hz-20KHz
Signal to noise ratio	≧85dB
Charging time	About 3 hours

Note: Battery life &charging time may vary based on usage & types of devices used. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in aparticular installation. If this equipment does cause harmful interference

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna. Increase the separation between the equipment

-Connect the equipment into an outlet on a circuit different from that towhich the receiver is connected -Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules Operation is subject to the following two conditions:

this device may not cause harmful interference,

(2) this device must accept any interference received including interference that may cause undesired operation.

For service assistance and product information please call: 1-800-968-9853 Curtis International Ltd 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than singlefamily household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply

For faster service, locate the model, type, and serial numbers on your appliance.

展开尺寸/330.6*75mm/80g书纸/单色/正反双面印刷