


model no. 046-0509-4

Mastercraft®

GARAGE DOOR OPENER PROGRAMMABLE LCD WALL CONSOLE

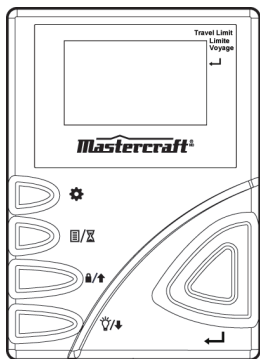

IMPORTANT:

Before using your wall console, read and understand this owner's guide.

INSTRUCTION MANUAL


2

model no. 046-0509-4 | contact us 1-800-689-9928


OVERVIEW

- 1 Programming
- 2 Display
- 3 Enable/Disable Lock Timer/
Manually Lock/Up
- 4 Light On/Off/Down
- 5 Open/Close Door (Push
Button)/Set

LCD DISPLAY

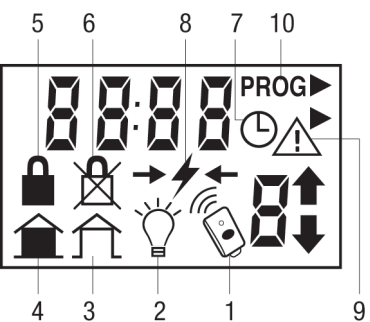


- 1 Learn or Erase Remote Control
- 2 Light Bulb is Turned On (Manually)
- 3 Door Open
- 4 Door Close
- 5 Lock Enabled (Manually or Lock Timer)
- 6 Terminate Lock Timer
- 7 Clock or Time Setting
- 8 Safety Beam Sensor Activated
- 9 Operation Failure
- 10 Programming Mode

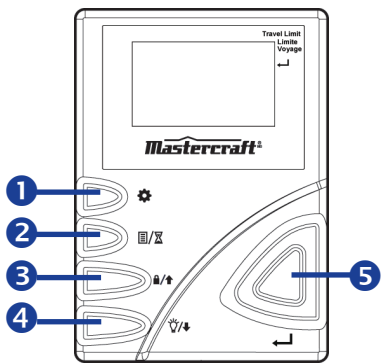


3

Mastercraft®


- 1 Secure the
mounting bracket
with two screws

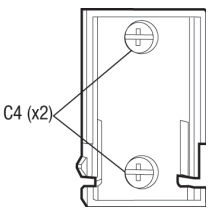

- 2 Slide the wall console
onto the mounting
bracket until you
hear a click.

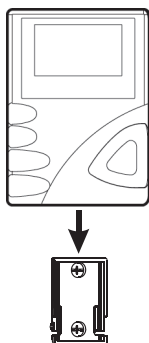

- 3 Mount the user safety
instruction label next
to the wall console
using staples or tacks.

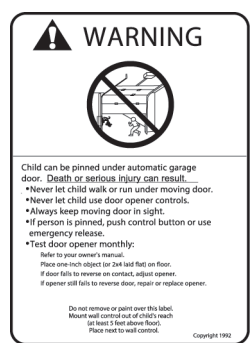



WARNING:

- Wall console must be installed within sight of the garage door, out of reach for children, at a minimum height of 5' (1.5 m), and away from all moving parts of door.
- Be sure power is not connected before installing the wall button.
- Wall console should only be activated when door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Always keep garage door in sight until completely closed. Never permit anyone to cross path of closing garage door.

4

model no. 046-0509-4 | contact us 1-800-689-9928

- 4 Route the wire up the wall and across the ceiling to the opener with wire holders.

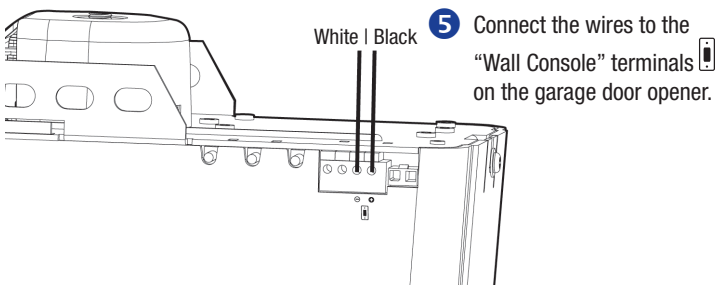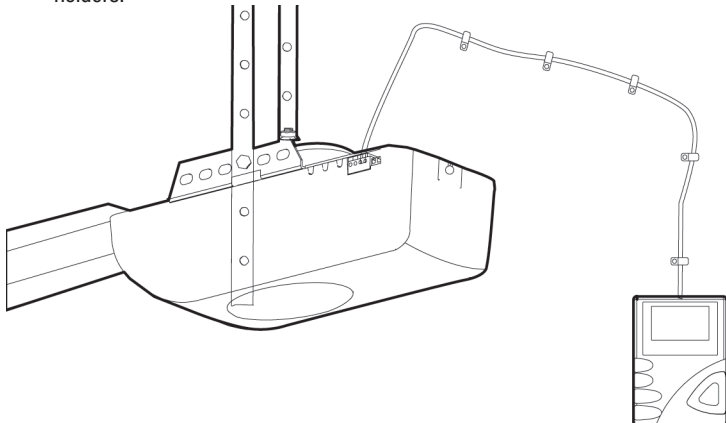

5


model no. 046-0509-4 | contact us 1-800-689-9928

While programming, the and buttons can be used to move the door as needed.


ACTION

1. Connect the opener to an approved power source. The dot in the LED display stays on.

LCD DISPLAY

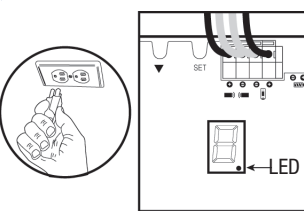

2. Press and hold button for 5 seconds until the LCD display shows the number "1" and up and down arrows are flashing.
3. Press the button until the door is in fully open position.
4. Press the button to confirm the door position.
5. The LCD display will show the number "2".
6. Press the button until the door is in fully closed position.
7. Press the button again to confirm.
8. The LED light will flash 3 times when the travel limit settings are completed.

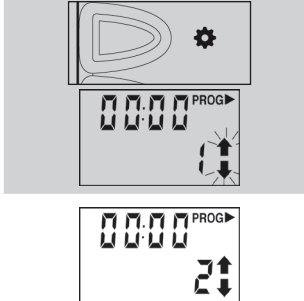

6

Mastercraft®

7

model no. 046-0509-4 | contact us 1-800-689-9928

ACTION


17. The LCD display will flash the remote icon.

LCD DISPLAY



18. **Program a Remote:** Within 30 seconds, press any button on the remote that you would like to program to the opener.

Program a Wireless Keypad: Within 30 seconds, activate the keypad by entering: (A) Pin code plus # [PIN#] for single door operation. (B) Pin code plus [#] plus [door number] for multiple door operation.

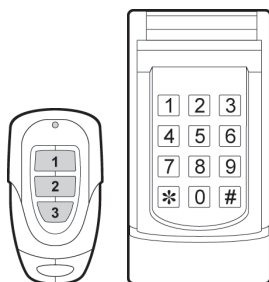

19. The garage door opener will beep if remote is successfully programmed and the flashing remote icon will change to solid.
20. If you want to erase all the remotes, press and hold the button for 5 secs until you see "E."
21. If you need to program additional remote, press button, then refer to step 18. After you've programmed all remotes, press button.



8

Mastercraft®

ACTION

22. The LCD display will show the time setting.
23. Press / buttons to set the clock to the current time; then, press to confirm.
24. The LCD display will show the start lock time setting. (To skip this setting, press button twice.
25. Press / button to set the hour and press to confirm.
26. Press / button to set the minutes and press to confirm.
27. The LCD display will show the end lock time setting.
28. Press / button to set the hour and press to confirm.
29. Press / button to set the minutes and press to confirm.
30. On-ground programming is completed

LCD DISPLAY




9

model no. 046-0509-4 | contact us 1-800-689-9928

ACTION

1. Press and hold button for 5 seconds.
2. Press / buttons to set the auto close timer.
3. Selection:
"OFF" = Disarm
"03" = 3 mins
"10" = 10 mins
"30" = 30 mins
Press to confirm the setting.
4. The wall console will return to standby mode and display the current time.

LCD DISPLAY

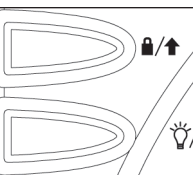

10

model no. 046-0509-4 | contact us 1-800-689-9928

TROUBLESHOOTING

If the LED indicator on the wall console is not glowing steadily after installation, check for:

- Electric power to the opener.
- A short in the wires. These can occur at the staples or at the opener connections.
- Incorrect wiring between sensor and opener.
- A broken wire.
- Check alignment

WARRANTY

This Mastercraft product carries a 1 (one) year LIMITED warranty against defects in workmanship and materials. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported for
Mastercraft Canada Toronto, Canada M4S 2B8