



7' INDOOR NOELLE FRASER UPSWEPT TREE

PRODUCT NO. 051-5314-2

OPERATING INSTRUCTIONS TOLL



FREE: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

IMPORTANT INFORMATION

IMPORTANT

- For indoor use only.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
- Place on a level, hard, flat surface. Do not place where the tree is likely to tip or wobble due to uneven flooring or thick carpeting.
- Do not use candles on the tree.
- After assembling the tree and adding decorations, make sure the tree is stable. If tree is not stable, shift the weight of the decorations, and use support wires to walls and/or window frames (make sure they are secure also).
- Do not overload extension cords or power strips; see ratings on those devices and check the rating label of the tree for compatibility.
- Do not install near fountains, bathtubs, sinks, or other wet areas.
- Insert lighting string plugs fully into extension and extension cord plug fully into its receptacle.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.



GETTING STARTED

Please do not throw away any packing material until all parts are verified as present.

INSTALLATION & OPERATION

INSTRUCTIONS

1. Before you start to assemble your tree, choose a location near a wall outlet. Assemble the tree stand and place on a level surface.
2. Pull apart the legs of the stand so that they are "X" shaped.
Lock the stand in position with the single eye bolt on the outside metal tab.
3. Screw three eye bolts through the hole on the inside metal tab.
4. Carefully insert the bottom section (C) of the tree into the assembled stand. Make sure the pole is firmly inserted into stand and turn screws so they touch tree trunk. Stand tree up and straighten by adjusting screws in or out then tighten screws.
5. Insert section (B) into the bottom section (C), insert section (A) into section (B). This tree is equipped with the new Instant Pole Connection technology. If the pole doesn't go in easily, do not force, but lightly and slowly turn the pole so that the correct orientation is lined up for easy insertion.
6. This tree has memory wires and has been pre-shaped for your convenience. Minor shaping is still needed. Shape the branches by working from the bottom of the tree upwards. Fan out the tips in a pattern of one to the right, one to the left, and one to the centre of the main stem. Tips at the centre position should be alternately placed so that they do not line up one after the other. Repeat pattern for each branch.
7. Plug the power adapter into the wall outlet. Turn on the lights by lightly tapping the foot pedal on/off switch. Your entire tree should now be lit.
8. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate and enjoy.

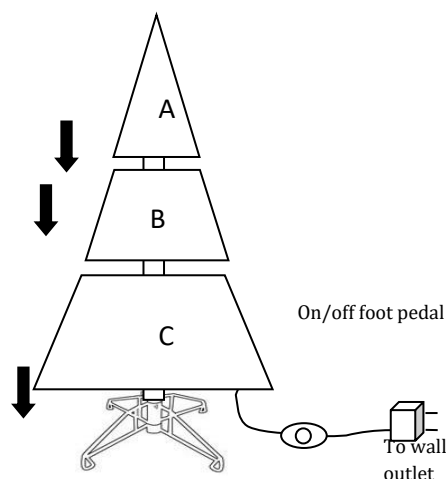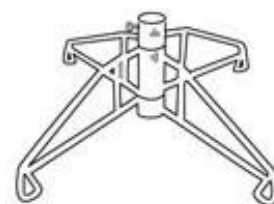

Top view



Side view



TROUBLESHOOTING

If the lights do not work:

1. Check whether the cord is properly plugged into the outlet.
2. Be sure there is power to the outlet.
3. Check whether all plugs within the tree are securely connected.

STORAGE

- (1) Unplug cord from the wall outlet and remove all ornaments and decorations.
- (2) Gently lift off the top and middle sections, and remove the bottom section from the tree stand.
Carefully place the tree in its box and tape it shut. DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 38°C (100°F).

SAVE THESE INSTRUCTIONS

CAUTION: To reduce the risk of fire and electric shock:

Do not mount or support wires in a manner that can cut or damage wire insulation.

USE AND CARE INSTRUCTION

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

WARRANTY

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 051-5314-2

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

7' INDOOR NOELLE FRASER UPSWEPT TREE

I CANVAS™