

9' INDOOR HARMONY PINE TREE

PRODUCT NO. 051-5646-2

OPERATING INSTRUCTIONS



TOLL FREE: 1-888-670-6684


IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

TREE ASSEMBLY INSTRUCTIONS


Set up and light up your tree in less than 10 minutes.
Carefully follow the instructions below on how to quickly and easily set up your new tree.

1. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
2. First assemble the tree stand and place on a level surface. **(See Fig. A.)**

 Fig. A — Tree Stand Assembly

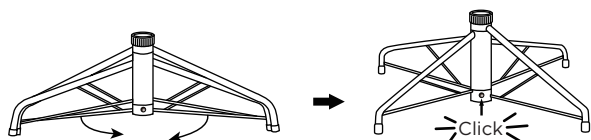


 Swivel the legs of the stand until they snap into position. (The legs should be evenly spaced once this step is complete.) Place the tree stand on a level surface.

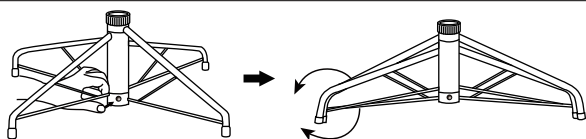

To close the stand, press the metal button and fold the legs together.

 Fig. B — Tree and Light Assembly

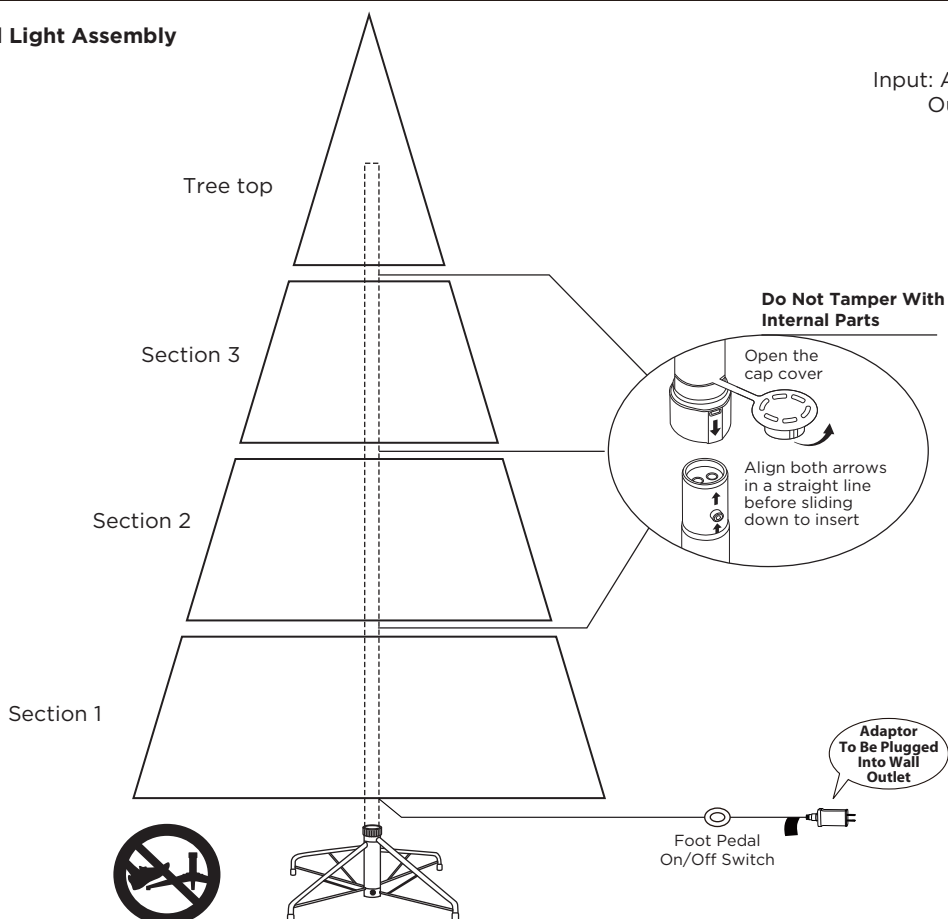

Tree Electrical Rating (For Indoor Use Only.)

Input: AC 120 V, 60 Hz, 0.38 A
Output: DC 28 V 0.643 A

- Each tree section is numbered with a sticker. Please identify all sections before assembling.
- Assemble the tree from the bottom to the top. Start with the bottom section. Remove the protective cap before inserting it into the already pre-assembled stand. Before proceeding to the next step, make sure the pole is firmly inserted and secured into the stand.
Note: Do not step on the tree stand legs during the setup. This may deform the tree stand and may result in an unbalanced tree.
- Continue by inserting the upper tree section(s) into the lower section(s) until inserting the tree top.
- Allow branches to fall into place or gently pull up and out. When adjusting branches, be sure that all wires are free of branch hinges.
- Insert green-labelled plug into the wall outlet. **(See Fig. B.)** Your entire tree should now be lit.
- Begin to shape the branches and tips, working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the centre of the main stem. **(See Fig. C.)**

Fig. C

Top view



Side view



- After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your pre-lit tree is now complete and ready to be decorated.

STORAGE INSTRUCTIONS

- Unplug cord from the wall outlet first and then remove all ornaments and decorations.
- Disassemble the tree from the top to the bottom. Start with the tree top: gently lift straight up to remove from section below and fold all branches toward the pole.
- In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
- Continue by gently lifting straight up each section(s) from the section below, and fold all branches toward the pole until the bottom section is removed from the tree stand. Put the protective cap on the poles to avoid damaging the internal parts. **(See Fig. D.)**
- Carefully place all tree sections into shipping box and tape it shut.
- When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.
- Keep out of reach of pets and children.

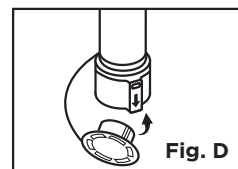 


Fig. D

TROUBLESHOOTING

If the tree does not illuminate:

- Please check to make sure that all plugs are properly connected and that the power cord is plugged into the wall outlet. Refer to assembly guide for instructions. Try stepping on the ON/OFF button of the foot pedal.
- Turn the poles gently to make sure pole-to-pole connections are secure.
- Check for loose, broken or missing light bulbs, and replace as needed.
- When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.

Loose Hinge Pin

- Extra hinge pins are included for repairing the hinges. Place the branch into the slot of the bracket.
- Insert a new hinge pin through the hole and secure using the retainer washer. **(See Fig. E.)**

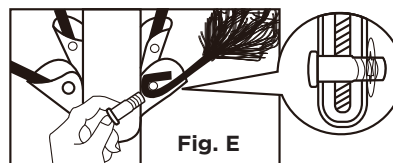 


Fig. E

CAUTION

1. To reduce the risk of fire and electric shock:
 - a) Use only the power supply that was provided with this product;
 - b) Do not install on trees having needles, leaves or branch covering of metal or materials which look like metal; and
 - c) Do not mount or support strings in a manner that can cut or damage wire insulation.
2. Use only the adaptor supplied with this product. Using a different adaptor will damage the lights and may cause fire or electric shock hazards.
3. Ensure the ladder is securely fixed and is not slippery.
Be cautious when climbing up and down the ladder.



Be cautious
when using ladder
to set up tall trees

SPARE PARTS

Included with each tree are hinge pins/washers. Included with pre-lit trees are spare bulbs.
If extra parts are needed, please contact our customer service centre.

WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by:

Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

DATE CODE: 21825